

Rittal – The System.

Faster – better – everywhere.

Enclosure cooling unit



3302.xxx
3302.3xx
3303.xxx
3304.xxx
3305.xxx

3328.xxx
3329.xxx
3332.xxx
3361.xxx
3366.xxx

Assembly and operating instructions

Contents

EN

Contents

| | | | | | |
|-------|---|----|--------|---|----|
| 1 | Notes on documentation | 3 | 6 | Operation | 16 |
| 1.1 | CE labelling | 3 | 6.1 | Control using the Basic controller | 16 |
| 1.2 | Storing the documents | 3 | 6.1.1 | Properties | 16 |
| 1.3 | Symbols used in these operating instructions | 3 | 6.1.2 | Operating and error display | 17 |
| 1.4 | Other applicable documents | 3 | 6.1.3 | Test mode with the Basic controller | 18 |
| 2 | Safety notes | 3 | 6.1.4 | Setting the temperature | 18 |
| 3 | Device description | 4 | 6.1.5 | Resetting the Basic controller | 18 |
| 3.1 | TÜV-tested output measurement to DIN EN 14511 | 4 | 6.2 | Control using the e-Comfort controller..... | 18 |
| 3.2 | Functional description | 4 | 6.2.1 | Properties | 19 |
| 3.2.1 | How it works | 4 | 6.2.2 | Eco mode | 19 |
| 3.2.2 | Control | 5 | 6.2.3 | Launching test mode | 19 |
| 3.2.3 | Bus mode (e-Comfort controller only) | 5 | 6.2.4 | General information about programming | 20 |
| 3.2.4 | Safety devices | 5 | 6.2.5 | Editable parameters | 21 |
| 3.2.5 | Condensation | 5 | 6.2.6 | Programming overview | 22 |
| 3.2.6 | Filter mats | 5 | 6.2.7 | Defining system messages for evaluation | 23 |
| 3.2.7 | Door limit switch | 5 | 6.2.8 | Setting the master/slave identifier | 24 |
| 3.2.8 | Additional interface X3 | 6 | 6.2.9 | Evaluating system messages | 24 |
| 3.3 | Proper use, foreseeable misuse | 6 | 6.2.10 | Reset the e-Comfort controller | 26 |
| 3.4 | Scope of supply | 6 | 7 | Inspection and maintenance | 26 |
| 4 | Assembly and connection | 6 | 7.1 | Compressed air cleaning 3304.xxx, 3305.xxx | 26 |
| 4.1 | Choosing the installation site | 6 | 7.2 | Compressed air cleaning 3328.xxx, 3329.xxx, 3332.xxx | 30 |
| 4.2 | Notes on assembly | 6 | 7.3 | Installation instructions for NEMA 4X devices | 35 |
| 4.2.1 | General | 6 | 8 | Storage and disposal | 36 |
| 4.2.2 | Layout of the electronic components in the enclosure | 7 | 9 | Technical details | 36 |
| 4.3 | Fitting the cooling unit | 7 | 9.1 | Technical specifications..... | 36 |
| 4.3.1 | Making the cut-outs | 8 | 9.2 | Performance diagrams | 43 |
| 4.3.2 | External mounting of the cooling unit | 8 | 10 | List of spare parts | 44 |
| 4.3.3 | Partial internal mounting of the cooling unit | 8 | 11 | Appendix | 47 |
| 4.3.4 | Full internal mounting of the cooling unit | 9 | 11.1 | Cut-out and hole sizes | 47 |
| 4.4 | Connecting the condensate discharge | 10 | 11.1.1 | Dimensions for external mounting | 47 |
| 4.5 | Notes on electrical installation | 11 | 11.1.2 | Dimensions for partial internal mounting | 50 |
| 4.5.1 | Connection data | 11 | 11.1.3 | Dimensions for full internal mounting | 51 |
| 4.5.2 | Overvoltage protection and supply line load | 11 | 11.2 | Electrical wiring plan..... | 52 |
| 4.5.3 | Three-phase devices | 11 | | | |
| 4.5.4 | Door limit switch | 11 | | | |
| 4.5.5 | Notes on the flicker standard | 11 | | | |
| 4.5.6 | Potential equalisation | 12 | | | |
| 4.6 | Making the electrical connection | 12 | | | |
| 4.6.1 | Bus connection (only when interconnecting several units with a Comfort controller) | 12 | | | |
| 4.6.2 | Connection X3 for serial interface | 12 | | | |
| 4.6.3 | Mounting external transformer | 12 | | | |
| 4.6.4 | Installing the power supply | 13 | | | |
| 4.7 | Finalising assembly | 15 | | | |
| 4.7.1 | Installing the filter media | 15 | | | |
| 4.7.2 | Fitting the cooling unit | 15 | | | |
| 4.7.3 | Setting the filter mat monitor (only with e-Comfort controller) | 16 | | | |
| 5 | Start-up | 16 | | | |

1 Notes on documentation

1.1 CE labelling

Rittal GmbH & Co. KG confirms the conformity of the cooling unit with the European Union's Machinery Directive 2006/42/EC and EMC Directive 2014/30/EC. A corresponding declaration of conformity has been issued. This can be found at the end of this document, or on the Rittal homepage.



1.2 Storing the documents

The assembly and operating instructions as well as all other applicable documents are an integral part of the product. They must be issued to everyone who works with the unit and must always be available and on hand for operating and maintenance personnel.

1.3 Symbols used in these operating instructions

The following symbols are used in this documentation:



Danger!

A dangerous situation in which failure to comply with the instructions will result in death or severe injury.



Warning!

A dangerous situation which may cause death or serious injury if the instructions are not followed.



Caution!

A dangerous situation which may lead to (minor) injuries if the instructions are not followed.



Note:

Important notices and indication of situations which may result in material damage.

- This symbol indicates an "action point" and shows that you should perform an operation or procedure.

1.4 Other applicable documents

Assembly and operating instructions in paper and digital format are available for the unit types described here. We cannot accept any liability for damage associated with failure to observe these instructions. Where applicable, the instructions for any accessories used also apply.

2 Safety notes

Please observe the following general safety notes when assembling and operating the unit:

- Assembly, installation and servicing may only be performed by properly trained specialists.
- Screw the enclosure to the floor to prevent it from tipping over when the cooling unit is installed.
- Do not obstruct the air inlet and air outlet of the cooling unit inside and outside the enclosure (see section 4.2.2 "Layout of the electronic components in the enclosure").
- To ensure problem-free opening and closing of the enclosure door, use a ride-up door roller (refer to the accessories in the Rittal Catalogue). This raises the door slightly and balances out the weight of the cooling unit, to prevent buckling of the door and associated seal problems.
- The heat loss of the components installed in the enclosure must not exceed the useful cooling power of the cooling unit.
- Cooling units with item numbers: 3303.xxx, 3361.xxx, 3304.xxx, 3305.xxx, 3328.xxx, 3329.xxx and 3332.xxx must be transported in an upright position and protected from tipping over.
- Units with item numbers 3302.xxx and 3366.xxx must be transported lying flat.
- Shipping braces must be used when transporting a unit that has already been mounted (on the enclosure). A wooden structure made from square timbers or boards to support the cooling unit at the bottom (see fig. 1) is suitable for this purpose. The pallet should be big enough to prevent the enclosure and cooling unit overturning. If the cooling unit is mounted on a door, ensure the door is kept closed during transport.
- Use only original spare parts and accessories
- Do not make any changes to the cooling unit other than those described in these instructions or associated instructions.
- Risk of burns! On cooling units with automatic condensate evaporation, the surface of the thermal element will get very hot during operation, and will remain so for some time afterwards.
- The mains connector of the cooling unit must only be connected and disconnected with the system de-energised. Connect the protective device specified on the rating plate.

3 Device description

EN

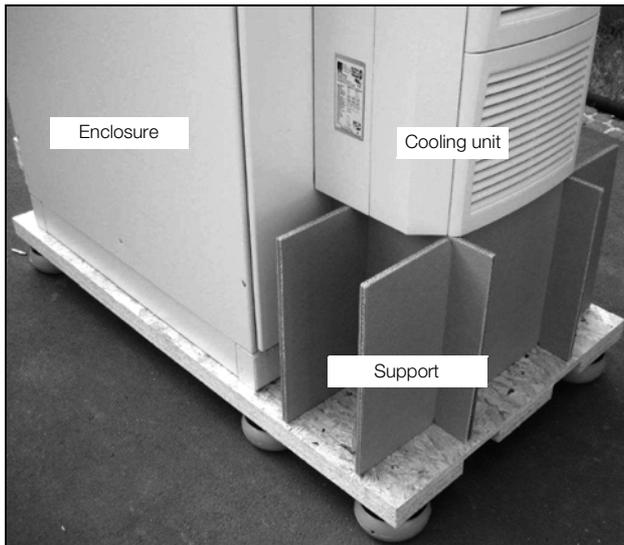


Fig. 1: Transporting an enclosure/cooling unit combination

3 Device description

Depending on the model chosen, your cooling unit may vary in appearance from the illustrations contained in these instructions. However, the functions are identical in principle.

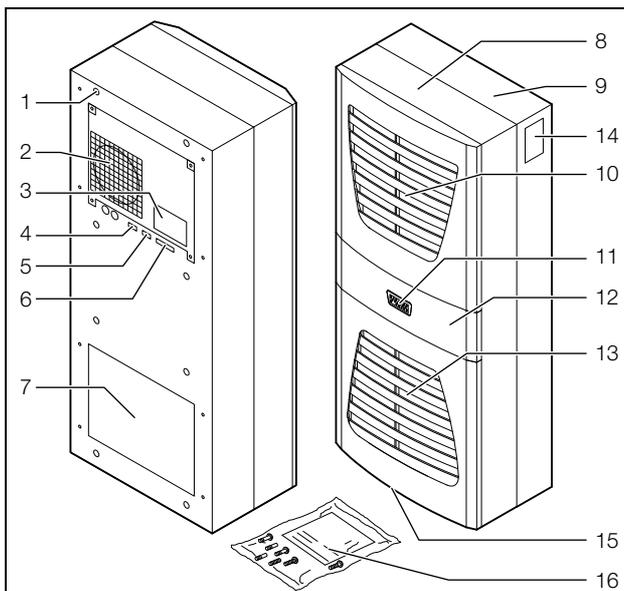


Fig. 2: Device description

Key

- 1 Blind rivet nut
- 2 Evaporator fan
- 3 Electrical wiring plan
- 4 X2 master-slave connection
- 5 X3 optional serial interface
- 6 X1 terminal strip
- 7 Air outlet hole
- 8 Front half of the enclosure
- 9 Rear half of the enclosure
- 10 Louvred grille for air outlet
- 11 Display
- 12 Infill panel
- 13 Louvred grille for air inlet
- 14 Rating plate

- 15 Condensate discharge
- 16 Dispatch bag

3.1 TÜV-tested output measurement to DIN EN 14511

All TopTherm cooling units in the output range from 300 to 4000 W are tested to the latest EN 14511-1-4:2013-12 standard by independent test institute TÜV Nord. This means you have peace of mind about the design of the climate control solution and you can be sure you are getting the performance you are paying for.

3.2 Functional description

3.2.1 How it works

The cooling unit (compression refrigeration system) comprises four main components (see fig. 3): the evaporator (1), the refrigerant compressor (2), the condenser (3), and the control or expansion valve (4), which are connected by suitable pipework. This circuit is filled with a readily boiling substance, the refrigerant. The refrigerant R134a (CH₂FCF₃) is chlorine-free. Its Ozone Depletion Potential (ODP) is 0, making it very eco-friendly. A filter dryer (5) which is integrated into the hermetically sealed cooling circuit provides effective protection against moisture, acid, dirt particles, and foreign bodies within the cooling circuit.

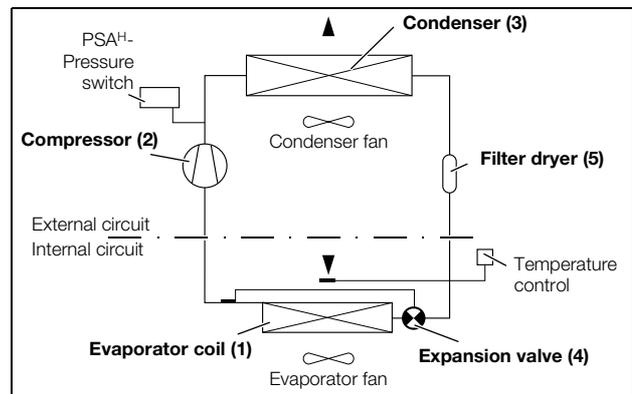


Fig. 3: Cooling circuit

In the evaporator coil (1), the liquid refrigerant is converted to a gaseous state. The energy needed for this purpose is taken from the enclosure air in the form of heat, which has the effect of cooling the enclosure air. In the compressor (2), the refrigerant is heavily compressed, so that it achieves a higher temperature inside the condenser (3) than the ambient air. This means that excess heat may be emitted to the ambient air via the surface of the condenser, as a result of which the temperature of the refrigerant drops and it is converted back into liquid. It is re-injected into the evaporator coil via a thermostatic expansion valve (4), which causes it to cool down further, and is then once again able to absorb the energy from the enclosure air in the evaporator coil. The whole cycle begins again.

3.2.2 Control

Rittal enclosure cooling units are fitted with a controller for setting the functions of the cooling unit. Depending on the design, this is either a Basic controller (operating status display via LED) or an e-Comfort controller (display plus extended functions, see section 6 "Operation").

3.2.3 Bus mode (e-Comfort controller only)

The serial unit interface X2 allows you to create a bus connection with up to ten cooling units using the master-slave cable (shielded, four-wire cable, Model No. 3124.100). This allows you to implement the following functions:

- Parallel unit control (the cooling units in the network can be switched on and off simultaneously)
- Parallel door status message ("door open")
- Parallel collective fault message

Data is exchanged via the master-slave connection. During commissioning, assign an address to each unit that also includes the identifier "master" or "slave".

3.2.4 Safety devices

- In the cooling cycle, the cooling units (with the exception of type 3302.xxx) have a tested pressure switch to EN 12 263 which is set to maximum PS (permissible pressure); this operates via an automatic reset device whenever the pressure drops again
- Temperature monitoring prevents the evaporator coil from icing over. If there is a risk of icing, the compressor switches itself off and automatically switches itself back on again at higher temperatures
- The refrigerant compressor and the fans are equipped with thermal winding shields to protect against excess current and excess temperatures
- In order to allow a reduction of pressure inside the compressor and hence a safe restart, once it has been switched off (e.g. upon reaching the set temperature via the door limit switch function or via de-energising), the device will switch back on with a delay of 180 seconds
- The device has floating contacts on the connection pins (terminals 3 – 5), via which system messages from the device may be polled, e.g. using a PLC (1 x change-over contact Basic controller, 2 x normally open contacts e-Comfort controller)

3.2.5 Condensation

At high levels of humidity and low temperatures inside the enclosure, condensation may form on the evaporator coil.

The cooling units (except 3302.xxx, 3303.xxx and 3361.xxx) have automatic, electric condensate evaporation. The thermal component used for this purpose is based on self-regulating PTC technology. Condensate arising on the evaporator coil is collected in a tank in the external circuit of the cooling unit, and partially evaporated via the airflow. When the water level rises, the water

enters the PTC thermal component and is evaporated (through-flow heater principle). The water vapour streams out of the cooling unit with the airflow from the external fan.

The PTC thermal component is permanently connected and has no switchpoint. It is protected against short-circuits with miniature fuses (F1.1, F1.2). If the fuse has tripped, any condensation is drained off via the safety overflow.

For unit types 3302.xxx, 3303.xxx and 3361.xxx, the condensate is routed downwards out of the unit via a drain pipe on the evaporator coil divider panel. For this purpose, a hose must be connected to the condensate nozzle (see section 4.4 "Connecting the condensate discharge"). External condensate evaporators are available as accessories for these unit types (refer also to the accessories in the Rittal Catalogue).

3.2.6 Filter mats

The entire cooling unit condenser is covered with a dirt-repelling, easy-to-clean RiNano coating. In many applications, therefore, the use of filter media is unnecessary, particularly with dry dusts.

For dry, coarse dust and lint in the ambient air, we recommend installing an additional PU foam filter mat (available as an accessory) in the cooling unit. Depending on the incidence of dust, you will need to replace the filter mat from time to time.

For air containing oil condensate, we recommend the use of metal filters (also available as an accessory). These may be cleaned with suitable detergents and reused.

Function of the filter mat monitor (with e-Comfort controller only):

Dirt on the filter mat is automatically determined by measuring the temperature difference in the external circuit of the cooling unit. As the level of filter mat soiling increases, the temperature difference will increase. The setpoint value of the temperature difference in the external circuit adapts automatically to the relevant operating points in the performance diagrams. Hence there is no need to readjust the setpoint value for different unit operating points.

3.2.7 Door limit switch

The cooling unit may be operated with a floating door limit switch connected. The door limit switch is not included with the supply (available as an accessory, Model No. 4127.010).

The door limit switch function causes the fans and the compressor in the cooling unit to be switched off after approximately 15 seconds when the enclosure door is opened (contacts 1 and 2 closed). This prevents the formation of condensation inside the enclosure while the enclosure door is open. In order to prevent damage to the unit, it is equipped with an ON delay: The evaporator fan cuts back in with a delay of approximately 15 seconds after the door has been closed, while the condens-

4 Assembly and connection

er fan and compressor switch on after approximately 3 minutes.



Note:

- No external voltage may be applied to the door contacts (terminals 1 and 2).
- For cooling units with basic control, the evaporator fan continues to run even when the door is open.

3.2.8 Additional interface X3



Note:

The electrical signals at the interface are of an extra-low voltage (not extra-low safety voltages to EN 60 335).

An additional interface card may be connected to the 9-pole SUB-D connector X3 in order to incorporate the cooling unit into higher-level monitoring systems (available as an accessory, interface card Model No. 3124.200).

3.3 Proper use, foreseeable misuse

The cooling unit is only intended for cooling connected enclosures. Any other use is not permitted.

- The unit must not be installed and operated in locations which are accessible to the general public (see DIN EN 60335-2-40, paragraph 3.119).
- The unit is designed solely for stationary use.

The cooling unit is state of the art and built according to recognised safety regulations. Nevertheless, improper use can pose a threat to the life and limb of the user or third parties, or result in possible damage to the system and other property.

Consequently, the cooling unit must only be used properly and in a technically sound condition! Any malfunctions which impair safety should be rectified immediately.

Proper use also includes the observance of the documentation provided, and compliance with the inspection and maintenance conditions.

Rittal GmbH & Co. KG is not liable for any damage which may result from failure to comply with the documentation provided. The same applies to failure to comply with the valid documentation for any accessories used. Inappropriate use may be dangerous. Examples of inappropriate include:

- Use of the cooling unit over long periods with the enclosure open.
- Use of impermissible tools.
- Improper operation.
- Improper rectification of malfunctions.

- Use of accessories not approved by Rittal GmbH & Co. KG.

3.4 Scope of supply

The unit is supplied in a packaging unit in a fully assembled state.

Please check the scope of supply for completeness.

| Qty. | Description |
|--------|---------------------------------------|
| 1 | Enclosure cooling unit |
| 1 | Dispatch bag: |
| 1 | - Assembly and operating instructions |
| 1 | - Self-adhesive tape |
| 1 | - Connector X1 |
| 4 – 10 | - Grub screws |
| | - Nuts, washers |
| 1 | Drilling template |

Tab. 1: Scope of supply

4 Assembly and connection

4.1 Choosing the installation site

When choosing the installation site for the enclosure, please observe the following:

- The site for the enclosure, and hence the arrangement of the cooling unit, must be carefully selected so as to ensure good ventilation (clearance between units and clearance between the unit and the wall must be at least 200 mm in each case).
- The cooling unit must be installed and operated in a vertical position (maximum deviation: 2°).
- The installation site must be free from excessive dirt, aggressive ambient conditions and moisture.
- The ambient temperature must be within the limits specified on the rating plate.
- It must be possible to fit a condensate discharge (see section 4.4 "Connecting the condensate discharge").
- The mains connection data as stated on the rating plate of the unit must be guaranteed.

4.2 Notes on assembly

4.2.1 General

- Check the packaging carefully for signs of damage. Traces of oil on damaged packaging are an indication of refrigerant loss and leakages. Any packaging damage may be the cause of a subsequent functional failure.
- The enclosure must be sealed on all sides (IP 54). Increased condensation will occur if the enclosure is not airtight.
- In order to avoid excessive condensation inside the enclosure, we recommend installing a door limit switch (e.g. 4127.010) which deactivates the cooling unit when the enclosure door is opened (see section 3.2.7 "Door limit switch").

4.2.2 Layout of the electronic components in the enclosure



Note:

Risk of condensation!

When arranging the electronic components inside the enclosure, please ensure that the cold airflow from the cooling unit is not directed at active components. Please also ensure that the cold airflow is not directed at the warm exhaust airflow from active components such as converters. This may lead to an air short-circuit and therefore prevent adequate climate control, or may even cause the cooling unit's internal safety devices to cease cooling operation.

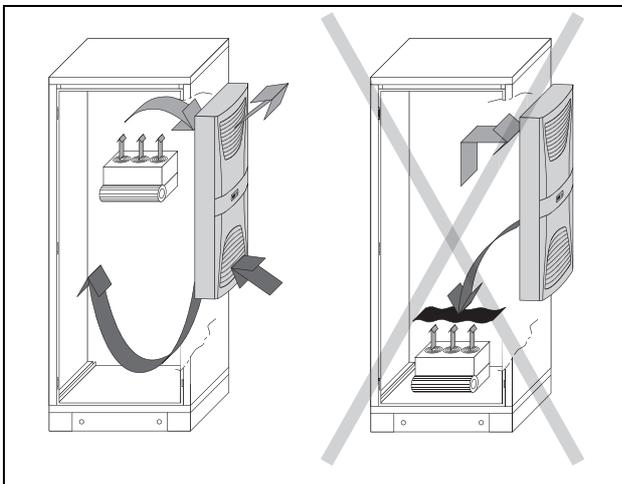


Fig. 4: Never direct the cold airflow at active components

Air diversion components are available as accessories – please refer to the Rittal Catalogue.

It is important to ensure even air circulation inside the enclosure. Under no circumstances should air inlet and outlet openings be obstructed, otherwise the cooling performance of the unit will be reduced. Ensure the distance "x" (see fig. 5) from components and other installed enclosures so that the required air circulation is not obstructed and prevented.

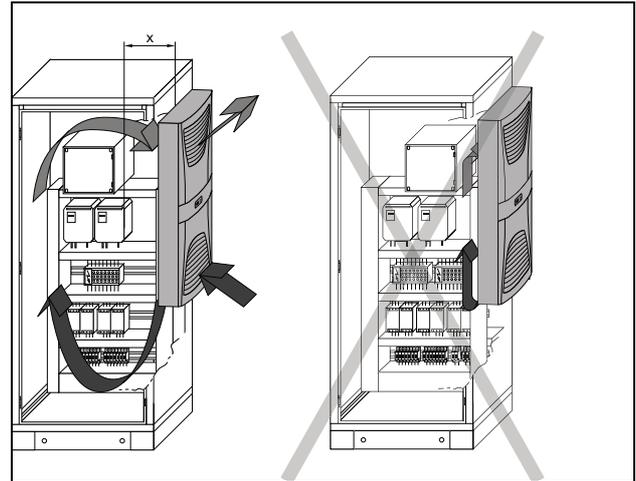


Fig. 5: Air circulation inside the enclosure

4.3 Fitting the cooling unit

The enclosure cooling unit may optionally be externally mounted on the enclosure (1), partially internally mounted (2) or fully internally mounted (3):

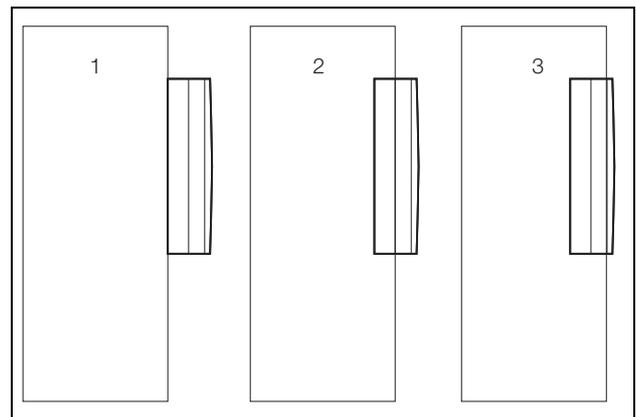


Fig. 6: Installation method

To this end, cut the side panel or door of the enclosure as per the drilling template included with the supply, and drill the relevant holes.



Note:

Units of type 3302.xxx and 3366.xxx can only be either externally mounted or fully internally mounted.

Units of type 3332.xxx can only be either externally mounted or partially internally mounted; they cannot be mounted in lockable doors on 600/1200 wide TS enclosures. To mount units 3328.xxx, 3329.xxx and 3332.xxx in the TS side or rear panel, we recommend using enclosure panel fasteners 8800.071 (see Rittal Catalogue). For high dynamic loads and mounting on the enclosure door, we recommend using reinforced door hinges 8800.710 (see Rittal Catalogue). Units with protection category NEMA 4X are only suitable for external mounting.

4 Assembly and connection

EN

4.3.1 Making the cut-outs

- Affix the supplied drilling template to the side panel or door of the enclosure using adhesive tape.

There are dimensioning lines on the drilling template to suit the various installation options for your cooling unit.

- Using the dimension drawings (see Appendix), identify the valid lines and dimensions for your installation type on the drilling template.



Caution!

Carefully deburr all drilled holes and cut-outs to prevent injuries caused by sharp edges.

- Mark, drill and deburr the holes.
- Make the cut-outs including the line width as per the drilling template.
- Deburr the cut-outs.

4.3.2 External mounting of the cooling unit

- Cut the supplied sealing tape to the correct length and stick it carefully along the back of the unit so that no gaps are left at the joints.

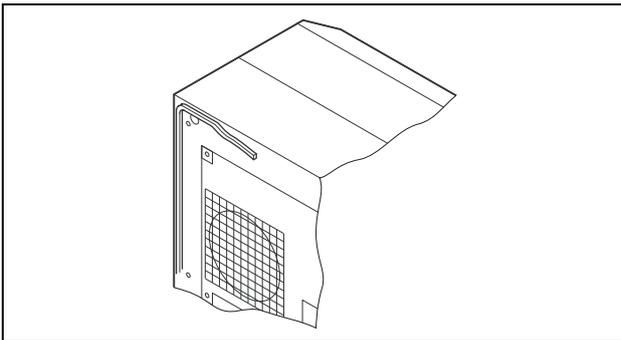


Fig. 7: Applying the self-adhesive tape

- Screw the supplied grub screws into the blind nuts on the rear of the unit.
- Secure the unit using the supplied washers and nuts.

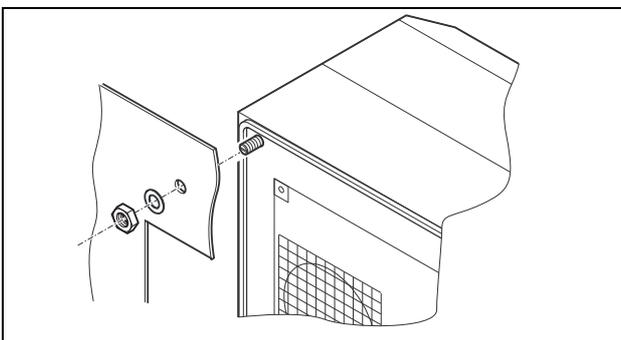


Fig. 8: Securing the cooling unit (all models except 3302.1xx)

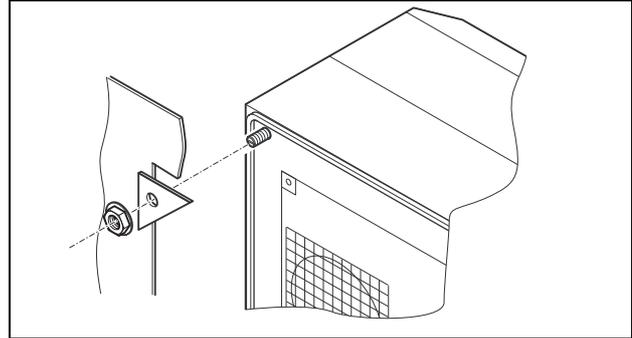


Fig. 9: Securing the cooling unit (3302.1xx only "external mounting")

4.3.3 Partial internal mounting of the cooling unit

- Carefully remove the louvred grille and, where applicable, the infill panel, from the enclosure by pulling forwards.
- Carefully disconnect the connector from the rear of the display and gently push it inwards through the cable gland.

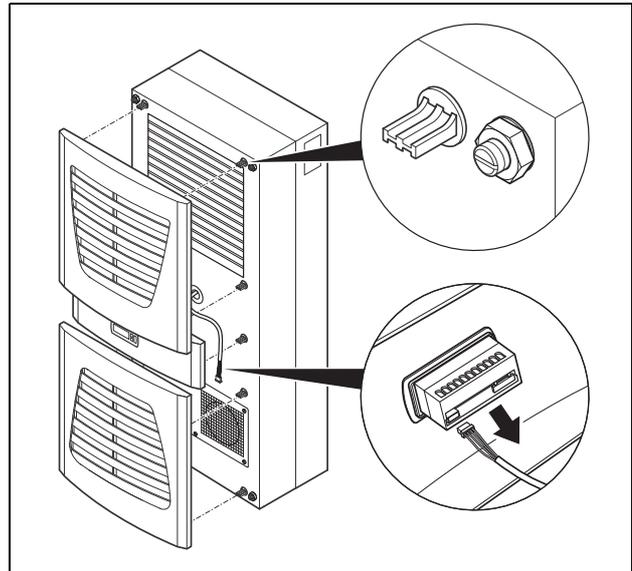


Fig. 10: Removing the louvred grille & disconnecting the display



Caution!

Stability of the cooling unit is only guaranteed in its assembled state. Brace the rear half of the enclosure to prevent it from falling over before removing the front half.

- Loosen the four nuts on the front half of the enclosure and pull the enclosure forwards by approx. 5 cm.
- Loosen the flat-pin connectors of the PE conductor between the two enclosure halves.
- Disconnect the fan connection.
- Remove the front enclosure tray completely.

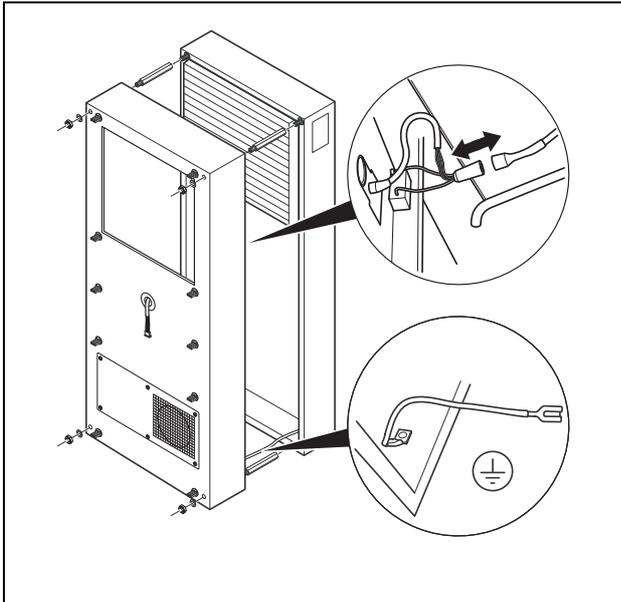


Fig. 11: Removing the cover

- Remove the four spacer bolts.
- Cut the supplied sealing tape to the correct length and stick it carefully along the inside of the rear enclosure half so that no gaps are left at the connection points.

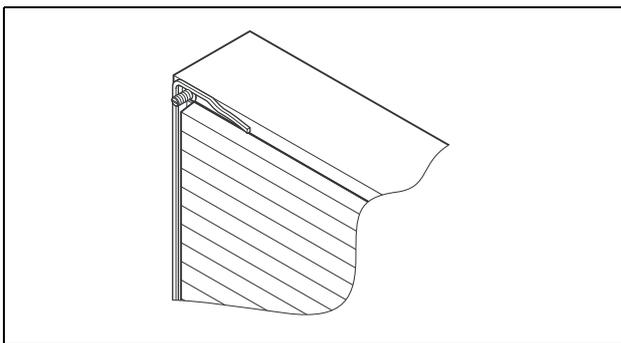


Fig. 12: Applying the self-adhesive tape

- Push the rear enclosure half into the mounting cut-out and secure it with the four spacer bolts.
- Push the display cable through the cable gland of the front enclosure half.

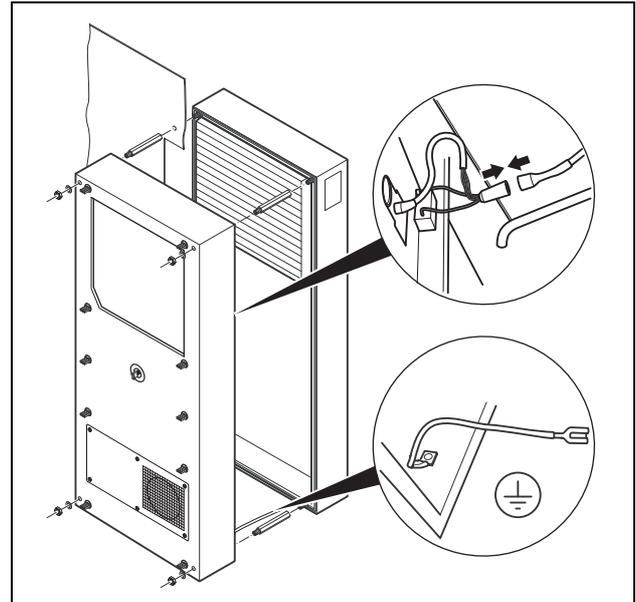


Fig. 13: Securing the cooling unit

- Connect the fan connector and PE conductor.
- Mount the front enclosure tray using the washers and nuts.

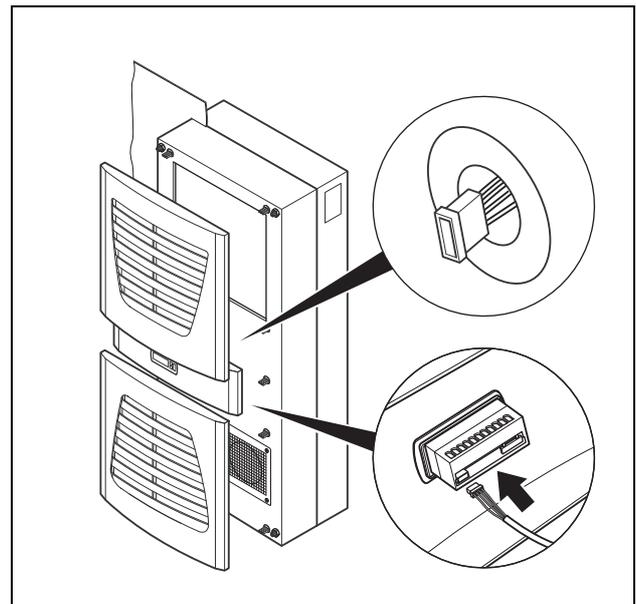


Fig. 14: Connecting the display connector

- Carefully connect the display connector.
- Push the louvred grille and, where applicable, the infill panel, onto the enclosure.

4.3.4 Full internal mounting of the cooling unit

- Carefully remove the louvred grille and the infill panel from the enclosure by pulling forwards.
- Carefully disconnect the connector from the rear of the display.

4 Assembly and connection

EN

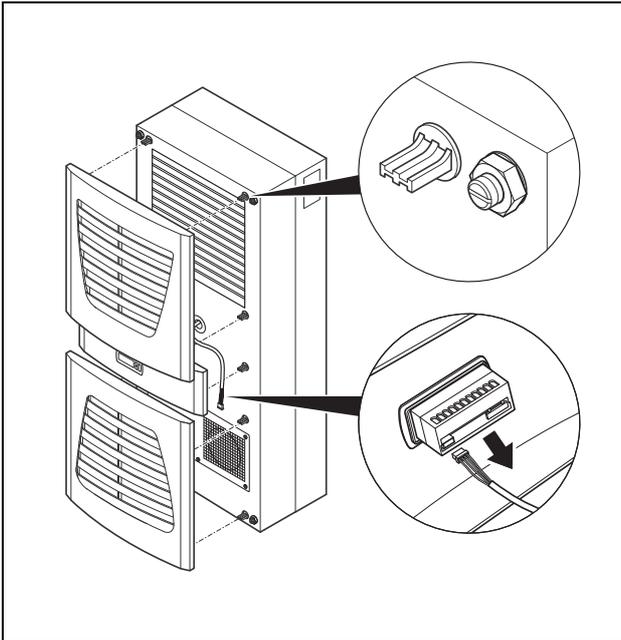


Fig. 15: Removing the louvred grille & disconnecting the display

- Cut the supplied sealing tape to the correct length and stick it carefully along the front enclosure half so that no gaps are left at the connection points.

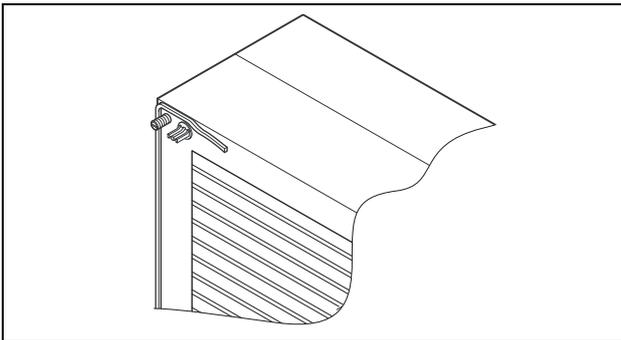


Fig. 16: Applying the self-adhesive tape

- Loosen the four nuts and washers from the front enclosure half.
- Push the unit into the mounting cut-out from the inside of the enclosure, and secure it to the enclosure from the outside using the washers and nuts.

Only for 3302.xxx:



Note:
The tightening torque for the nuts is 6 Nm.

- Before installing, remove the four screws as shown.

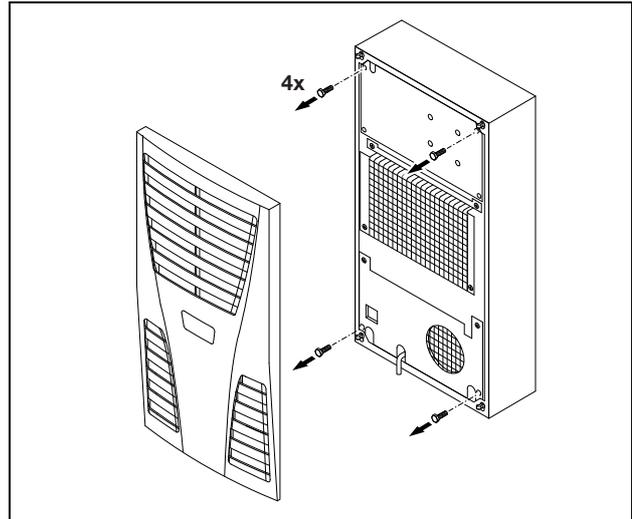


Fig. 17: 3302.xxx only: removing the four screws

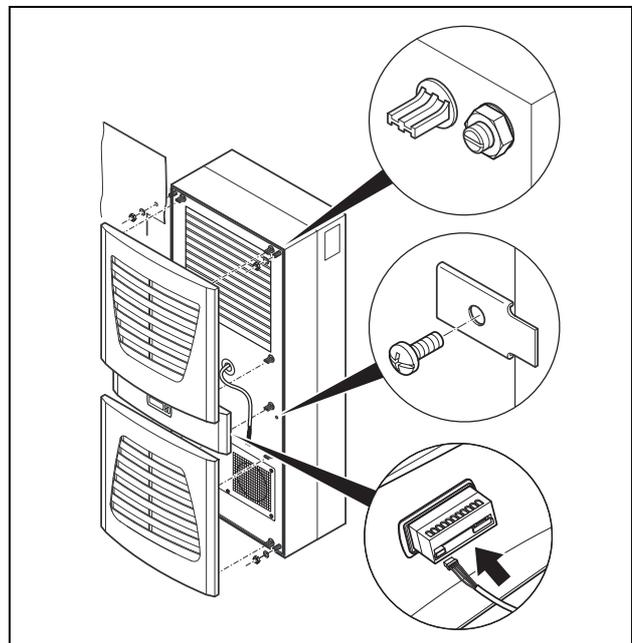


Fig. 18: Securing the cooling unit

- Where necessary, additionally secure the unit using the supplied mounting plates as shown in fig. 18.
- Carefully connect the display connector.
- Push the louvred grille and, where applicable, the infill panel, onto the enclosure.

4.4 Connecting the condensate discharge

A condensate discharge hose can be fitted to all types of cooling unit (except NEMA 4X devices).

The condensate discharge

- must be laid with a suitable and constant gradient (no siphoning)
- must be laid without kinks

– must not have a reduced cross-section if extended

The condensate hose is available as an accessory (refer also to Accessories in the Rittal Catalogue).

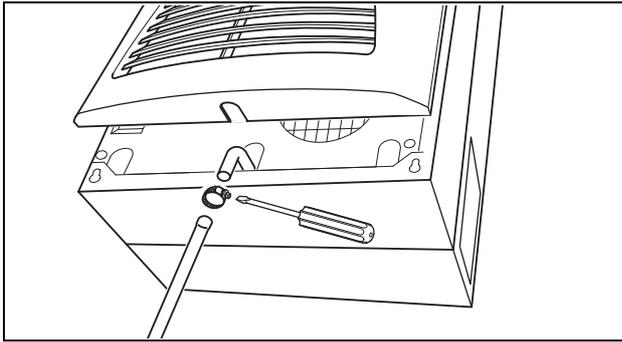


Fig. 19: Connecting the condensate discharge

- Connect a suitable hose to the condensate nozzle and secure using a hose clip.
- Route the condensate hose to a drain or into the external condensate evaporator (refer to Accessories in the Rittal Catalogue).

4.5 Notes on electrical installation

When performing the electrical installation, it is important to observe all valid national and regional regulations as well as the provisions of the responsible power supply company. The electrical installation may only be carried out by a qualified electrician who is responsible for compliance with the applicable standards and regulations.

4.5.1 Connection data

- The connected voltage and frequency must correspond to the values stated on the rating plate
- The cooling unit must be connected to the mains via an all-pin isolating device, which ensures at least 3 mm contact opening when switched off
- No additional temperature control may be connected upstream of the unit at the supply end
- Install the protective device specified on the rating plate to protect the line and equipment from short-circuits.
- The mains connection must ensure low-noise potential equalisation

4.5.2 Overvoltage protection and supply line load

- The unit does not have its own overvoltage protection. Measures must be taken by the operator at the supply end to ensure effective lightning and overvoltage protection. The mains voltage must not exceed a tolerance of $\pm 10\%$.
- In accordance with IEC 61 000-3-11, the unit is intended solely for use at sites with a continuous current-carrying capacity (incoming mains power supply) of more than 100 A per phase and with a supply voltage of 400/230 V. If necessary, the electricity supply company must be consulted to ensure that the continuous current-carrying capacity at the point of connection to the public grid is sufficient for connection of such a unit.
- The fans and compressors in single- and three-phase units are intrinsically safe (thermal winding protection). This also applies to transformer versions, types

3304.510, 3305.510, 3328.510 and 3329.510, and to special-voltage units which are likewise equipped with a transformer.

- Install the protective device specified on the rating plate to protect the line and equipment from short-circuits (miniature circuit-breaker with appropriate characteristic – e.g. "K" characteristic – or gG standard type slow fuse, circuit-breaker for plant or transformer protection). Select a suitable circuit-breaker in accordance with the information specified on the rating plate: Set it to the minimum specified value. This will achieve the best short-circuit protection for cables and equipment. Example: Specified setting range 6.3 – 10 A; set to 6.3 A.

4.5.3 Three-phase devices

- The electrical connection for devices in the three-phase version MUST be made with a clockwise rotating field
- The three-phase version of models 3304.xxx, 3305.xxx, 3328.xxx, 3329.xxx and 3332.xxx must be connected to a TN network with star earthing via a circuit-breaker for plant protection (current setting as per the rating plate). Three-phase units with special voltages must be protected with a circuit-breaker for transformer protection (category AC-3) as per the rating plate.
- Units designed for three phase 400/460 V feature additional monitoring of the rotary field or the absence of a phase. If the rotary field is incorrect or a phase is absent, the unit will not run.

4.5.4 Door limit switch

- Each door limit switch must only be assigned to one cooling unit.
- Several door limit switches may be connected in parallel to one cooling unit.
- The minimum cross-section for the connection cable is 0.3 mm^2 for a cable length of 2 m.
- The line resistance to the door limit switch must not exceed a maximum of 50Ω .
- The door limit switch only supports a floating connection; no external voltages.
- The contact of the door limit switch must be closed when the door is open.

The safety extra-low voltage for the door limit switch is provided by the internal power pack: Current approx. 30 mA DC.

- Connect the door limit switch to terminals 1 and 2 of the connector.

4.5.5 Notes on the flicker standard

The flicker limits specified in standard EN 61 000-3-3 or -3-11 are adhered to, provided the supply impedance is less than approx. 1.5Ω .

Where necessary, the unit operator should measure the connected impedance or consult the responsible electricity supply company. If there is no way of influencing

4 Assembly and connection

EN

the supply impedance and sensitive installed components (e.g. BUS) are subjected to interference, a line reactor or starting-current limiting device should be connected upstream of the cooling unit to restrict the start-up current of the cooling unit.

4.5.6 Potential equalisation

If, for EMC reasons, the unit is to be integrated into the customer's existing potential equalisation system, a conductor with a larger nominal cross-section can be connected to the potential equalisation connection point (attachment points) on the wall-mounted cooling units. According to the standard, the PE conductor in the mains connection cable is not classified as an equipotential bonding conductor.

4.6 Making the electrical connection

4.6.1 Bus connection (only when interconnecting several units with a Comfort controller)

When using several cooling units, the serial device interface X2 can be used to connect up to ten cooling units with the bus cable (Model No. 3124.100).



Note:

The electrical signals at the X2 interface are of an extra-low voltage (not extra-low safety voltages in accordance with EN 60 335-1).

When interconnecting, please note the following:

- De-energise the cooling units to be connected
- Ensure proper electrical insulation
- Make sure the cables are not laid in parallel to power lines
- Make sure that the lines are short



Note:

With the last slave unit in the group, do not, under any circumstances, connect the remaining socket of the Y cable 3124.100 into interface X3 of the cooling unit!

4.6.2 Connection X3 for serial interface

The interface card (Model No. 3124.200) may be connected to X3. This is used to evaluate system messages in a PLC, for remotely setting parameters and monitoring, or for integration into the facility management system.

4.6.3 Mounting external transformer

Only for 3361.x40.

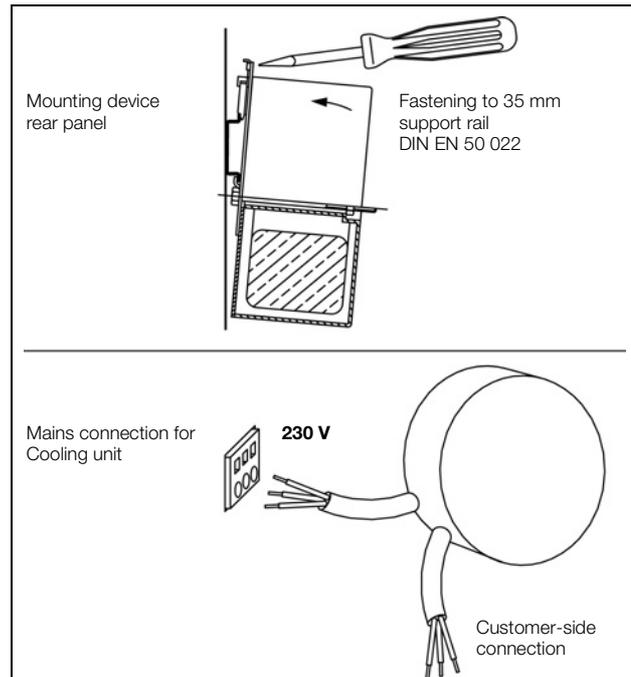


Fig. 20: Mounting external transformer (3361.x40 only)

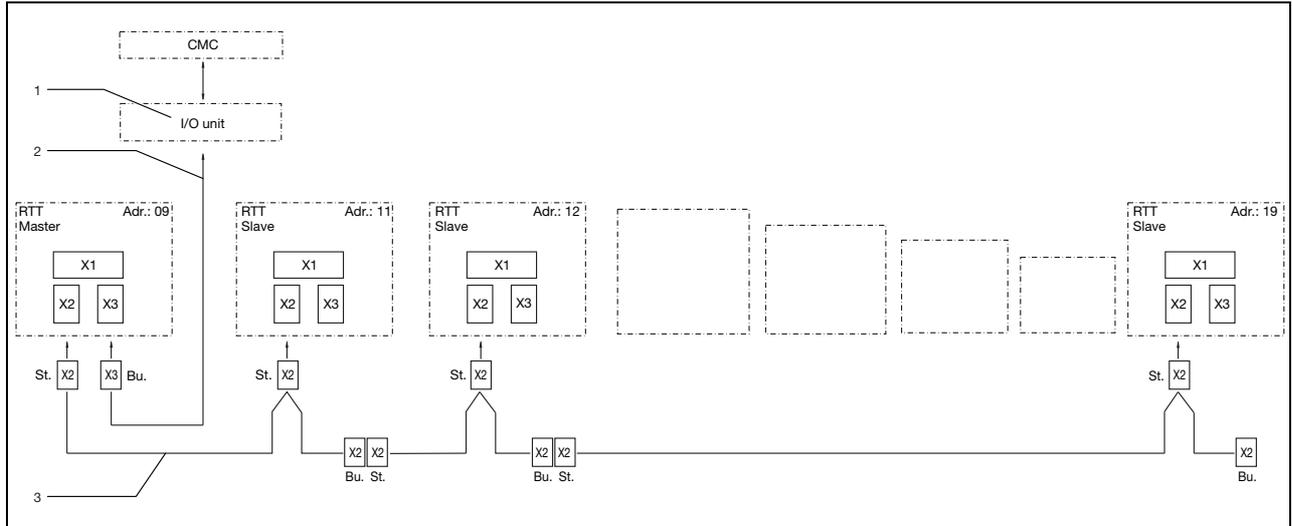


Fig. 21: Connection example: Master-slave operation

Key

- 1 Serial interface (Model No. 3124.200)
- 2 Serial interface cable
- 3 Master-slave bus cable (Model No. 3124.100)
- RTT Rittal TopTherm cooling units
- X1 Supply connection/door limit switch/alarms

- X2 Master/slave connection Sub-D, 9-pole
- X3 Serial interface Sub-D, 9-pole
- St. Sub-D connector, 9-pole
- Bu. Sub-D jack, 9-pole
- Adr. Address

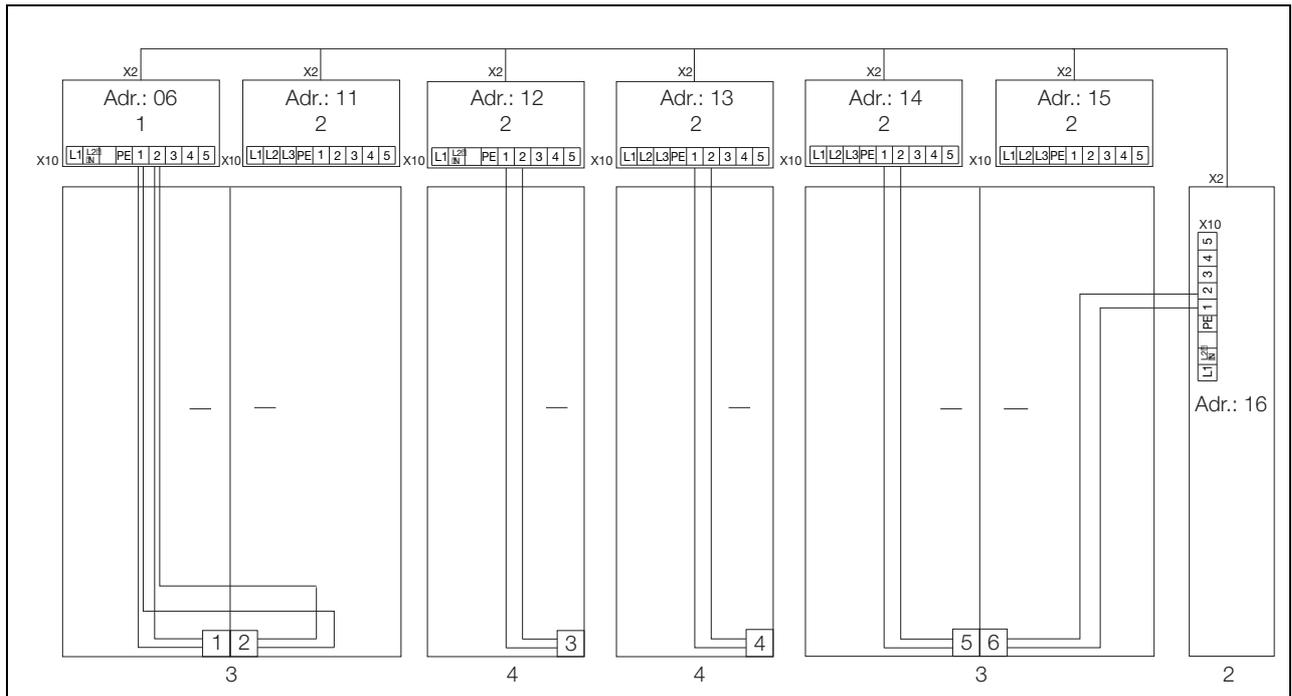


Fig. 22: Connection example: Door limit switch and master-slave operation

Key

- 1 Master cooling unit
- 2 Slave cooling units
- 3 2-door enclosure with two door limit switches
- 4 Enclosure with door limit switch

4.6.4 Installing the power supply

- Complete the electrical installation by following the wiring plan on the rear of the cooling unit (see fig. 2, for key see page 15).
- If you would like the system messages from the cooling unit to be evaluated via the system message relay, you should also connect a suitable low-voltage cable to terminals 3 – 5.

4 Assembly and connection

EN

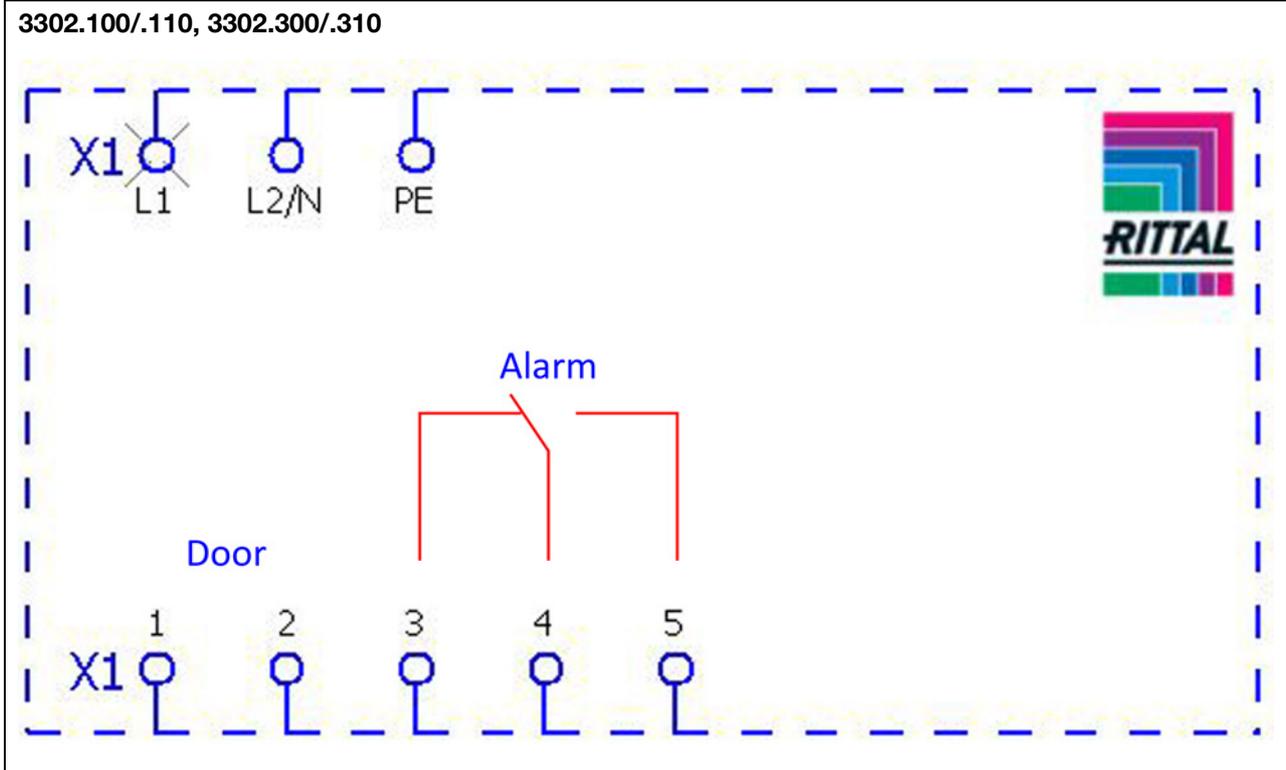


Fig. 23: Electrical wiring plan no. 1

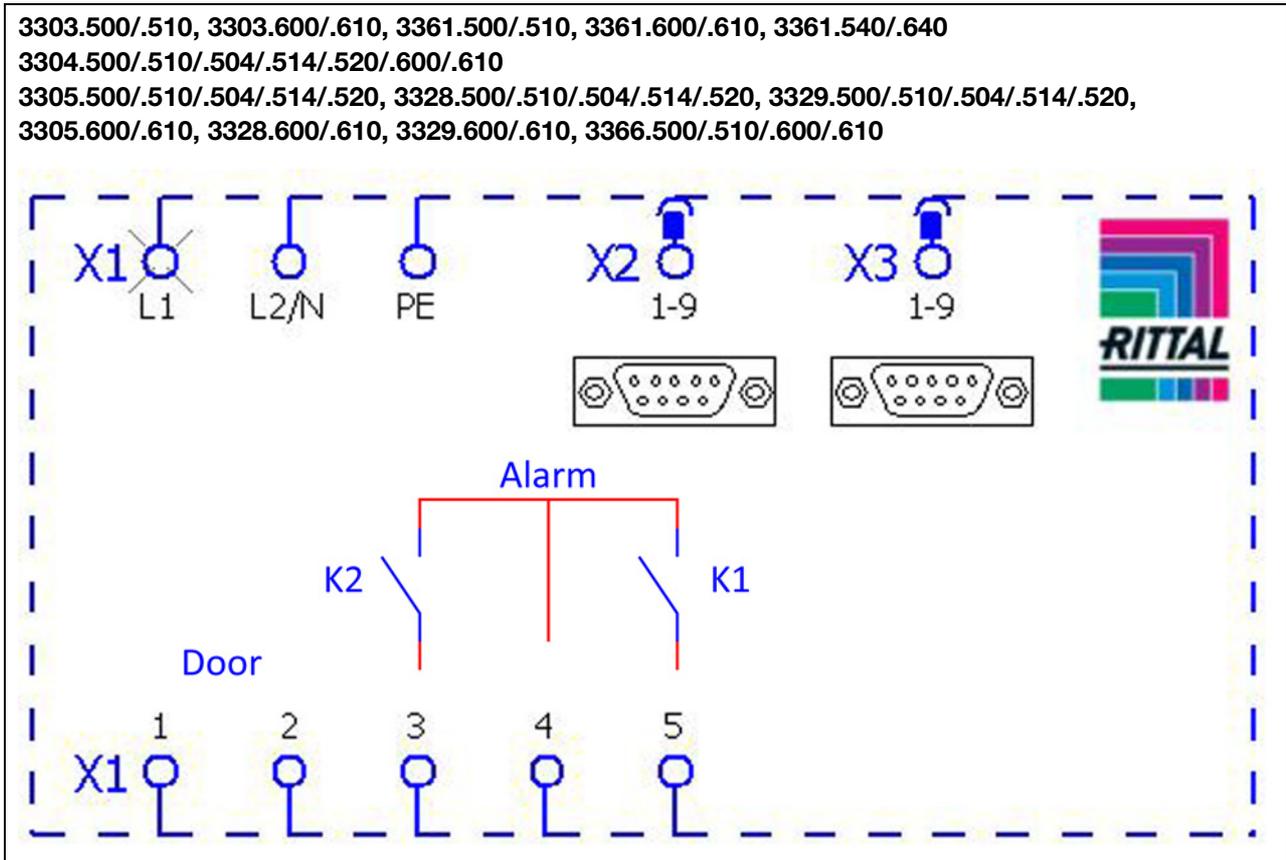


Fig. 24: Electrical wiring plan no. 2

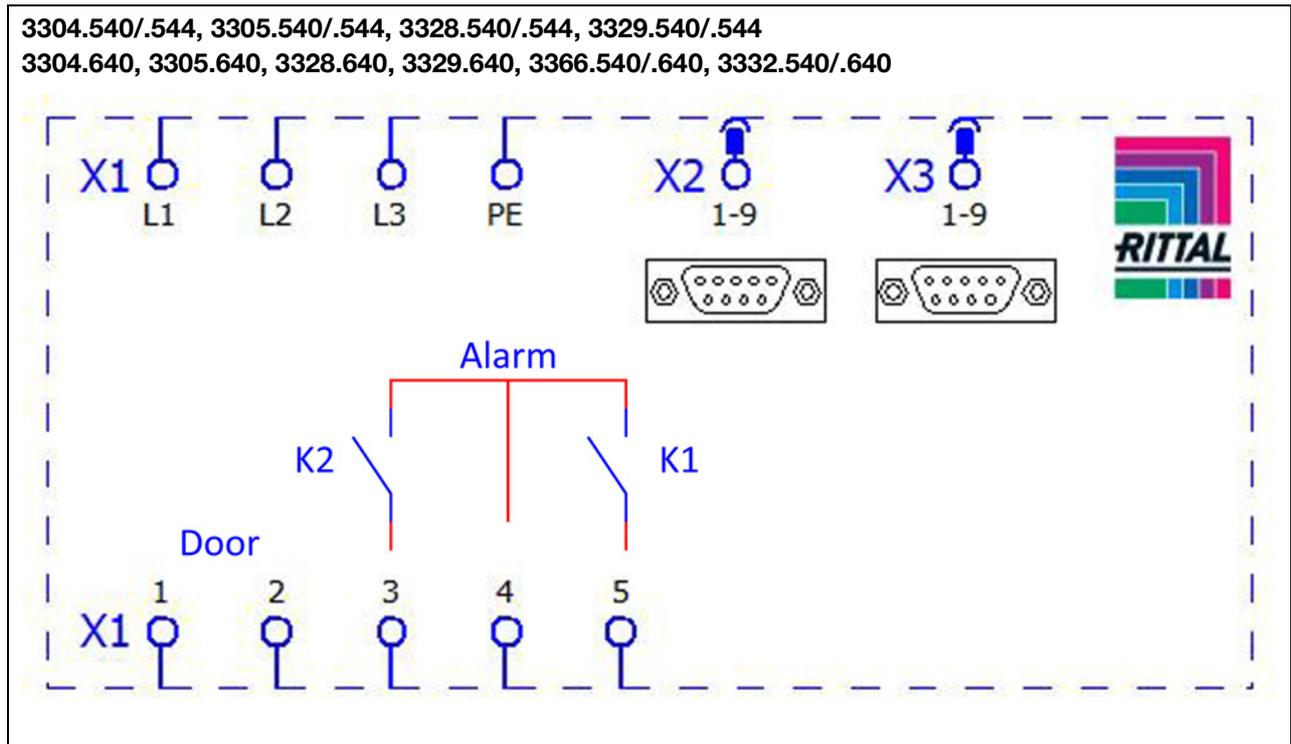


Fig. 25: Electrical wiring plan no. 3

Key

- X1 Main terminal strip
- X2 Master/slave connection
- X3 Optional interface
- K1 Relay collective fault 1
- K2 Relay collective fault 2
- Door Door limit switch (without door limit switch: terminal 1, 2 open)



Note:
For technical data, refer to the rating plate.

| AC cos φ = 1 | DC Res. Load |
|--------------------------------|--|
| I max. = 2 A U max. = 250 V | I min. = 100 mA U max. = 30 V I max. = 2 A |

Tab. 2: Relay contact data

4.7 Finalising assembly

4.7.1 Installing the filter media

The entire cooling unit condenser is covered with a dirt-repelling, easy-to-clean RiNano coating. In many applications, therefore, the use of filter media is unnecessary, particularly with dry dusts.

For dry, coarse dust and lint in the ambient air, we recommend installing an additional PU foam filter mat (available as an accessory) in the cooling unit. For air containing oil condensate, we recommend the use of metal filters (also available as an accessory). When used in

textile plants with heavy lint contamination, lint screens should be used (available as an optional extra).

- Pull the louvred air inlet grille off the enclosure.
- Insert the filter mat into the louvred grille as shown in fig. 26 and push it back onto the enclosure.

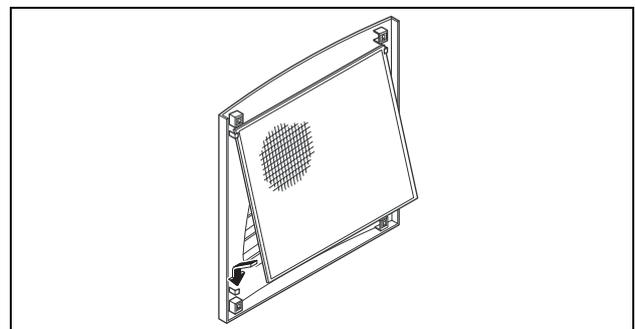


Fig. 26: Installing the filter mat

4.7.2 Fitting the cooling unit

For partial and full internal mounting only.

- Connect the connector to the rear of the display.
- Place the louvred grille onto the unit at the front, and press it down until you hear it snap into place.

5 Start-up

EN

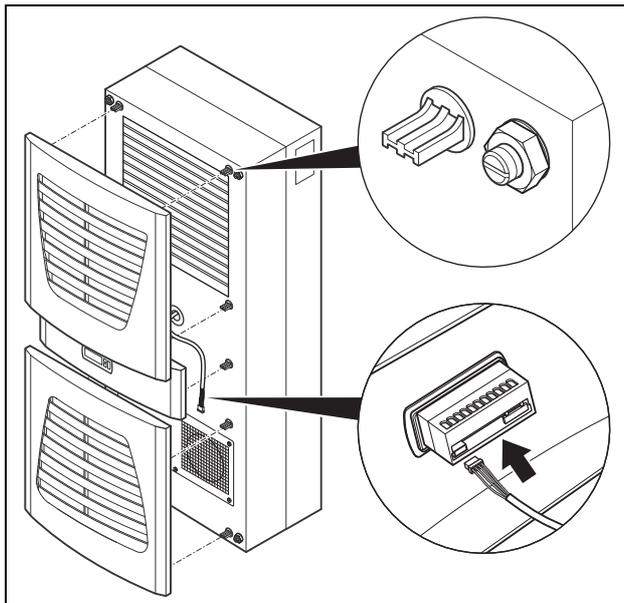


Fig. 27: Connect the display and attach the louvred grille

4.7.3 Setting the filter mat monitor (only with e-Comfort controller)

Function of the filter mat monitor:

Dirt on the filter mat is automatically detected by measuring the temperature difference in the external circuit of the cooling unit (see section 6.2.6 "Programming overview"). As the level of filter mat soiling increases, the temperature difference will increase. The setpoint value of the temperature difference in the external circuit adapts automatically to the relevant operating points in the performance diagrams. Hence there is no need to readjust the setpoint value for different unit operating points.

5 Start-up



Note:

The oil must be collected in the compressor in order to ensure effective lubrication and cooling.

Do not operate the cooling unit for at least 30 minutes after assembling the equipment.

■ Once all the assembly and installation work is complete, switch on the power supply to the cooling unit. The cooling unit starts running:

The cooling unit starts running:

- With Basic controller: The green operating LED ("line") is illuminated.
- With e-Comfort controller: The software version of the controller first appears for approx. 2 seconds, then "ECO" to show Eco mode is enabled. The internal enclosure temperature will then appear in the 7-segment display

You can now make your individual settings on the unit, e.g. set the temperature or (with e-Comfort controller only) assign the network identifier, etc. (refer to section 6 "Operation").

6 Operation

You can operate the cooling unit using the controller on the front of the device (fig. 2, item 11). Depending on the model, the unit is equipped with a Basic or e-Comfort controller.

6.1 Control using the Basic controller

For Model Nos. 3302.xxx.

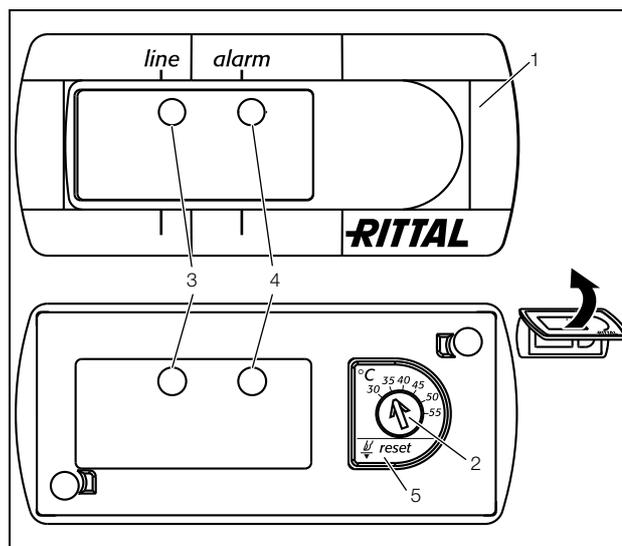


Fig. 28: Basic controller

Key

- 1 Controller trim panel
- 2 Temperature setter
- 3 LED green ("line")
- 4 LED red ("alarm")
- 5 Reset button

6.1.1 Properties

- Rated operating voltage: 115 V or 230 V
- Integral start-up delay and door limit switch function
- Protective function to prevent icing
- Monitoring of all motors (compressor, condenser fan, evaporator fan)
- Phase monitoring for three-phase units
- Visualisation of the operating status via LED display:
 - Voltage on, unit operational
 - Door open (only if door limit switch installed)
 - Warning of overtemperature
 - High-pressure monitor has switched
- Switching hysteresis: 5 K
 - If the cooling unit and compressor run times are too long < 1 minute, the switching hysteresis to protect the cooling unit is automatically increased.
- Floating system message contact in case of overtemperature

6 Operation

EN

the system message relay picks up, so that the relay contacts change status (contact 3 – 4 open; contact 4 – 5 closed).

This is the normal operating state of the cooling unit. As soon as an error message occurs or the power supply is interrupted, the relay drops out and contact 3 – 4 is closed.

6.1.3 Test mode with the Basic controller

The Basic controller is equipped with a test function whereby the cooling unit commences cooling operation independently of the set temperature or door limit switch function.

First you must remove the controller trim panel.

- Switch off the mains voltage.
- Remove the louvred grille or infill panel in which the controller is installed.
- Release the display lock from behind and pull it forwards slightly.

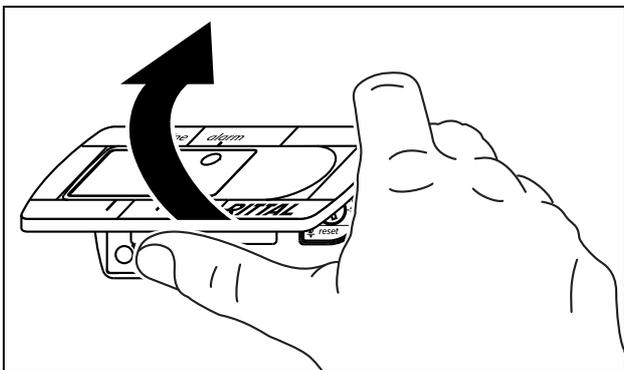


Fig. 29: Releasing the Basic controller trim panel

- Carefully lift the trim panel, e.g. using your thumb or a flat screwdriver, and remove it.

You can now start test mode.

- Rotate the potentiometer to the left-hand stop, then hold the rubberised potentiometer display down while you re-connect the mains voltage.

The cooling unit will commence operation and the green LED will flash (|_||_||_ . . .). Test mode is completed after approximately 5 minutes. The unit switches off and changes to normal operation.

Key

- | = LED 500 ms on
- _ = LED 500 ms off

In normal operation, the green LED is permanently illuminated.

- Next, rotate the potentiometer back to the required setpoint.

6.1.4 Setting the temperature



Note:

With the Basic controller, the temperature is preset at the factory to +35°C. In order to save energy, do not set the temperature lower than that actually necessary.

To change the temperature setting:

- Take the trim panel off the controller as described in section 6.1.3 "Test mode with the Basic controller".
- Set the required temperature on the temperature setting device (fig. 28).
- Carefully push the trim panel onto the display until you hear it snap into place.
- Push the display back into the infill panel or louvred grille.
- Re-attach the louvred grille or infill panel to the cooling unit.

6.1.5 Resetting the Basic controller

Following a high-pressure alarm in the cooling cycle, and once the cause has been rectified, you will need to manually reset the Basic controller:

- Take the trim panel off the Basic controller as described in section 6.1.3 "Test mode with the Basic controller".
- Press the reset button (fig. 28, item 5) for at least 3 seconds.

The red LED is extinguished.

- Re-install the Basic controller.

6.2 Control using the e-Comfort controller

For unit types 33xx.5xx and 33xx.6xx.

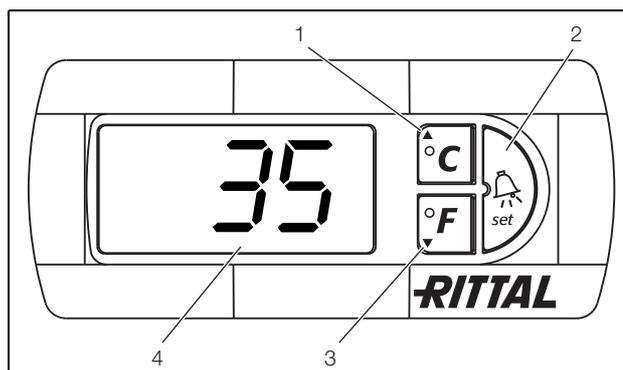


Fig. 30: e-Comfort controller

Key

- 1 Programming button, also display of the set temperature unit (degrees Celsius)
- 2 Set button
- 3 Programming button, also display of the set temperature unit (degrees Fahrenheit)
- 4 7-segment display

6.2.1 Properties

- Rated operating voltage:
 - 115 V or
 - 230 V or
 - 400/460 V, 3-phase, supports multiple voltages without rewiring
- Integral start-up delay and door limit switch function
- Protective function to prevent icing
- Monitoring of all motors (compressor, condenser fan, evaporator fan)
- Phase monitoring for three-phase units
- Master-slave function with a maximum of ten units. One device functions as a master unit. Once the set temperature is reached by one of the connected slave devices or in the event of the door limit switch function, the affected slave unit will report to the master unit that switches all the other cooling units on or off as required.
- Switching hysteresis: adjustable from 2 – 10 K, preset to 5 K
- Visualisation of the current internal enclosure temperature and all error messages in the 7-segment display
- Using an interface card (Model No. 3124.200), the unit may be incorporated into higher-level remote monitoring systems.

The cooling unit operates automatically, i.e. after switching on the power supply, the evaporator fan (see fig. 3) will run and circulate the internal enclosure air. The compressor and condenser fan are regulated by the e-Comfort controller. The e-Comfort controller has a 7-segment display (fig. 30, item 4). After switching on the power supply, the current software version initially appears on this display for approx. 2 seconds together with the symbol to show Eco mode is enabled, followed by a preset option (e.g. t10) or the temperature.

In regular operation, the display shows both the temperature (in degrees Celsius or Fahrenheit – users may switch between the two) and any error messages.

The current internal enclosure temperature is usually displayed permanently. In the event of an error message, this alternates with the temperature display.

The unit is programmed using buttons 1 – 3 (fig. 30). The relevant parameters also appear in the display.

6.2.2 Eco mode

All Rittal TopTherm cooling units with e-Comfort controller from firmware 3.2 have the energy-saving eco mode, which is enabled in the delivered state.

The eco mode is used to save energy in the heat exchanger if there is no thermal load, or there is a low thermal load in the enclosure (e. g. standby operation, no production or weekend). During this process the evaporator fan in the internal circuit is switched off as appropriate if the actual internal enclosure temperature drops to 10 K below the specified setpoint temperature. To ensure the internal temperature is reliably measured during this process, the fan starts cyclically for 30 sec. every 10 minutes (see fig. 31). If the internal temperature drops to a range 5 K below the setpoint set again, the fan switches back to continuous operation.

If required, eco mode can be disabled on the control display. For this purpose switch the parameter from 1 to 0 in the programming level (see tab. 4). The fan then runs continuously.

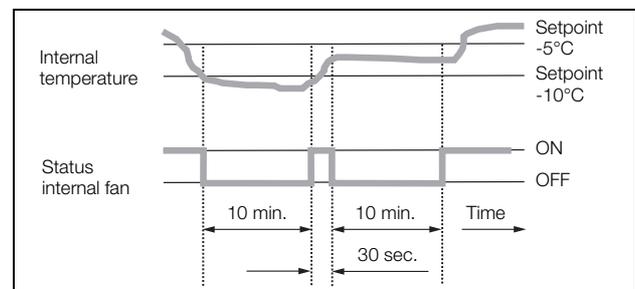


Fig. 31: Eco mode

6.2.3 Launching test mode

The e-Comfort controller is equipped with a test function whereby the cooling unit commences cooling operation independently of the set temperature or door limit switch function.

- Simultaneously press buttons 1 and 2 (fig. 30) for at least 5 sec.

The cooling unit will commence operation. Test mode is completed after approximately 5 minutes. The unit switches off and changes to normal operation.

6.2.4 General information about programming

Using buttons 1, 2 and 3 (fig. 30) you can change 24 parameters within the preset ranges (min. value, max. value).

Tables 4 and 5 show the parameters which can be altered. fig. 32 on page 22 shows which buttons must be pressed.



Note on switching hysteresis:

With a low hysteresis and short switching cycles, there is a risk that cooling may not be adequate or that only partial sections of the enclosure are cooled. If the cooling unit and compressor run times are too long < 1 minute, the switching hysteresis to protect the cooling unit is automatically increased (see message "LH" in section 6.2.9 "Evaluating system messages").

Note on temperature settings:

With the e-Comfort controller, the temperature is preset at the factory to +35°C. In order to save energy, and due to the risk of increased condensation, do not set the temperature lower than that actually necessary.

Note on useful cooling power:

Interactive performance diagrams for calculating the useful cooling power may be found at www.rittal.com.

- Press one of the programming buttons ▲ (°C) or ▼ (°F) until the required value appears.
- Press button 2 ("Set") to confirm the change. You can now alter other parameters in the same way. There is no need to re-enter the authorisation code "22".
- To exit programming mode, press button 2 ("Set") again for approximately 5 seconds.

"Acc" will appear in the display to indicate that the changes have been saved. The display then switches back to regular operation (internal enclosure temperature).

You can also program the e-Comfort controller using a diagnosis software package (Model No. 3159.100), which is supplied with a connection cable to the PC. The cable connector on the rear of the e-Comfort controller display serves as an interface.

In principle, the programming is identical for all editable parameters.

To enter programming mode:

- Press button 2 ("Set") for approx. 5 seconds.

The controller is now in programming mode. While in programming mode, if you do not press any buttons for approx. 30 seconds, the display will first flash, then the controller will switch back to normal display mode. "Esc" in the display indicates that any changes made have not been saved.

- Press the programming buttons ▲ (°C) or ▼ (°F) to switch between the editable parameters (see tables 4 and 5).
- Press button 2 ("Set") to select the displayed parameter for editing.

The current value of this parameter is displayed.

- Press one of the programming buttons ▲ (°C) or ▼ (°F).

"Cod" will appear in the display. In order to be able to change a value, you must enter the authorisation code "22".

- Keep the ▲ programming button (°C) held down until "22" appears.
- Press button 2 ("Set") to confirm the code.

You can now alter the parameter within the preset limits.

6.2.5 Editable parameters

See also fig. 32 on page 32.

| Progr. level | Display screen | Parameter | Min. value | Max. value | Factory setting | Description |
|--------------|----------------|--|------------|------------|-----------------|--|
| 1 | St | Internal enclosure temperature set-point T_i | 20°C | 55°C | 35°C | The internal enclosure temperature setting is preset at the factory to 35°C (95°F) and may be altered within a range of 20 – 55°C (68 – 131°F). |
| | | | 68°F | 131°F | 95°F | |
| 2 | Fi | Filter mat monitoring | 10°C | 60°C | 99 (= off) | To enable filter mat monitoring, the display should be set to a minimum of 10 K (18°F) above the temperature difference shown in programming mode "Fi"; filter mat monitoring is disabled at the factory (99 = off). |
| | | | 18°F | 108°F | 178 (= off) | |
| 3 | Ad | Master-slave identifier | 0 | 19 | 0 | See section 6.2.8 "Setting the master/slave identifier". |
| 4 | CF | Switch between °C/°F | 0 | 1 | 0 | The temperature display can be switched between °C (0) and °F (1). The LED displays the current unit of temperature. |
| 5 | H1 | Setting for switching difference (hysteresis) | 2 K | 10 K | 5 K | The cooling unit is preset in the factory to a switching hysteresis of 5 K (9°F). This parameter should only be changed in consultation with us. Please contact us for advice. |
| | | | 4°F | 18°F | 9°F | |
| 6 | H2 | Differential for error message A2 | 3 K | 15 K | 5 K | If the internal enclosure temperature exceeds the set value by more than 5 K (9°F), then error message A2 (internal enclosure temperature too high) appears on the display terminal. If necessary, the differential may be altered here within the range of 3 – 15 K (5 – 27°F). |
| | | | 5°F | 27°F | 9°F | |
| 26 | ECO | Eco-mode operation | 0 | 1 | 1 | Eco mode OFF: 0 / Eco mode ON: 1 |
| 27 | PSO | Changing the authorisation code | 0 | 15 | 0 | This parameter allows you to change the "22" authorisation code (factory setting). The new code results from the sum of 22 + PSO. |

Tab. 4: Editable parameters

6 Operation

6.2.6 Programming overview

EN

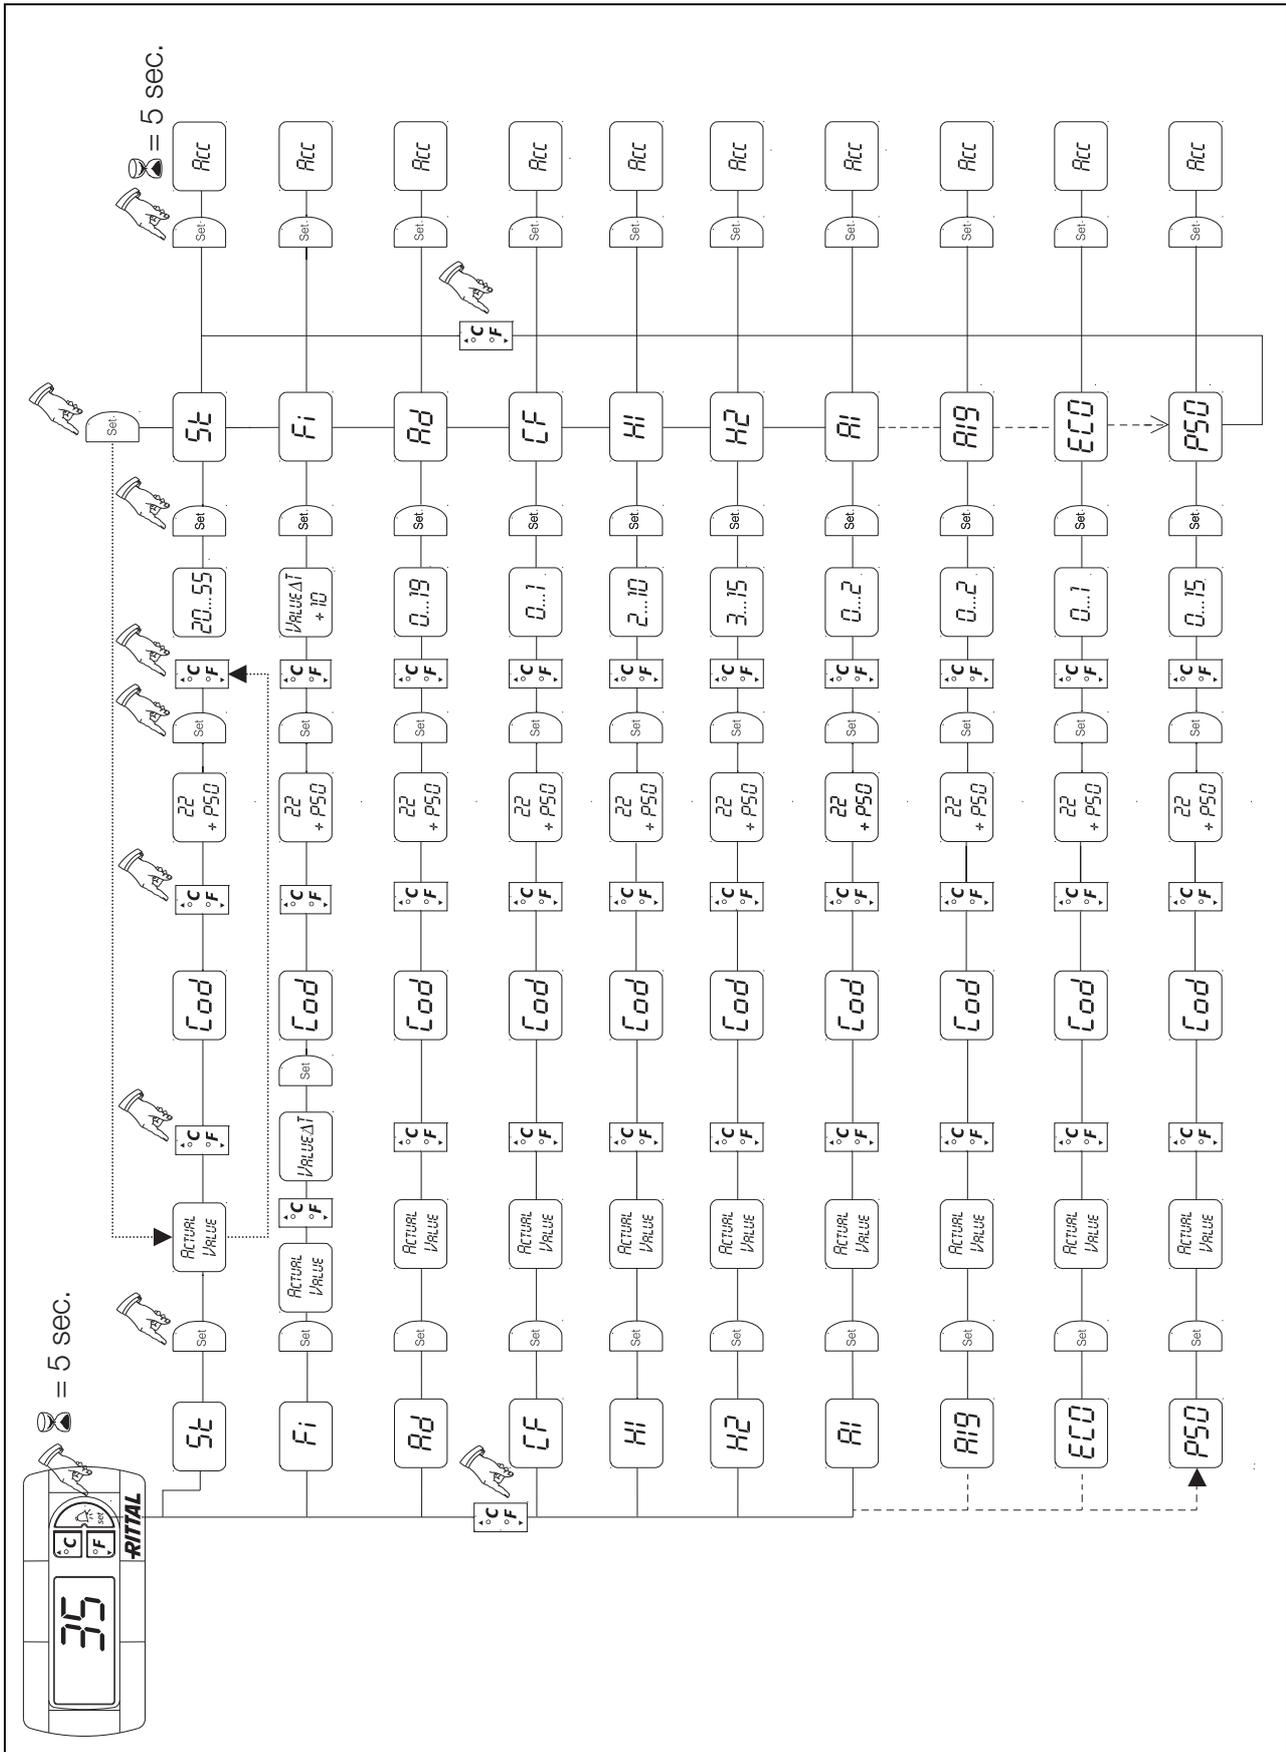


Fig. 32: Programming overview

6.2.7 Defining system messages for evaluation

System messages are shown on the display screen of the e-Comfort controller via the displays A1 to A20 and E0.

A more detailed explanation of the system messages may be found in section 6.2.9 "Evaluating system messages".

See also fig. 32 on page 22.

| Progr. level | Display screen | Min. value | Max. value | Factory setting | Type or location of fault |
|--------------|----------------|------------|------------|-----------------|--|
| 7 | A1 | 0 | 2 | 0 | Enclosure door open |
| 8 | A2 | 0 | 2 | 0 | Internal temperature of enclosure too high |
| 9 | A3 | 0 | 2 | 0 | Filter monitoring |
| 10 | A4 | 0 | 2 | 0 | Ambient temperature too high/low |
| 11 | A5 | 0 | 2 | 0 | Icing hazard |
| 12 | A6 | 0 | 2 | 1 | PSA ^H pressure switch |
| 13 | A7 | 0 | 2 | 2 | Evaporator coil |
| 14 | A8 | 0 | 2 | 1 | Condensate warning |
| 15 | A9 | 0 | 2 | 1 | Condenser fan blocked or defective |
| 16 | A10 | 0 | 2 | 1 | Evaporator fan blocked or defective |
| 17 | A11 | 0 | 2 | 2 | Compressor |
| 18 | A12 | 0 | 2 | 1 | Condenser |
| 19 | A13 | 0 | 2 | 1 | Ambient temperature sensor |
| 20 | A14 | 0 | 2 | 1 | Icing temperature sensor |
| 21 | A15 | 0 | 2 | 1 | Condensate warning temperature sensor |
| 22 | A16 | 0 | 2 | 1 | Internal temperature sensor |
| 23 | A17 | 0 | 2 | 1 | Phase monitoring |
| 24 | A18 | 0 | 2 | 0 | EPROM |
| 25 | A19 | 0 | 2 | 0 | LAN/Master-Slave |

Tab. 5: System messages that can be evaluated via relays

The system messages A1 – A19 may also be evaluated via two floating system message relays. In this way, one of the two system message relays may be allocated to each system message.

System message relays with normally open contact, see wiring diagrams in section 4.6.4 "Installing the power supply":

- Terminal 3: NO (normally open, relay 2)
- Terminal 4: C (connection of the supply voltage to the system message relay)
- Terminal 5: NO (normally open, relay 1)

The definition NO refers to the de-energised state. As soon as power is applied to the cooling unit, both system message relays (relay 1 and 2) energise.

This is the normal operating state of the cooling unit. As soon as a system message occurs or the power supply is interrupted, the corresponding relay will drop out and open the contact.

The RiDiag II software (available as an accessory, Model No. 3159.100) allows you to invert the system message relay circuit.

In the normal operating state the two relays will then drop out. If a system message occurs, the relevant relay will energise and the contact will close.



Note:

This setting can only be made using the RiDiag II software.

Program system messages with the value

- 0: System message is not sent to the system message relay, but merely appears in the display
- 1: System message is evaluated by relay 1
- 2: System message is evaluated by relay 2

6 Operation

EN

6.2.8 Setting the master/slave identifier

When several cooling units are connected together (maximum ten), one of the cooling units must be defined as the "master" and the others as "slaves". For this purpose, assign a corresponding identifier (address) to each cooling unit which will enable the cooling unit to be identified in the network.

If one of the slave units reaches the set temperature or if the door limit switch function is activated, the affected slave unit will report to the master unit, which then deactivates all the other cooling units.



Notes:

- Only one unit may be configured as master, and its identifier must match the number of connected slave units.
- The slave units must have different identifiers.
- The identifiers must be numbered in ascending order without any gaps.

On the **master cooling unit** (00 = factory setting), set the number of slave units present in the network:

- 01: Master with 1 slave cooling unit
- 02: Master with 2 slave cooling units
- 03: Master with 3 slave cooling units
- 04: Master with 4 slave cooling units
- 05: Master with 5 slave cooling units
- 06: Master with 6 slave cooling units
- 07: Master with 7 slave cooling units
- 08: Master with 8 slave cooling units
- 09: Master with 9 slave cooling units

On the **slave cooling unit** (00 = factory setting), set its own address:

- 11: Slave cooling unit no. 1
- 12: Slave cooling unit no. 2
- 13: Slave cooling unit no. 3
- 14: Slave cooling unit no. 4
- 15: Slave cooling unit no. 5
- 16: Slave cooling unit no. 6
- 17: Slave cooling unit no. 7
- 18: Slave cooling unit no. 8
- 19: Slave cooling unit no. 9

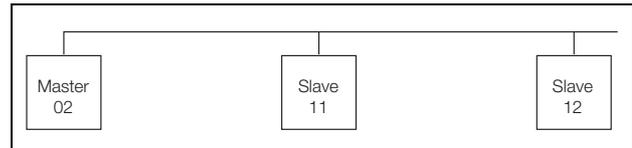


Fig. 33: Master/slave connection (example)

For further connection examples, see section 4.6.1 "Bus connection (only when interconnecting several units with a Comfort controller)".

For details of how to set the identifier, see section 6.2.5 "Editable parameters" or section 6.2.6 "Programming overview", parameter "Ad".

6.2.9 Evaluating system messages

In the e-Comfort controller, system messages are indicated by a number in the display.

Following the appearance of messages A03, A06 and A07 and after rectifying their cause, you will need to re-set the e-Comfort controller (see section 6.2.10 "Reset the e-Comfort controller").

| Display screen | System message | Possible cause | Measures to rectify the fault |
|----------------|--|--|---|
| A01 | Enclosure door open | Door open or door limit switch incorrectly positioned | Close door, position door limit switch correctly, check connection if necessary |
| A02 | Internal temperature of enclosure too high | Cooling capacity inadequate/unit undersized Error as a consequence of messages A03 to A17. | Check cooling capacity |
| A03 | Filter monitoring | Filter mat soiled | Clean or replace; reset the e-Comfort controller |
| A04 | Ambient temperature too high/low | Ambient temperature outside permissible operating range (+10°C to +60°C) | Raise or lower the ambient temperature (e.g. heat or ventilate the room) |
| A05 | Icing hazard | Operational display in case of icing hazard. Evaporator coil fan may be mechanically blocked, defective, or cold air outlet obstructed. | Set the enclosure interior temperature to a higher value. Check the evaporator fan; release or exchange if necessary. |

Tab. 6: Troubleshooting with the e-Comfort controller

| Display screen | System message | Possible cause | Measures to rectify the fault |
|----------------|---------------------------------------|---|---|
| A06 | PSA ^H pressure switch | Ambient temperature too high | Lower the ambient temperature; reset the e-Comfort controller |
| | | Condenser soiled | Clean the condenser; reset the e-Comfort controller |
| | | Filter mat soiled | Clean or replace; reset the e-Comfort controller |
| | | Condenser fan defective | Replace; reset the e-Comfort controller |
| | | E-valve defective | Repair by refrigeration engineer; reset the e-Comfort controller |
| | | PSA ^H pressure switch defective | Refrigeration engineer to exchange reset the e-Comfort controller |
| A07 | Evaporator coil | Lack of refrigerant; sensor in front of or behind condenser defective | Repair by refrigeration engineer; reset the e-Comfort controller |
| A08 | Condensate warning | Condensate discharge kinked or blocked | Check condensate drainage; correct any kinks or blockages in the hose |
| | | Only for units with optional condensate evaporation | Check the evaporation unit, replace if necessary |
| A09 | Condenser fan | Blocked or defective | Clear the blockage; replace if necessary |
| A10 | Evaporator fan | Blocked or defective | Clear the blockage; replace if necessary |
| A11 | Compressor | Compressor overloaded (internal winding protection) | No action required; Unit switches on again independently |
| | | Defective (check by measuring the winding resistance) | Replace by a refrigeration engineer |
| A12 | Condenser temperature sensor | Open or short-circuit | Replace |
| A13 | Ambient temperature sensor | Open or short-circuit | Replace |
| A14 | Icing temperature sensor | Open or short-circuit | Replace |
| A15 | Condensate warning temperature sensor | Open or short-circuit | Replace |
| A16 | Internal temperature sensor | Open or short-circuit | Replace |
| A17 | Phase monitoring | For three-phase devices only: Incorrect rotary field/phase absent | Swap two phases |
| A18 | EPROM error | New board installed incorrectly | Software update needed (only following board installation with more recent software): Enter the programming level with Code 22; press button 1 and confirm with "Set" until "Acc" appears. Next, disconnect the unit from the mains and reconnect. |
| A19 | LAN/Master-Slave | Master and slave not connected | Check setting and/or cable |

Tab. 6: Troubleshooting with the e-Comfort controller

7 Inspection and maintenance

| Display screen | System message | Possible cause | Measures to rectify the fault |
|----------------|-----------------------------|--|---|
| A20 | Voltage drop | Error display not shown | Event is stored in the log file |
| E0 | Display message | Connection problem between the display and the controller board | Reset: Switch power supply off, then switch on again after approx. 2 sec. |
| | | Cable defective; connection loose | Replace the boards |
| OL | Overload | Ambient parameters or heat loss outside the applicable limits | |
| LH | Low Heat | Minimal heat loss in enclosure. | |
| b07 | Leak in the cooling circuit | Sensor B3 and B4 swapped over | Swap the sensors |
| rSt | Reset | Manual device reset required, see section 6.2.10 "Reset the e-Comfort controller". | |

Tab. 6: Troubleshooting with the e-Comfort controller

6.2.10 Reset the e-Comfort controller

After the occurrence of faults A03, A06 and A07, you will need to reset the e-Comfort controller.

- Press buttons 1 (▲) and 3 (▼) (fig. 30) simultaneously for 5 seconds.

The system messages disappear and the temperature display is shown.

Maintenance interval: 2,000 operating hours. Depending on the level of contamination in the ambient air, the maintenance interval may be reduced to suit the air pollution intensity.



Caution!
Risk of fire!
Never use flammable liquids for cleaning.

7 Inspection and maintenance



Warning!
The unit is live.
Switch off the power supply before opening, and take suitable precautions against it being accidentally switched back on.



Caution!
Any essential repair work on the cooling circuit must only be undertaken by a qualified refrigeration specialist.

The cooling circuit is designed in the form of a maintenance-free, hermetically sealed system. The cooling unit is filled with the required quantity of refrigerant at the factory, checked for leaks, and subjected to a functional test run.

The installed maintenance-free fans are mounted on ball bearings, protected against moisture and dust, and fitted with a temperature monitor. The life expectancy is at least 30,000 operating hours (L10, 40°C). The cooling unit is thus largely maintenance-free. All that may be required from time to time is to clean the components of the external air circuit using a vacuum cleaner or compressed air if they become visibly dirty. Any stubborn, oily stains may be removed using a non-flammable detergent, such as degreaser.

Sequence of maintenance measures:

- Check the level of dirt.
- Filter soiling? Replace the filter if necessary.
- Cooling membranes soiled? Clean if necessary.
- Activate test mode; cooling function OK?
- Check noise generation of compressor and fans.

7.1 Compressed air cleaning 3304.xxx, 3305.xxx



Fig. 34: Disconnect the mains plug



Fig. 35: Remove the top louvred grille



Fig. 37: Remove the infill panel



Fig. 36: Remove the bottom louvred grille



Fig. 38: Disconnect the connector from the display (1)

7 Inspection and maintenance

EN

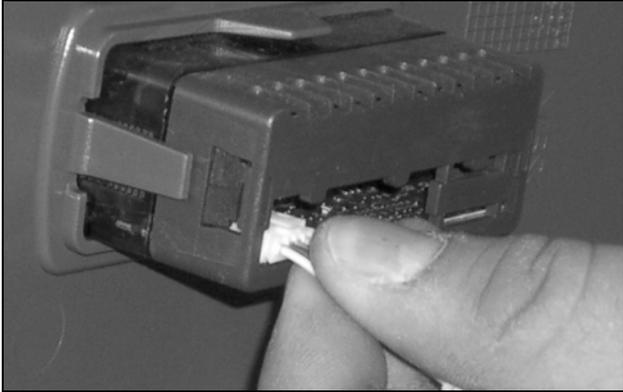


Fig. 39: Disconnect the connector from the display (2)

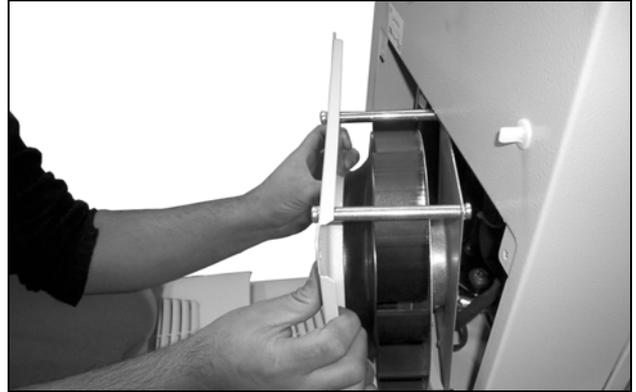


Fig. 42: Remove the fan



Fig. 40: Cooling unit without grille

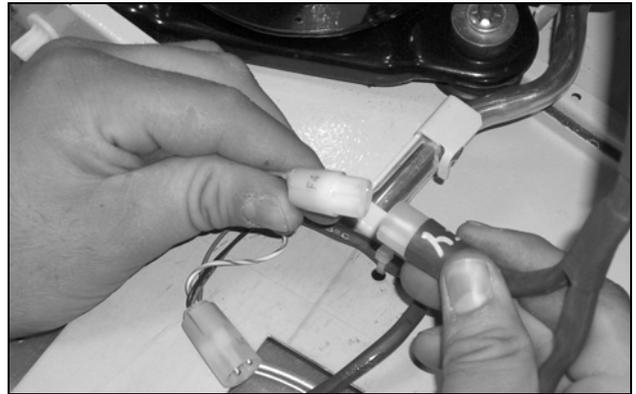


Fig. 43: Disconnect the fan connectors



Fig. 44: Remove the cover (undo the four nuts)



Fig. 41: Remove the external circuit fan (undo four screws)



Fig. 45: Slide the display cable back

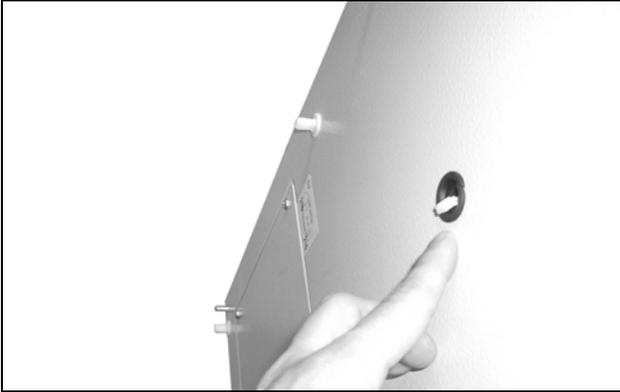


Fig. 46: Push the display cable through the cable gland



Fig. 47: Remove the cover (1)



Fig. 48: Remove the cover (2)

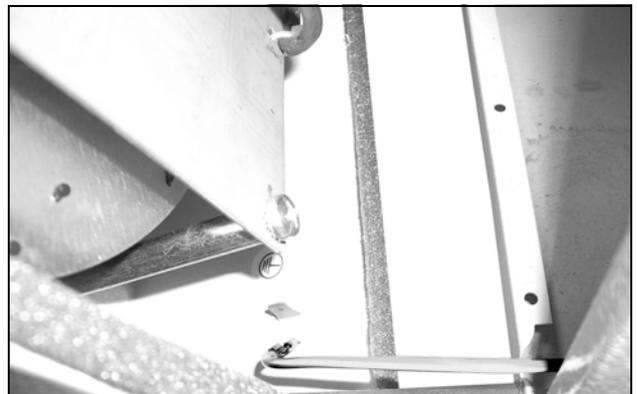


Fig. 49: Release the earthing cable between the cover and the chassis (1)



Fig. 50: Release the earthing cable between the cover and the chassis (2)

7 Inspection and maintenance

EN



Fig. 51: Clean the heat exchanger coil and compressor chamber using compressed air (1)



Fig. 52: Clean the heat exchanger coil and compressor chamber using compressed air (2)

7.2 Compressed air cleaning 3328.xxx, 3329.xxx, 3332.xxx



Fig. 53: Disconnect the mains plug



Fig. 54: Remove the top louvred grille (1)

7 Inspection and maintenance

EN



Fig. 55: Remove the top louvred grille (2)



Fig. 57: Remove the bottom louvred grille (1)



Fig. 56: Remove the top louvred grille (3)



Fig. 58: Remove the bottom louvred grille (2)

7 Inspection and maintenance

EN



Fig. 59: Take off the infill panel



Fig. 60: Disconnect the display cable

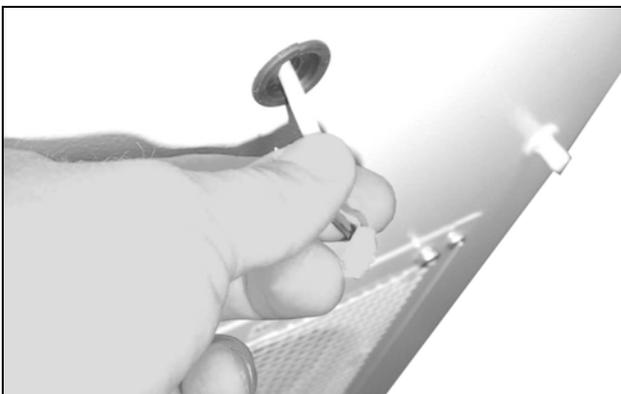


Fig. 61: Slide the display cable back and push it through the cable gland (1)

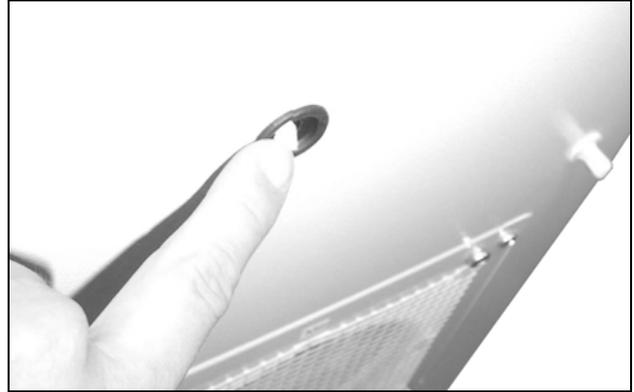


Fig. 62: Slide the display cable back and push it through the cable gland (2)



Fig. 63: Undo the four screws for the external circuit fan



Fig. 64: Remove the external circuit fan



Fig. 65: Disconnect the fan connectors (1)

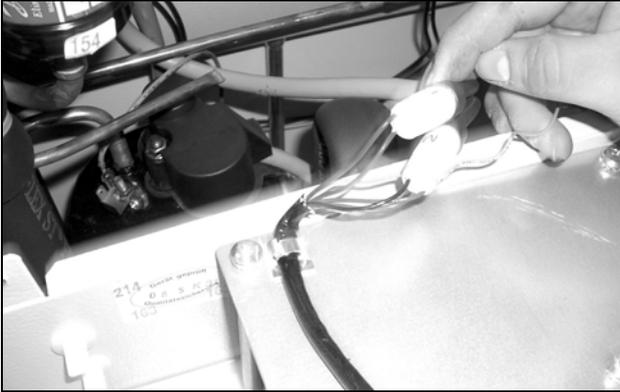


Fig. 66: Disconnect the fan connectors (2)



Fig. 67: Disconnect the fan connectors (3)

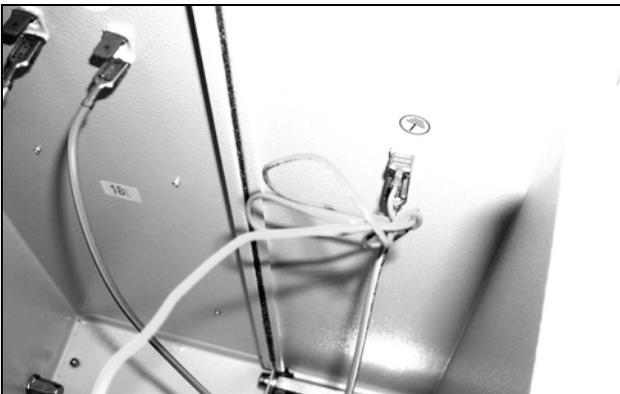


Fig. 68: Disconnect the fan earthing cable (1)



Fig. 69: Disconnect the fan earthing cable (2)



Fig. 70: Undo the four screws for the cover



Fig. 71: Removing the cover

7 Inspection and maintenance

EN



Fig. 72: Disconnect the earthing cable (1)

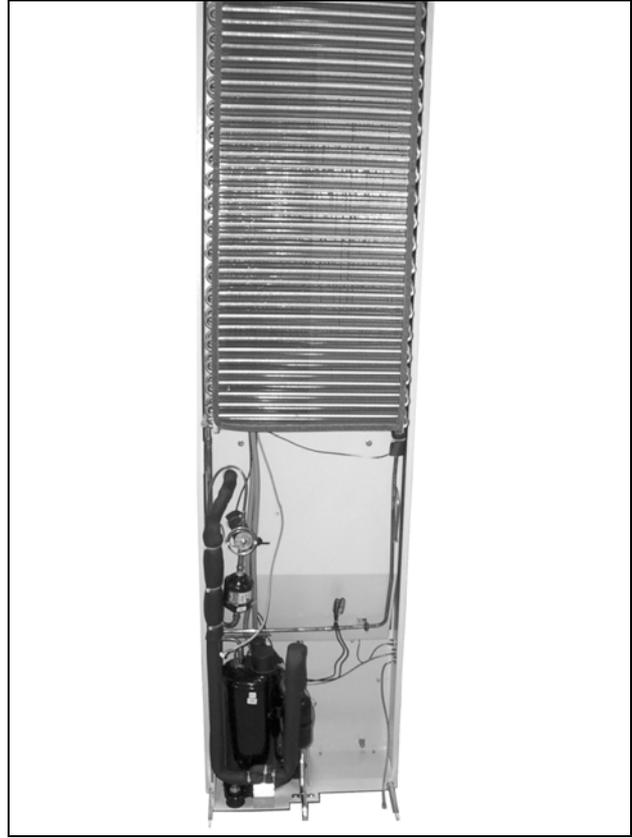


Fig. 74: Clean the heat exchanger coil and compressor chamber using compressed air (1)



Fig. 73: Disconnect the earthing cable (2)



Fig. 75: Clean the heat exchanger coil and compressor chamber using compressed air (2)



Fig. 76: Clean the heat exchanger coil and compressor chamber using compressed air (3)

7.3 Installation instructions for NEMA 4X devices

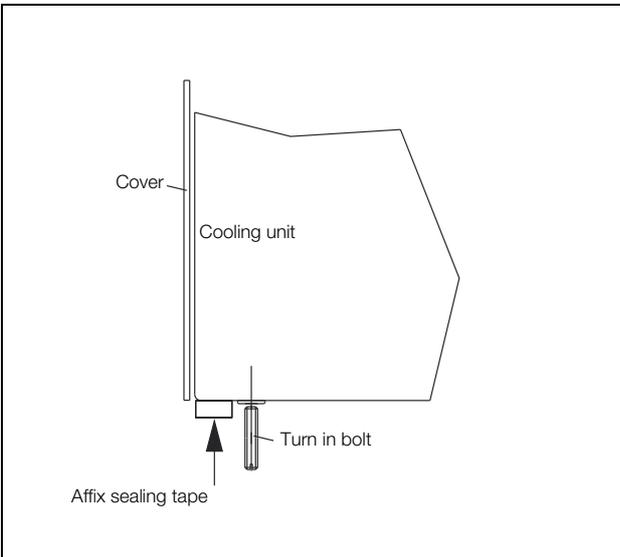


Fig. 77: Preparation

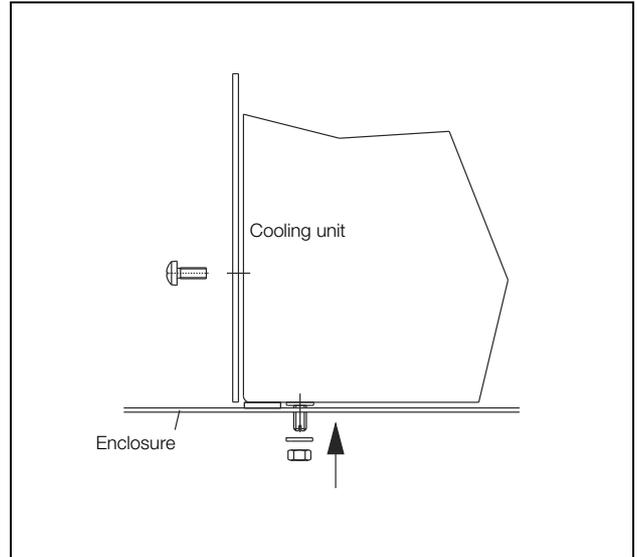


Fig. 78: Device mounting

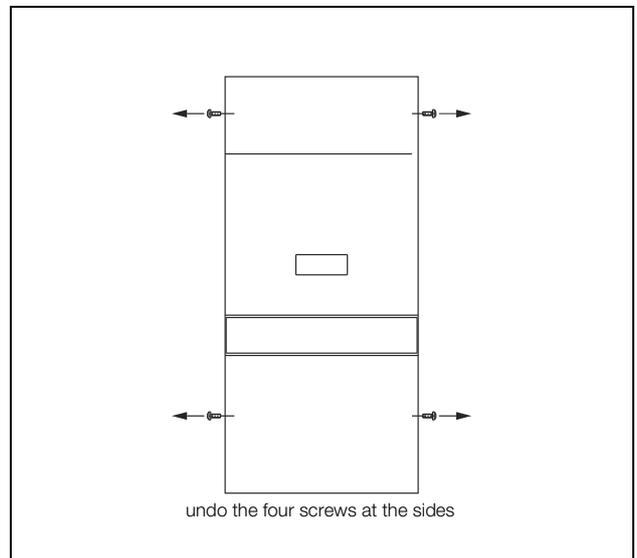


Fig. 79: Remove the cover (1)

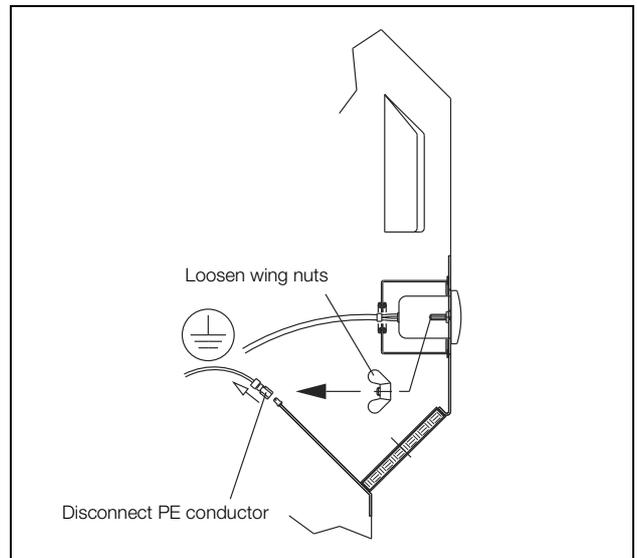


Fig. 80: Remove the cover (2)

| | Unit | Model No. | | | | | | | |
|---|------------------------------------|------------------------|-----------------|------------------------|-----------------|------------------------|-----------------|------------------------|------------------------|
| Basic controller, RAL 7035 | - | 3302.100 | 3302.110 | 3302.300 | 3302.310 | - | - | - | - |
| Basic controller, stainless steel cover | - | 3302.200 | 3302.210 | - | - | - | - | - | - |
| e-Comfort controller, RAL 7035 | - | - | - | - | - | 3303.500 | 3303.510 | 3304.500 | 3304.510 |
| e-Comfort controller, stainless steel cover | - | - | - | - | - | 3303.600 | 3303.610 | 3304.600 | 3304.610 |
| Rated voltage | V Hz | 230, 1~, 50/60 | 115, 1~, 60 | 230, 1~, 50/60 | 115, 1~, 60 | 230, 1~, 50/60 | 115, 1~, 60 | 230, 1~, 50/60 | 115, 1~, 50/60 |
| Rated current | A | 1.6/1.7 | 3.3 | 1.6/1.7 | 4.0 | 2.6/2.6 | 5.7 | 3.9/4.3 | 8.0/8.8 |
| Start-up current | A | 3.0/3.4 | 8.0 | 4.3/5.3 | 12.0 | 5.1/6.4 | 11.5 | 12.0/14.0 | 26.0/28.0 |
| Pre-fuse T | A | 10.0 | 10.0 | 10.0 | 10.0 | 10.0 | 10.0 | 10.0 | - |
| Circuit-breaker | A | - | - | - | - | - | - | - | - |
| Transformer circuit-breaker | A | - | - | - | - | - | - | - | 11.0...16.0 |
| Miniature circuit-breaker or gG slow fuse (T) | - | ■ | ■ | ■ | ■ | ■ | ■ | ■ | - |
| Total cooling output P _c to DIN EN 14511 | L 35 L 35 L 35 L 50 kW kW | 0.36/0.38 0.21/0.23 | 0.38 0.23 | 0.36/0.38 0.21/0.23 | 0.38 0.23 | 0.55/0.66 0.33/0.40 | 0.66 0.40 | 1.10/1.25 0.91/0.90 | 1.10/1.25 0.91/0.90 |
| Sensible cooling output P _s to DIN EN 14511 | L 35 L 35 kW | 0.32/0.33 | 0.33 | 0.32/0.33 | 0.33 | 0.42/0.50 | 0.50 | 0.99/1.12 | 0.99/1.12 |
| Rated output P _{el} to DIN EN 14511 | L 35 L 35 L 35 L 50 kW kW | 0.27/0.28 0.28/0.30 | 0.32 0.37 | 0.27/0.29 0.31/0.33 | 0.32 0.37 | 0.39/0.41 0.45/0.42 | 0.50 0.53 | 0.64/0.68 0.71/0.81 | 0.64/0.68 0.71/0.81 |
| Energy efficiency ratio (EER) 50Hz | L 35 L 35 | 1.30 | 1.18 | 1.34 | 1.18 | 1.40 | 1.40 | 1.83 | 1.83 |
| Refrigerant - Type - Filling | - g | R134a 100 | R134a 100 | R134a 100 | R134a 95 | R134a 170 | R134a 170 | R134a 325 | R134a 325 |
| GWP | - | 1430 | | | | | | | |
| CO ₂ e | t | 0.14 | 0.14 | 0.14 | 0.13 | 0.24 | 0.24 | 0.46 | 0.46 |
| Permissible pressure | MPa | HP 2.5 LP 1.6 | | | | HP 2.8 LP 1.6 | | | |
| Operating temperature range | °C | +10...+55 | | | | | | | |
| Setting range | °C | +30...+55 | | | | +20...+55 | | | |
| Noise level | dB (A) | ≤ 61 | | | | | | ≤ 64 | |
| Protection category to IEC 60 529 - Internal circuit - External circuit | - - | IP 54 IP 34 | | | | | | | |
| UL-Type rating | - | 12 | | | | | | | |
| Dimensions (W x H x D) | mm | 280 x 550 x 140 | | 525 x 340 x 153 | | 280 x 550 x 210 | | 400 x 950 x 260 | |
| Weight | kg | 13 | 13 | 13 | 13 | 17 | 17 | 39 | 44 |

9 Technical details

EN

| | Unit | Model No. | | | |
|---|------------------------------------|-----------------------------|------------------------|------------------------|-----------------------------|
| e-Comfort controller, RAL 7035 | – | 3304.540 | 3305.500 | 3305.510 | 3305.540 |
| e-Comfort controller, stainless steel cover | – | 3304.640 | 3305.600 | 3305.610 | 3305.640 |
| Rated voltage | V, Hz | 400, 3~, 50/ 460, 3~, 60 | 230, 1~, 50/60 | 115, 1~, 50/60 | 400, 3~, 50/ 460, 3~, 60 |
| Rated current | A | 2.2/2.1 | 5.5/5.8 | 11.5/12.5 | 2.5/2.8 |
| Start-up current | A | 11.5/12.7 | 12.0/14.0 | 26.0/28.0 | 12.2/11.3 |
| Pre-fuse T | A | – | 16.0 | – | – |
| Circuit-breaker | A | 6.3...10.0 | – | – | 6.3...10.0 |
| Transformer circuit-breaker | A | – | – | 14.0...20.0 | – |
| Miniature circuit-breaker or gG slow fuse (T) | – | – | ■ | – | – |
| Total cooling output P _c to DIN EN 14511 | L 35 L 35 L 35 L 50 kW kW | 1.10/1.25 0.98/0.90 | 1.60/1.76 1.25/1.37 | 1.60/1.76 1.25/1.37 | 1.60/1.61 1.33/1.35 |
| Sensible cooling output P _s to DIN EN 14511 | L 35 L 35 kW | 0.94/1.07 | 1.29/1.42 | 1.29/1.42 | 1.25/1.25 |
| Rated output P _{el} to DIN EN 14511 | L 35 L 35 L 35 L 50 kW kW | 0.64/0.79 0.73/0.90 | 0.87/0.98 1.03/1.15 | 0.87/0.98 1.03/1.15 | 0.90/1.08 1.06/1.25 |
| Energy efficiency ratio (EER) 50Hz | L 35 L 35 | 1.72 | 1.83 | 1.83 | 1.83 |
| Refrigerant | – Type – Filling g | R134a 325 | R134a 500 | R134a 500 | R134a 500 |
| GWP | – | 1430 | | | |
| CO ₂ e | t | 0.46 | 0.72 | 0.72 | 0.72 |
| Permissible pressure | MPa | HP 2.8 LP 1.6 | | | |
| Operating temperature range | °C | +10...+55 | | | |
| Setting range | °C | +20...+55 | | | |
| Noise level | dB (A) | ≤ 69 | ≤ 64 | | ≤ 69 |
| Protection category to IEC 60 529 | – | IP 54 | | | |
| – Internal circuit | – | IP 34 | | | |
| – External circuit | – | | | | |
| UL-Type rating | – | 12 | | | |
| Dimensions (W x H x D) | mm | 400 x 950 x 260 | | | |
| Weight | kg | 40 | 41 | 46 | 42 |

| | Unit | Model No. | | | | |
|---|------------------------|-----------------|------------------------|-------------------------|------------------------|------------------------|
| | | 3328.500 | 3328.510 | 3328.540 | 3329.500 | |
| e-Comfort controller, RAL 7035 | - | 3328.500 | 3328.510 | 3328.540 | 3329.500 | |
| e-Comfort controller, stainless steel cover | - | 3328.600 | 3328.610 | 3328.640 | 3329.600 | |
| Rated voltage | V, Hz | 230, 1~, 50/60 | 115, 1~, 50/60 | 400, 3~, 50/460, 3~, 60 | 230, 1~, 50/60 | |
| Rated current | A | 5,8/6.8 | 13.4/14.8 | 2.2/2.2 | 7,9/9.3 | |
| Start-up current | A | 20.0/22.0 | 27.0/27.0 | 6.8/7.8 | 25.0/22.0 | |
| Pre-fuse T | A | 16.0 | - | - | 16.0 | |
| Circuit-breaker | A | - | - | 6.3...10.0 | - | |
| Transformer circuit-breaker | A | - | 18.0...25.0 | - | - | |
| Miniature circuit-breaker or gG slow fuse (T) | - | ■ | - | - | ■ | |
| Total cooling power P _c to DIN EN 14511 | L 35 L 35 L 35 L 50 | kW kW | 2.10/2.44 1.6/1.85 | 2.10/2.44 1.6/1.85 | 2.05/2.25 1.6/1.88 | 2.55/2.71 1.8/1.8 |
| Sensible cooling output P _s to DIN EN 14511 | L 35 L 35 | kW | 1.83/2.12 | 1.83/2.12 | 1.86/2.15 | 2.19/2.33 |
| Rated output P _{el} to DIN EN 14511 | L 35 L 35 L 35 L 50 | kW kW | 0.86/1.04 1.02/1.23 | 0.86/1.04 1.02/1.23 | 0.92/1.15 1.15/1.30 | 1.21/1.35 1.41/1.64 |
| Energy efficiency ratio (EER) 50Hz | L 35 L 35 | | 2.40 | 2.40 | 2.40 | 2.11 |
| Refrigerant | - Type - Filling | - g | R134a 950 | R134a 950 | R134a 950 | R134a 950 |
| GWP | - | | 1430 | | | |
| CO ₂ e | t | | 1.36 | 1.36 | 1.36 | 1.36 |
| Permissible pressure | MPa | | HP 2.8 LP 1.6 | | | |
| Operating temperature range | °C | | +10...+55 | | | |
| Setting range | °C | | +20...+55 | | | |
| Noise level | dB (A) | ≤ 68 | ≤ 69 | | 72 | |
| Protection category to IEC 60 529 | | | | IP 54 | | |
| - Internal circuit | - | | | IP 34 | | |
| - External circuit | - | | | | | |
| UL-Type rating | - | | 12 | | | |
| Dimensions (W x H x D) | mm | | 400 x 1580 x 295 | | | |
| Weight | kg | 66 | 73 | 67 | 69 | |

9 Technical details

EN

| | Unit | Model No. | | | | | |
|--|------------------------------------|------------------------|-------------------------|-------------------------|------------------------|-----------------|------------------------|
| e-Comfort controller, RAL 7035 | – | 3329.510 | 3329.540 | 3332.540 | 3361.500 | 3361.510 | 3361.540 |
| e-Comfort controller, stainless steel cover | – | 3329.610 | 3329.640 | 3332.640 | 3361.600 | 3361.610 | 3361.640 |
| Rated voltage | V, Hz | 115, 1~, 50/60 | 400, 3~, 50/460, 3~, 60 | 400, 3~, 50/460, 3~, 60 | 230, 1~, 50/60 | 115, 1~, 60 | 400, 2~, 50/60 |
| Rated current | A | 17.0/22.0 | 3.3/3.4 | 4.2/4.2 | 2.7/2.7 | 5.3 | 1.2/1,4 |
| Start-up current | A | 44.0/42.0 | 6.8/7.6 | 9.2/11.0 | 6.0/9.6 | 12.0 | 6.0/9.6 |
| Pre-fuse T | A | – | – | – | 10.0 | 10.0 | – |
| Circuit-breaker | A | – | 6.3...10.0 | 6.3...10.0 | – | – | – |
| Transformer circuit-breaker | A | 18.0...25.0 | – | – | – | – | 6.3...10.0 |
| Miniature circuit-breaker or gG slow fuse (T) | – | – | – | – | ■ | ■ | – |
| Total cooling output P _c to DIN EN 14511 | L 35 L 35 L 35 L 50 kW kW | 2.55/2.71 1.80/1.8 | 2.55/2.75 1.95/2.00 | 3.95/4.35 3.02/3.52 | 0.85/0.89 0.67/0.67 | 0.89 0.67 | 0.85/0.89 0.67/0.67 |
| Sensible cooling output P _s to DIN EN 14511 | L 35 L 35 kW | 2.19/2.33 | 2.03/2.19 | 3.25/3.58 | 0.70/0.73 | 0.70 | 0.70/0.73 |
| Rated output P _{el} to DIN EN 14511 | L 35 L 35 L 35 L 50 kW kW | 1.21/1.35 1.41/1.64 | 1.19/1.39 1.45/1.75 | 1.60/2.00 1.87/2.34 | 0.40/0.43 0.47/0.50 | 0.55 0.66 | 0.40/0.43 0.47/0.50 |
| Energy efficiency ratio (EER) 50Hz | L 35 L 35 | 2.11 | 2.11 | 2.47 | 2.08 | 1.59 | 2.08 |
| Refrigerant | – Type – Filling g | R134a 950 | R134a 950 | R134a 2995 | R134a 280 | R134a 260 | R134a 280 |
| GWP | – | 1430 | | | | | |
| CO ₂ e | t | 1.36 | 1.36 | 4.28 | 0.40 | 0.37 | 0.40 |
| Permissible pressure | MPa | HP 2.8 LP 1.6 | | | | | |
| Operating temperature range | °C | +10...+55 | | | | | |
| Operating temperature 60 Hz | °C | +10...+55 | | | +10...+53 | +10...+52 | +10...+53 |
| Setting range | °C | +20...+55 | | | | | |
| Noise level | dB (A) | 72 | ≤ 69 | ≤ 66 | ≤ 64 | | |
| Protection category to IEC 60 529 | – | IP 54 | | | | | |
| – Internal circuit | – | IP 34 | | | | | |
| – External circuit | – | | | | | | |
| UL-Type rating | – | 12 | | | | | |
| Dimensions (W x H x D) | mm | 400 x 1580 x 295 | | 500 x 1580 x 340 | 280 x 550 x 280 | | |
| Weight | kg | 76 | 70 | 91 | 22 | 22 | 22 |

| | Unit | Model No. | | |
|--|------------------------|---|--------------------------|--------------------------|
| e-Comfort controller, RAL 7035 | – | 3366.500/3377.500 | 3366.510/3377.510 | 3366.540/3377.540 |
| e-Comfort controller, stainless steel cover | – | 3366.600/3377.600 | 3366.610/3377.610 | 3366.640/3377.640 |
| Rated voltage | V, Hz | 230, 1~, 50/60 | 115, 1~, 50/60 | 400, 3~, 50/460, 3~, 60 |
| Rated current | A | 6.7/6.9 | 13.6/13.8 | 2.7/2.9 |
| Start-up current | A | 22.0/24.0 | 43.0/47.0 | 8.0/8.8 |
| Pre-fuse T | A | 10.0 | – | – |
| Circuit-breaker | A | – | – | 6.3...10.0 |
| Transformer circuit-breaker | A | – | 14.0...20.0 | – |
| Miniature circuit-breaker or gG slow fuse (T) | – | ■ | – | – |
| Total cooling power P _c to DIN EN 14511 | L 35 L 35 L 35 L 50 | kW kW | 1.60/1.60 1.15/1.20 | 1.60/1.60 1.15/1.20 |
| Sensible cooling output P _s to DIN EN 14511 | L 35 L 35 | kW | 1.47/1.47 | 1.47/1.47 |
| Rated output P _{el} to DIN EN 14511 | L 35 L 35 L 35 L 50 | kW kW | 0.84/0.97 1.02/1.13 | 0.84/0.97 1.02/1.13 |
| Energy efficiency ratio (EER) 50Hz | L 35 L 35 | | 1.90 | 1.90 |
| Refrigerant | – Type – Filling | – g | R134a 700 | R134a 700 |
| GWP | – | | 1430 | |
| CO ₂ e | t | 1.00 | 1.00 | 1.00 |
| Permissible pressure | MPa | HP 2.8 LP 1.6 | | |
| Operating temperature range | °C | +10...+55 | | |
| Setting range | °C | +20...+55 | | |
| Noise level | dB (A) | 72 | | |
| Protection category to IEC 60 529 | | | | |
| – Internal circuit | – | | IP 54 | |
| – External circuit | – | | IP 34 | |
| UL-Type rating | – | | 12 | |
| Dimensions (W x H x D) | mm | 3366: 435 x 1590 x 204 / 3377: 435 x 1590 x 165 | | |
| Weight | kg | 45 | 49 | 46 |

9 Technical details

EN

| e-Comfort controller, NEMA 4x | Unit | Model No. | | | | | | | | |
|---|------------------------------------|------------------------|----------------|------------------------|------------------------|-----------------------------|------------------------|------------------------|-----------------------------|--|
| | | 3303.504 | 3303.514 | 3304.504 | 3304.514 | 3304.544 | 3305.504 | 3305.514 | 3305.544 | |
| Rated voltage | V Hz | 230, 1~, 50/60 | 115, 1~, 60 | 230, 1~, 50/60 | 115, 1~, 50/60 | 400, 3~, 50/ 460, 3~, 60 | 230, 1~, 50/60 | 115, 1~, 50/60 | 400, 3~, 50/ 460, 3~, 60 | |
| Rated current | A | 2.6/2.6 | 5.7 | 3.9/4.3 | 8.0/8.8 | 2.2/2.1 | 5.5/5.8 | 11.5/12.5 | 2.5/2.8 | |
| Start-up current | A | 5.1/6.4 | 11.5 | 12.0/14.0 | 26.0/28.0 | 11.5/12.7 | 12.0/14.0 | 26.0/28.0 | 12.2/11.3 | |
| Pre-fuse T | A | 10.0 | 10.0 | 10.0 | – | – | 16.0 | – | – | |
| Circuit-breaker | A | – | – | – | – | 6.3...10.0 | – | – | 6.3...10.0 | |
| Transformer circuit-breaker | A | – | – | – | 11.0...16.0 | – | – | 14.0...20.0 | – | |
| Miniature circuit-breaker or gG slow fuse (T) | – | ■ | ■ | ■ | – | – | ■ | – | – | |
| Total cooling output P _c to DIN EN 14511 | L 35 L 35 L 35 L 50 kW kW | 0.55/0.66 0.33/0.40 | 0.66 0.40 | 1.10/1.25 0.91/0.90 | 1.10/1.25 0.91/0.90 | 1.10/1.25 0.98/1.09 | 1.60/1.76 1.25/1.37 | 1.60/1.76 1.25/1.37 | 1.60/1.61 1.33/1.35 | |
| Sensible cooling output P _s to DIN EN 14511 | L 35 L 35 kW | 0.42/0.50 | 0.50 | 0.99/1.12 | 0.99/1.12 | 0.94/1.07 | 1.29/1.42 | 1.29/1.42 | 1.25/1.25 | |
| Rated output P _{el} to DIN EN 14511 | L 35 L 35 L 35 L 50 kW kW | 0.39/0.41 0.42/0.39 | 0.50 0.50 | 0.64/0.68 0.71/0.81 | 0.64/0.68 0.71/0.81 | 0.64/0.79 0.73/0.93 | 0.87/0.98 0.90/1.15 | 0.87/0.98 1.03/1.15 | 0.90/1.08 1.06/1.25 | |
| Energy efficiency ratio (EER) 50Hz | L 35 L 35 | 1.40 | 1.31 | 1.83 | 1.83 | 1.83 | 1.83 | 1.83 | 1.83 | |
| Refrigerant – Type – Filling | – g | R134a 170 | R134a 170 | R134a 325 | R134a 325 | R134a 325 | R134a 500 | R134a 500 | R134a 500 | |
| GWP | – | 1430 | | | | | | | | |
| CO ₂ e | t | 0.24 | 0.24 | 0.46 | 0.46 | 0.46 | 0.72 | 0.72 | 0.72 | |
| Permissible pressure | MPa | HP 2.8 LP 1.6 | | | | | | | | |
| Operating temperature range | °C | +10...+55 | | | | | | | | |
| Setting range | °C | +20...+50 | | | | | | | | |
| Noise level | dB (A) | ≤ 64 | | | | ≤ 69 | ≤ 64 | | ≤ 69 | |
| Protection category to IEC 60 529 – Internal circuit – External circuit | – – | IP 55 IP 34 | | | | | | | | |
| UL-Type rating | – | 4X | | | | | | | | |
| Dimensions (W x H x D) | mm | 285 x 520 x 298 | | | 405 x 1020 x 358 | | | | | |
| Weight | kg | 25 | 25 | 49 | 54 | 50 | 51 | 46 | 52 | |

| | Unit | Model No. | | | | | |
|--|----------|------------------------|------------------------|-----------------------------|------------------------|------------------------|-----------------------------|
| | | 3328.504 | 3328.514 | 3328.544 | 3329.504 | 3329.514 | 3329.544 |
| e-Comfort controller, NEMA 4x | - | | | | | | |
| Rated voltage | V Hz | 230, 1~, 50/60 | 115, 1~, 50/60 | 400, 3~, 50/ 460, 3~, 60 | 230, 1~, 50/60 | 115, 1~, 50/60 | 400, 3~, 50/ 460, 3~, 60 |
| Rated current | A | 5,8/6.8 | 13.4/14.8 | 2.2/2.2 | 7.9/9.3 | 17.0/22.0 | 3.3/3.4 |
| Start-up current | A | 20.0/22.0 | 40.0/38.0 | 6.8/7.8 | 20.0/24.0 | 44.0/42.0 | 6.8/7.6 |
| Pre-fuse T | A | 16.0 | - | - | 16.0 | - | - |
| Circuit-breaker | A | - | - | 6.3...10.0 | - | - | 6.3...10.0 |
| Transformer circuit-breaker | A | - | 18.0...25.0 | - | - | 18.0...25.0 | - |
| Miniature circuit-breaker or gG slow fuse (T) | - | ■ | - | - | ■ | - | - |
| Total cooling output P _c to L 35 L 35 DIN EN 14511 L 35 L 50 | kW kW | 2.1/2.44 1.6/1.85 | 2.1/2.44 1.6/1.85 | 2.05/2.25 1.6/1.8 | 2.55/2.71 1.8/1.8 | 2.55/2.71 1.8/1.8 | 2.55/2.75 1.90/1.95 |
| Sensible cooling output P _s to DIN EN 14511 L 35 L 35 2-19 | kW | 1.83/2.12 | 1.90/2.21 | 1.86/2.15 | 2.19/2.33 | 2.19/2.33 | 2.03/ |
| Rated output P _{el} to L 35 L 35 DIN EN 14511 L 35 L 50 | kW kW | 0.86/1.04 1.02/1.23 | 0.86/1.04 1.02/1.23 | 0.92/1.15 1.15/ 1.30 | 1.21/1.35 1.41/1.64 | 1.21/1.35 1.41/1.64 | 1.19/1.39 1.44/1.75 |
| Energy efficiency ratio (EER) 50Hz L 35 L 35 | | 2.30 | 2.30 | 2,25 | 2.11 | 2.11 | 2.11 |
| Refrigerant - Type - Filling | - g | R134a 900 | R134a 900 | R134a 900 | R134a 900 | R134a 900 | R134a 900 |
| GWP | - | 1430 | | | | | |
| CO ₂ e | t | 1.29 | 1.29 | 1.29 | 1.29 | 1.29 | 1.29 |
| Permissible pressure | MPa | HP 2.8 LP 1.6 | | | | | |
| Operating temperature range | °C | +10...+50 | | | | | |
| Setting range | °C | +20...+50 | | | | | |
| Noise level | dB (A) | ≤ 68 | | ≤ 69 | 72 | | ≤ 69 |
| Protection category to IEC 60 529 - Internal circuit - External circuit | - - | IP 55 IP 34 | | | | | |
| UL-Type rating | - | 4X | | | | | |
| Dimensions (W x H x D) | mm | 405 x 1650 x 388 | | | | | |
| Weight | kg | 80 | 87 | 81 | 83 | 90 | 84 |

9.2 Performance diagrams

The performance diagrams can be found on the Rittal homepage:

http://www.rittal.com/imf/none/3_5132/Rittal_3303500_Kennlinienfelder_3_5132

10 List of spare parts

EN

10 List of spare parts

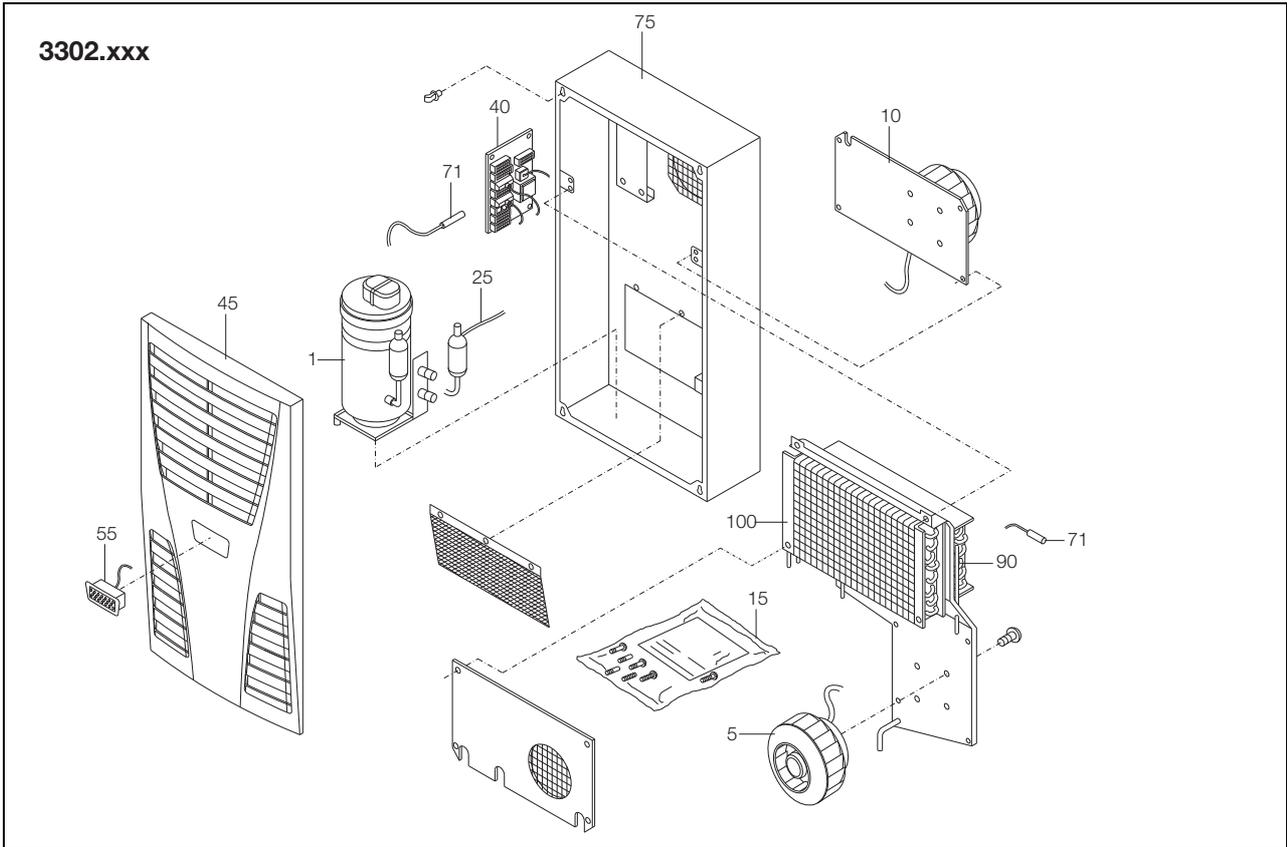


Fig. 84: Spare parts for 3302.xxx

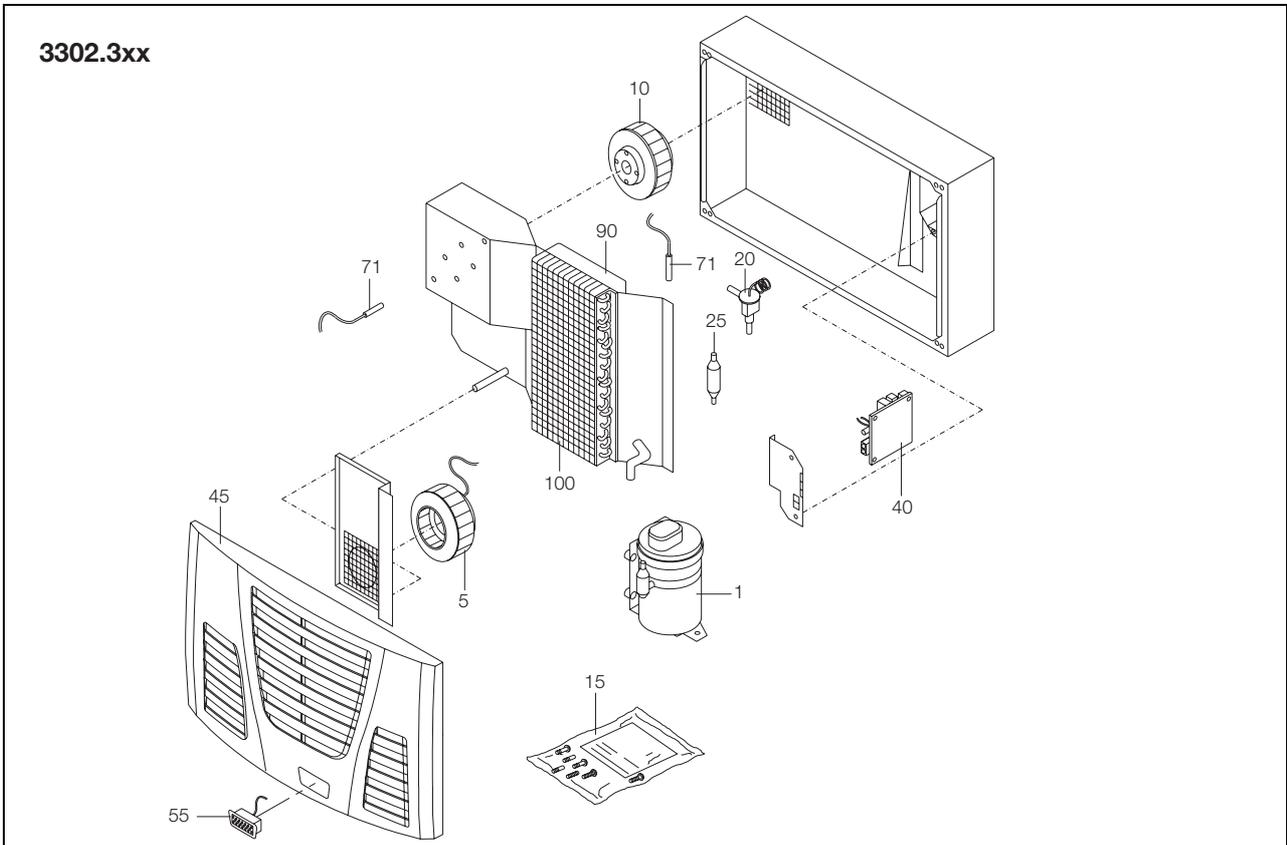


Fig. 85: Spare parts for 3302.3xx

10 List of spare parts

EN

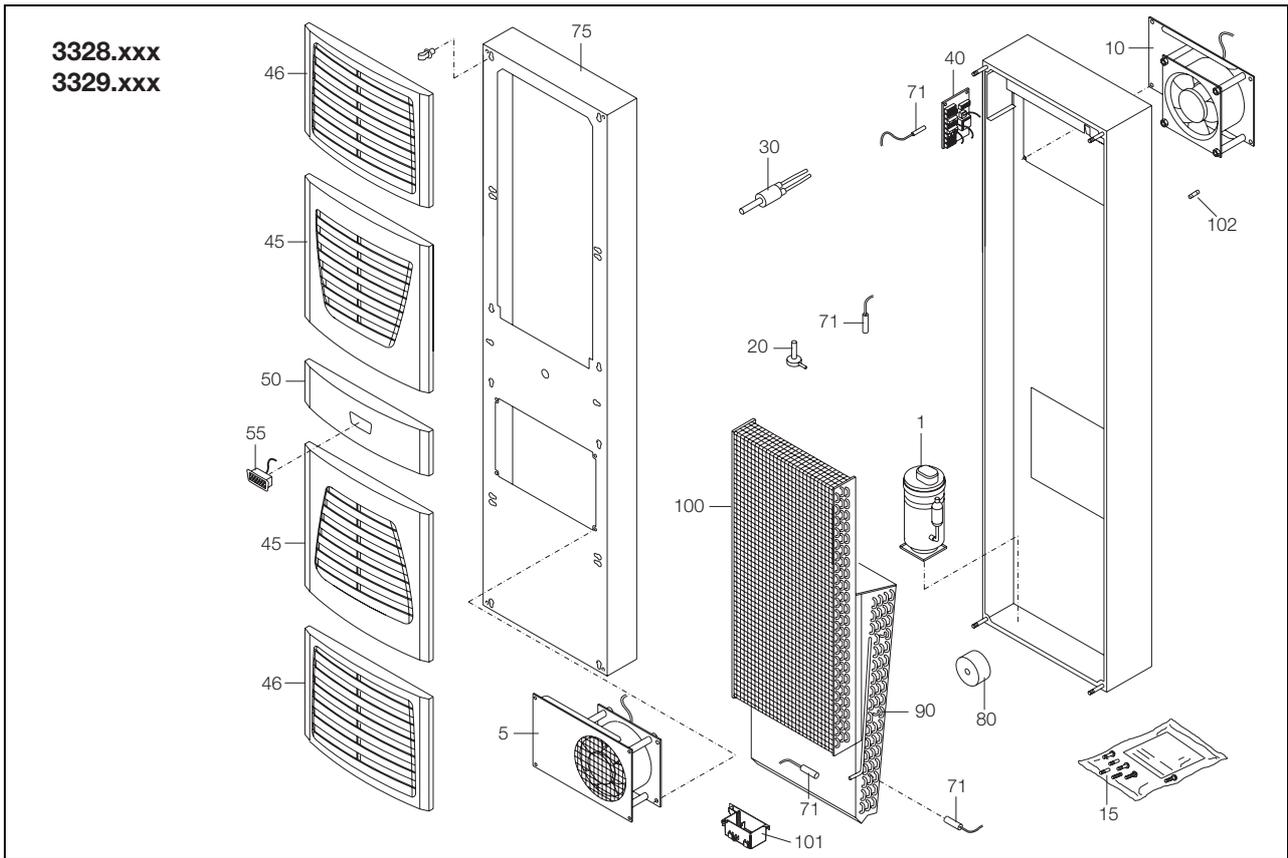


Fig. 88: Spare parts for 3328.xxx, 3329.xxx

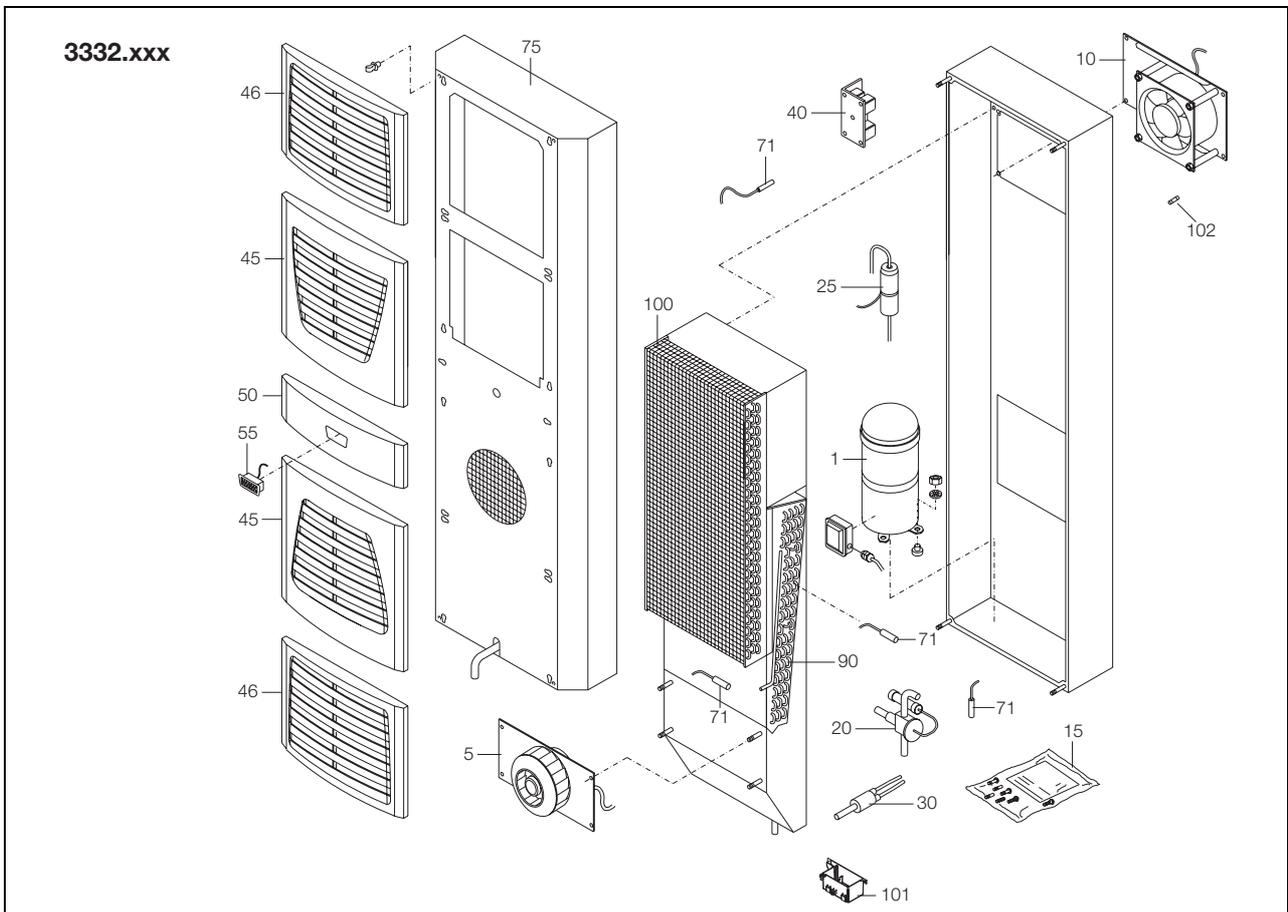


Fig. 89: Spare parts for 3332.xxx

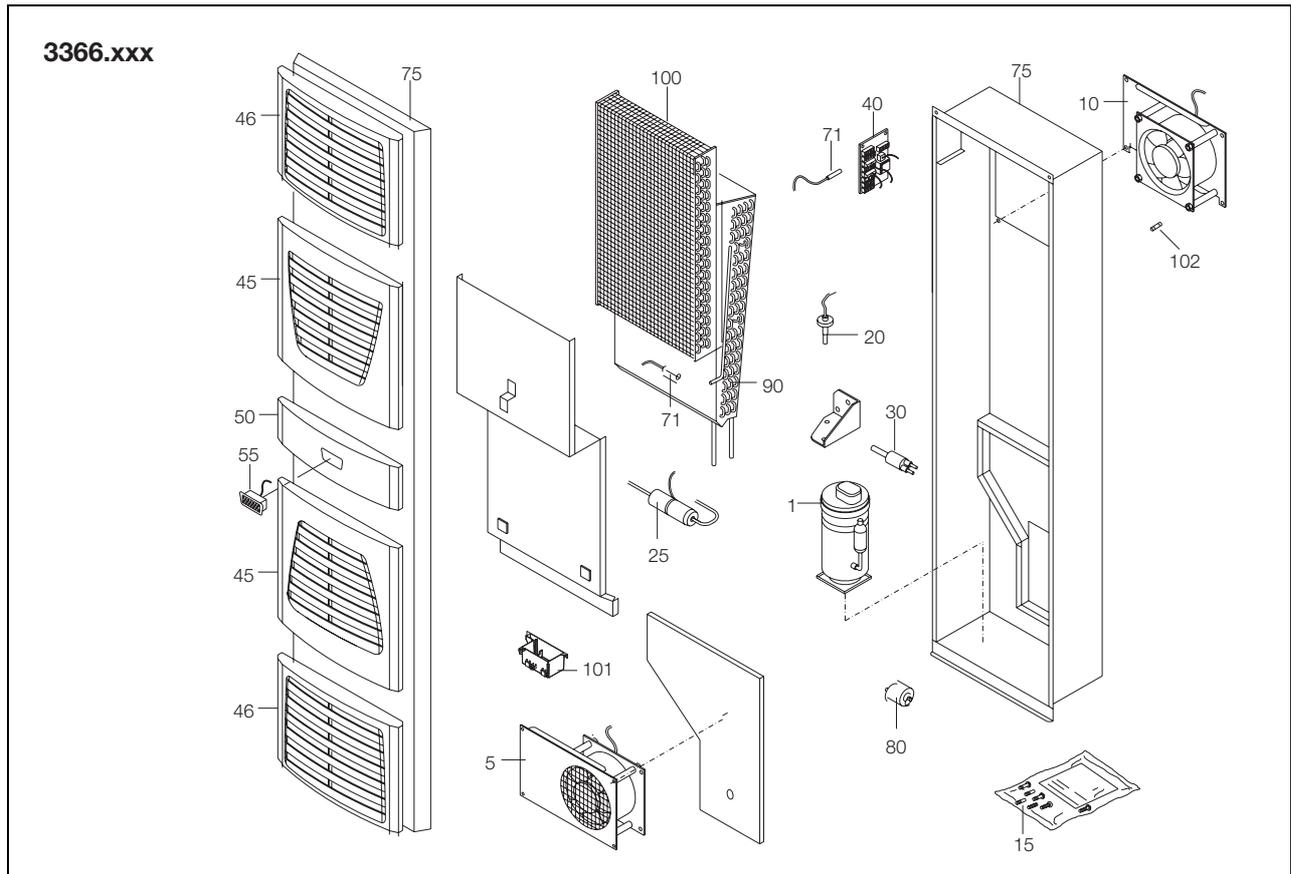


Fig. 90: Spare parts for 3366.xxx

Key

- 1 Compressor
- 5 Condenser fan
- 10 Evaporator fan
- 15 Dispatch bag
- 20 Expansion valve
- 25 Filter dryer
- 30 PSA^H pressure switch
- 40 Controller board
- 45 Louvred grille 1
- 46 Louvred grille 2
- 50 Infill panel
- 55 Display
- 71 Temperature sensor
- 75 Enclosure tray
- 80 Transformer
- 90 Evaporator coil
- 100 Condenser
- 101 Condensate evaporator
- 102 Miniature fuse, condensate evaporator (T4A; 6.3 x 32 mm)



Note:

As well as the spare part number, when ordering spare parts the following information must be provided:

- Unit model
- Fabrication number
- Date of manufacture

This information may be found on the rating plate.

11 Appendix

11.1 Cut-out and hole sizes

11.1.1 Dimensions for external mounting

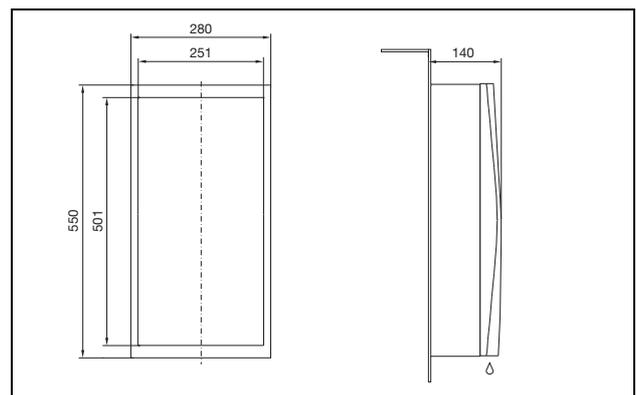


Fig. 91: 3302.xxx external mounting (except 3302.3xx)

11 Appendix

EN

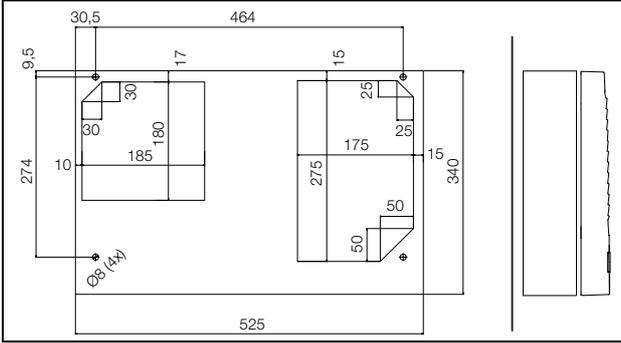


Fig. 92: 3302.3xx external mounting

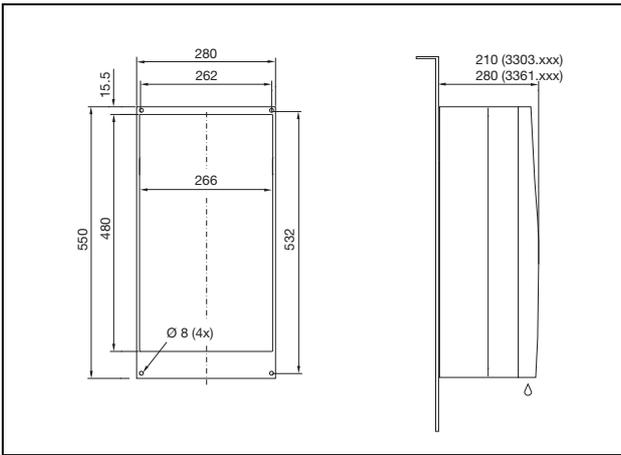


Fig. 93: 3303.xxx, 3361.xxx external mounting (except NEMA 4X devices)

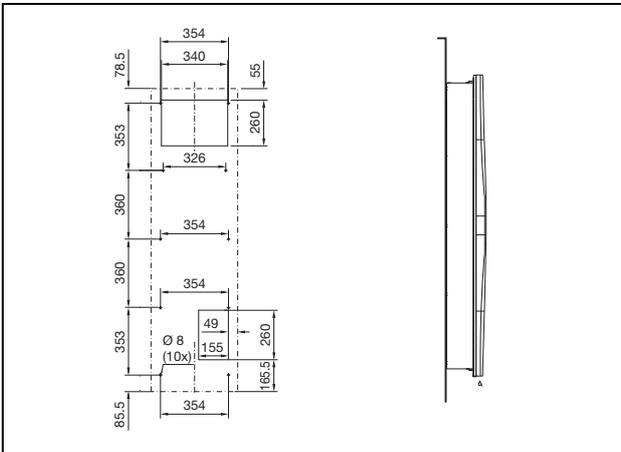


Fig. 94: 3366.xxx external mounting

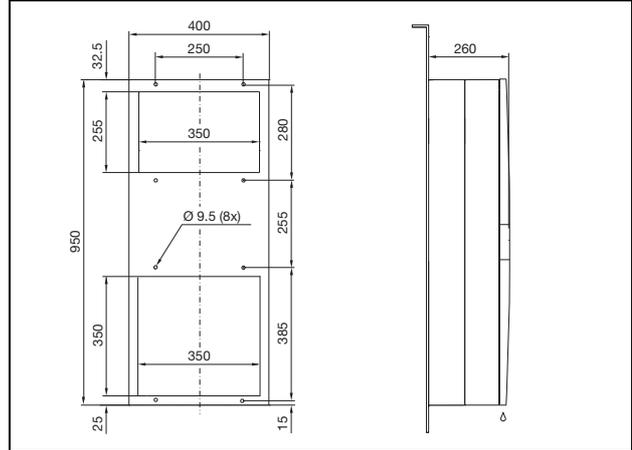


Fig. 95: 3304.xxx, 3305.xxx external mounting (except NEMA 4X devices)

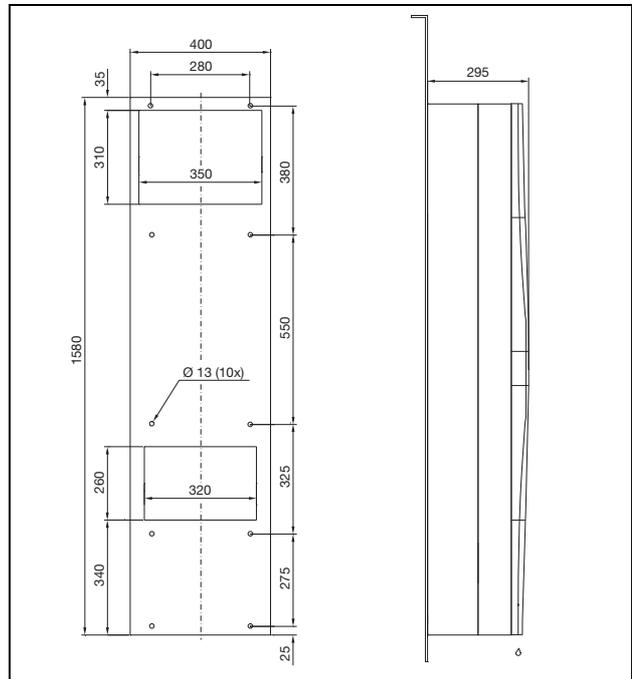


Fig. 96: 3328.xxx, 3329.xxx external mounting (except NEMA 4X devices)

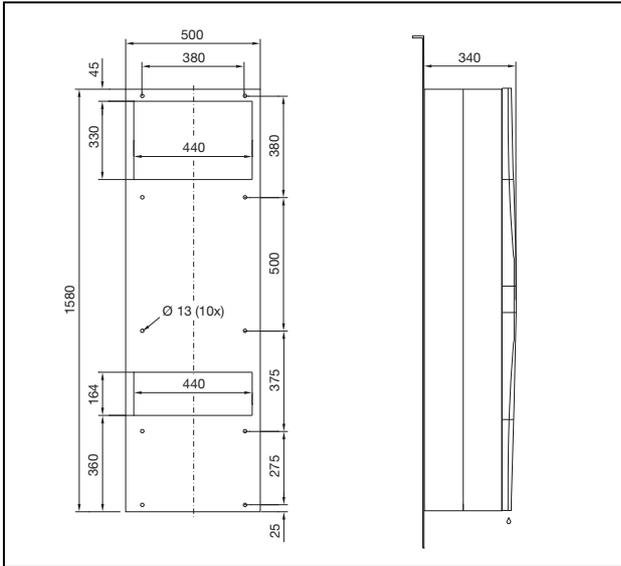


Fig. 97: 3332.xxx external mounting

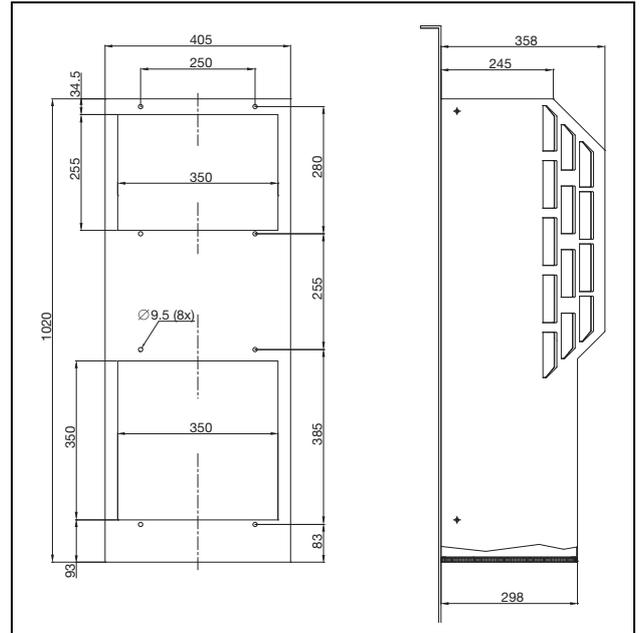


Fig. 99: 3304-5.5x4

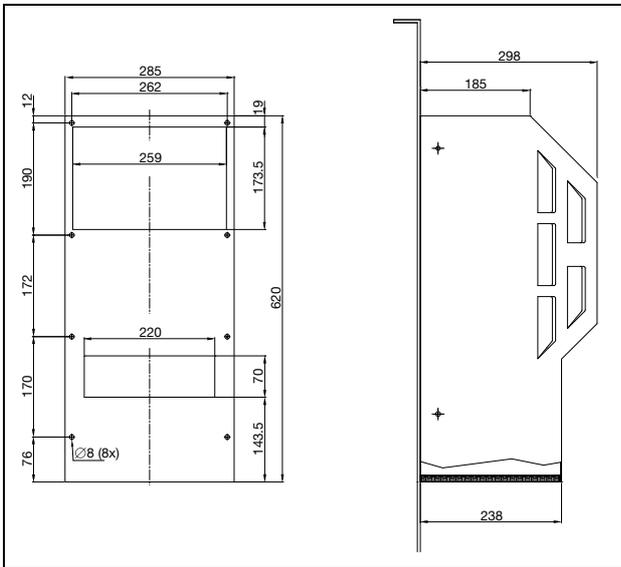


Fig. 98: 3303.xx4

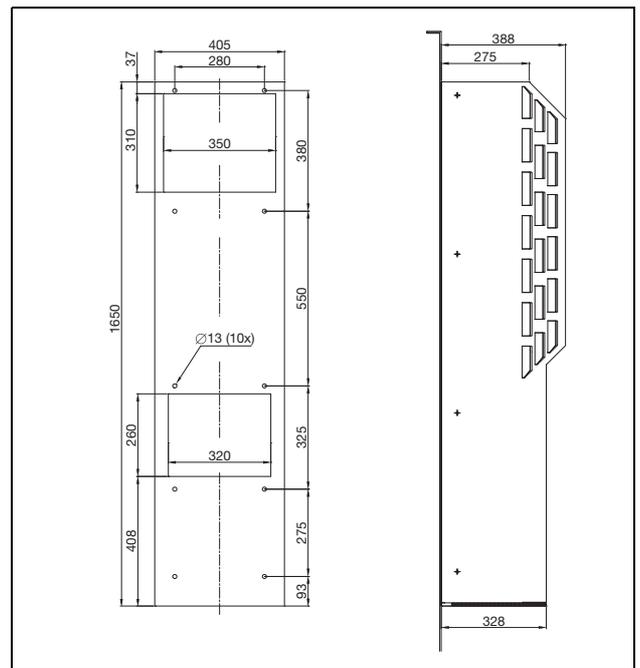


Fig. 100: 3328-29.5x4

11 Appendix

EN

11.1.2 Dimensions for partial internal mounting

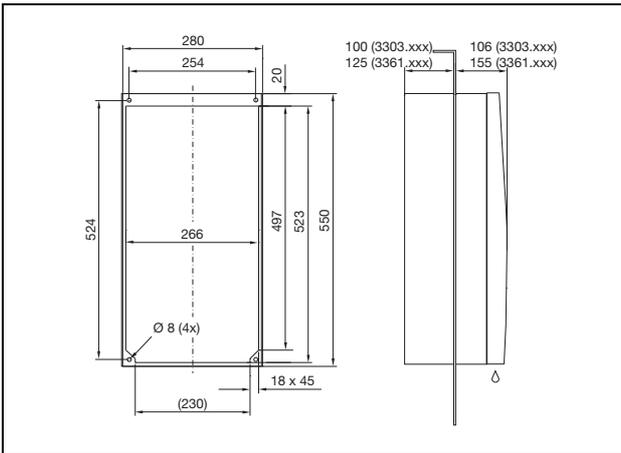


Fig. 101: 3303.xxx, 3361.xxx partial internal mounting

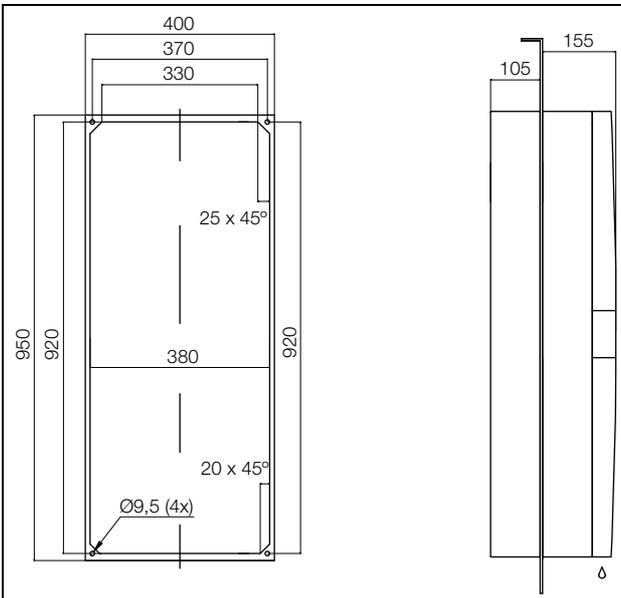


Fig. 102: 3304.xxx, 3305.xxx partial internal mounting

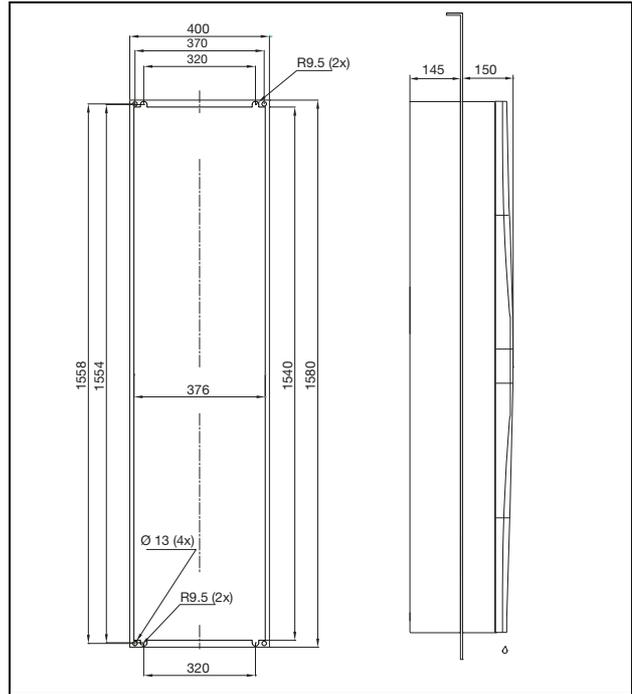


Fig. 103: 3328.xxx, 3329.xxx partial internal mounting

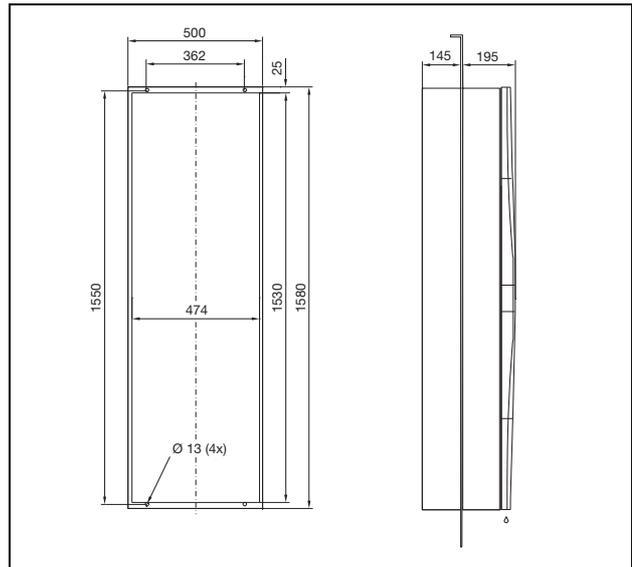


Fig. 104: 3332.xxx partial internal mounting

11.1.3 Dimensions for full internal mounting

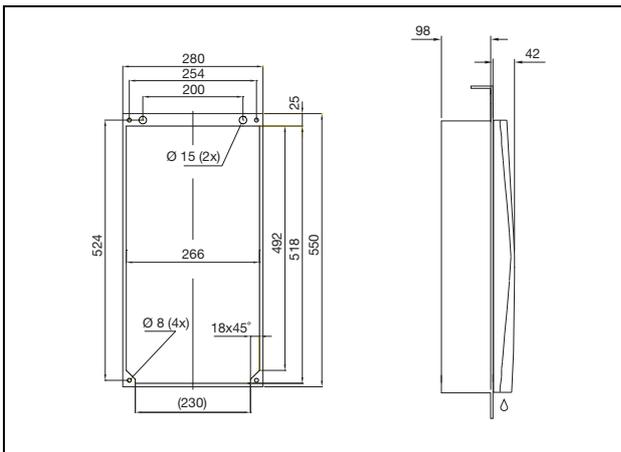


Fig. 105: 3302.xxx full internal mounting (except 3302.3xx)

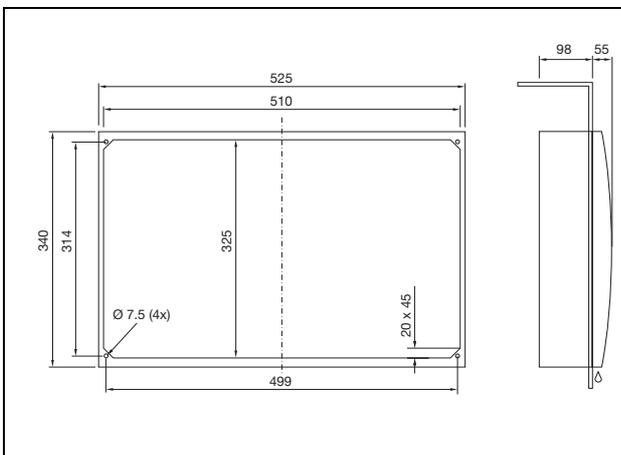


Fig. 106: 3302.3xx full internal mounting

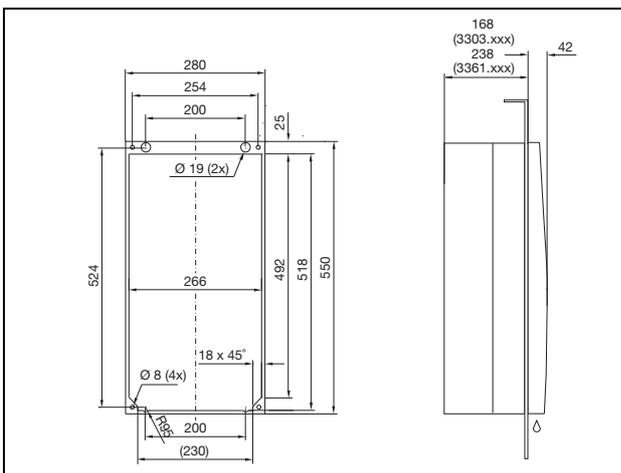


Fig. 107: 3303.xxx, 3361.xxx full internal mounting

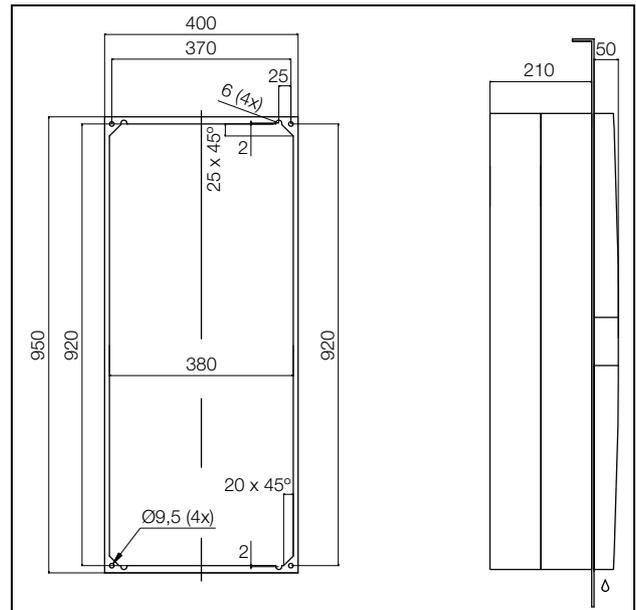


Fig. 108: 3304.xxx, 3305.xxx full internal mounting

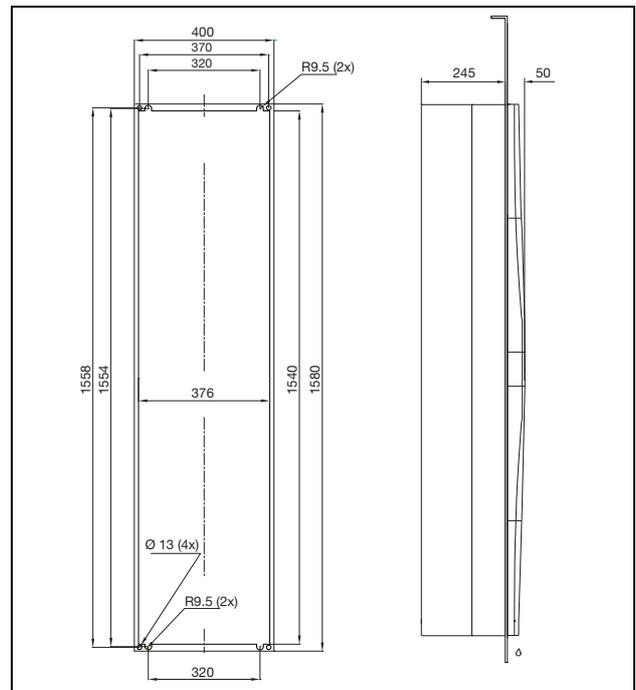


Fig. 109: 3328.xxx, 3329.xxx full internal mounting

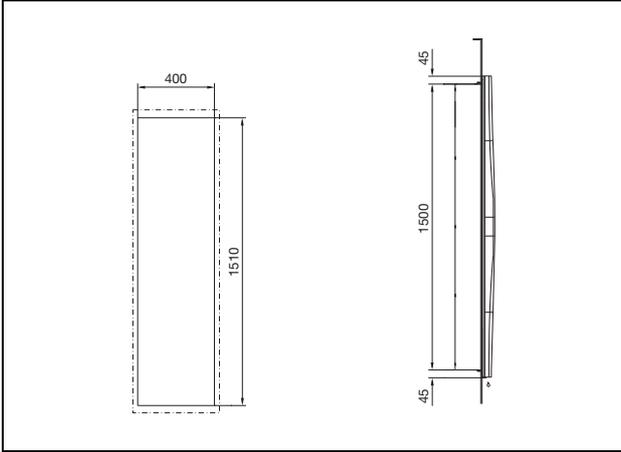


Fig. 110: 3366.xxx full internal mounting

11.2 Electrical wiring plan

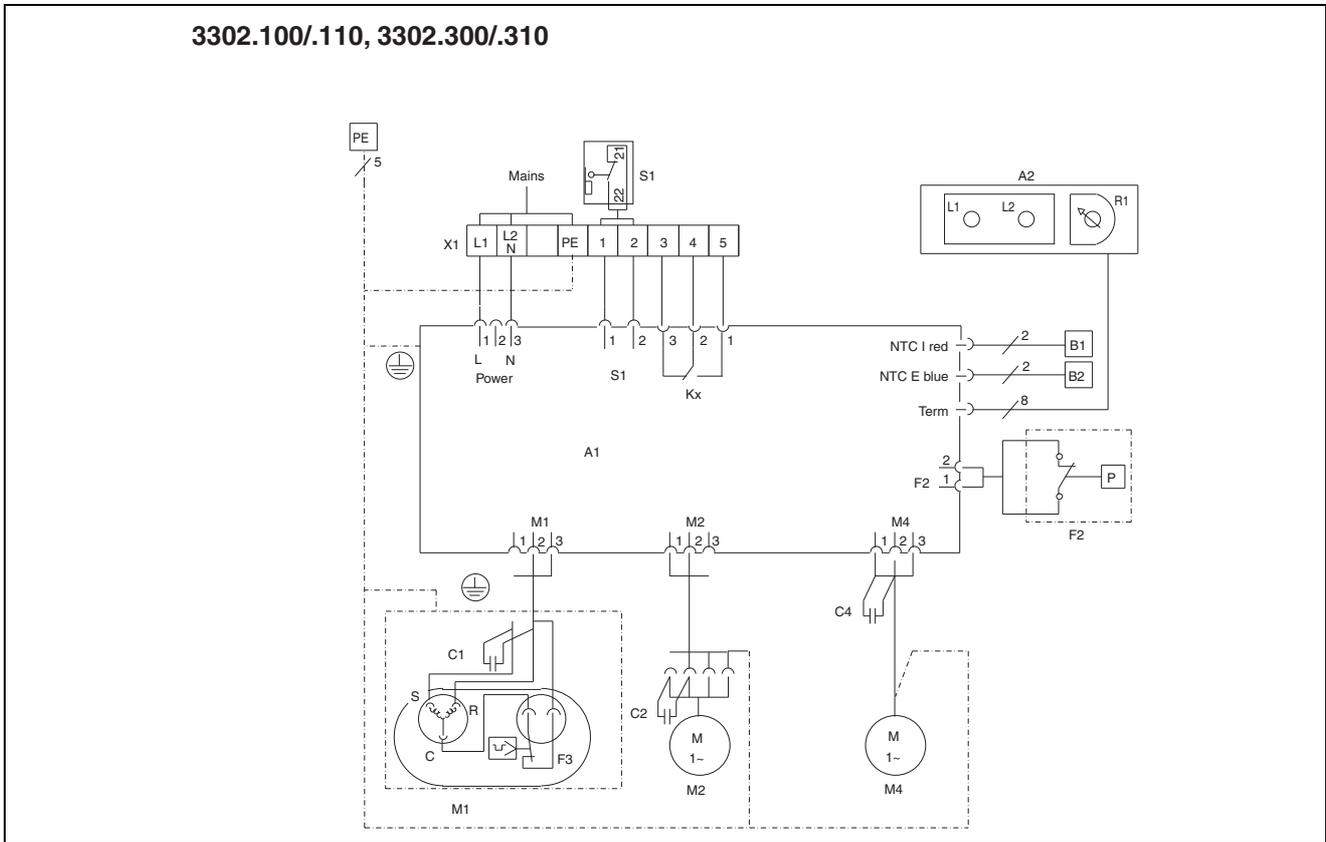


Fig. 111: Electrical wiring plan no. 1

3303.500/510, 3303.600/610, 3361.500/510, 3361.600/610

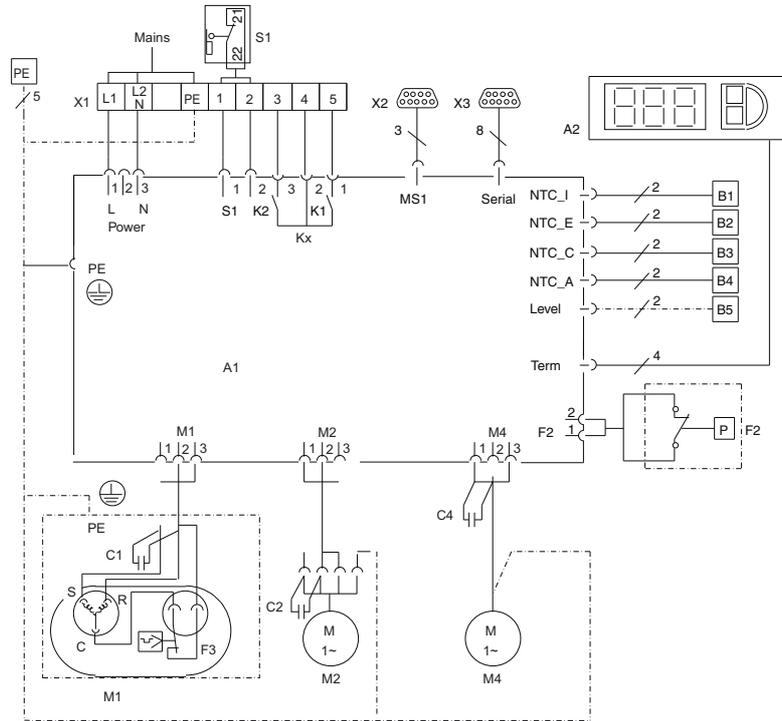


Fig. 112: Electrical wiring plan no. 2

3361.540/640

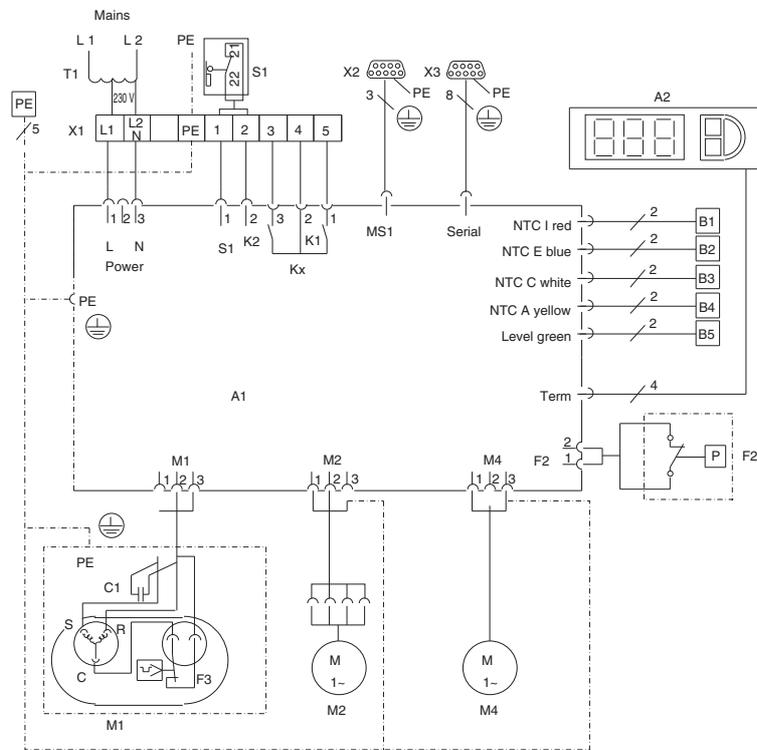


Fig. 113: Electrical wiring plan no. 3

3304.500/.600/.510/.520/.504/.514/.610

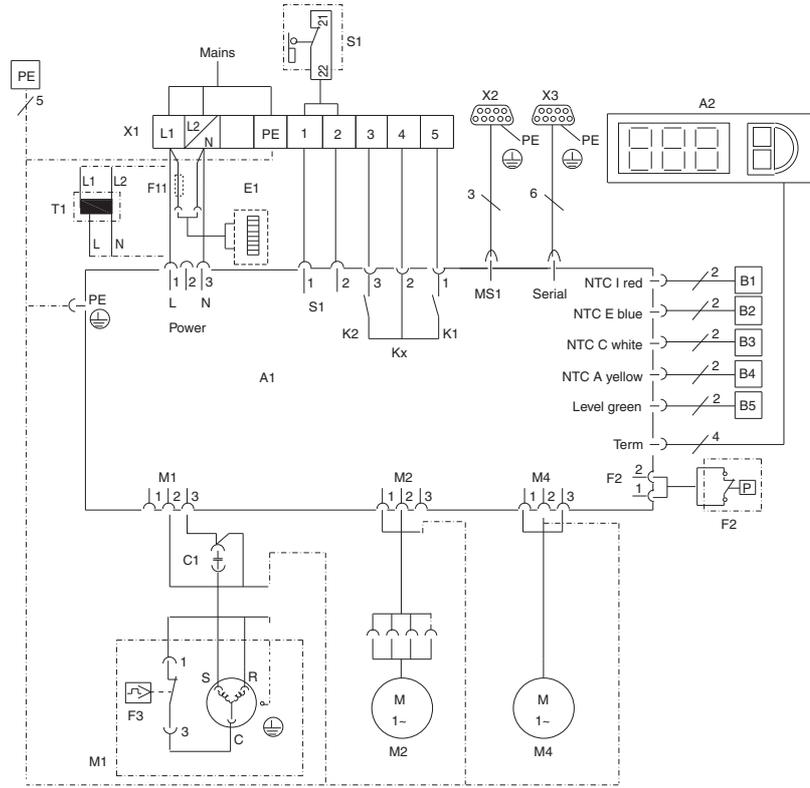


Fig. 114: Electrical wiring plan no. 4

3305.500/.510/.504/.514/.520, 3328.500/.510/.504/.514/.520, 3329.500/.510/.504/.514/.520, 3305.600/.610, 3328.600/.610, 3329.600/.610

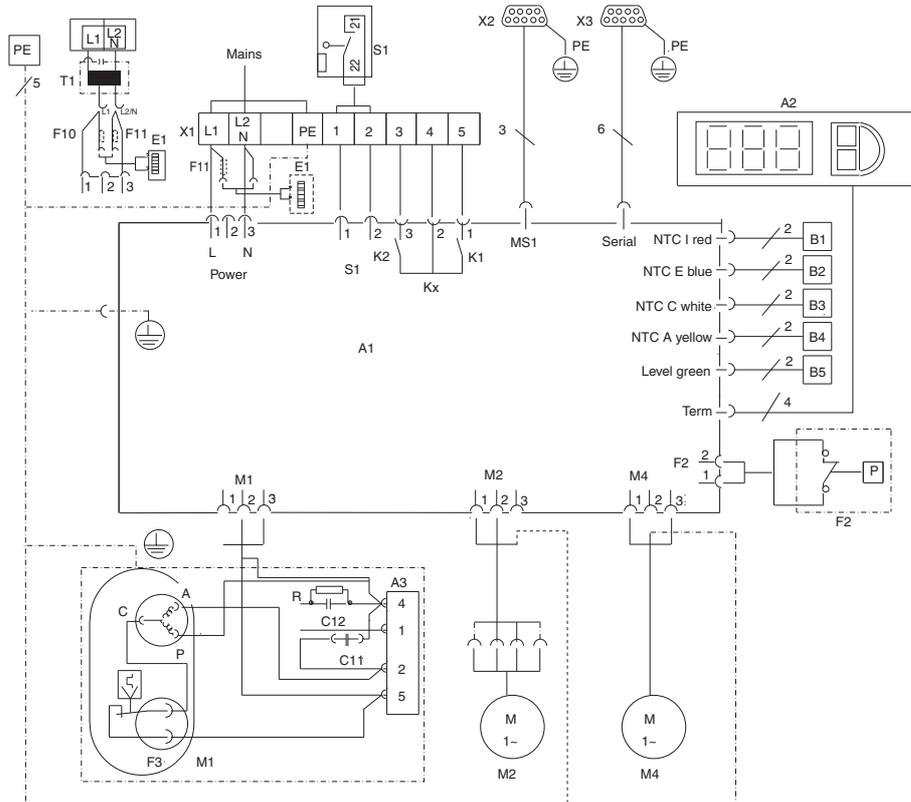


Fig. 115: Electrical wiring plan no. 5

**3304.540, 3304.544, 3305.540, 3305.544, 3328.540/544, 3329.540/544,
3304.640, 3305.640, 3328.640, 3329.640, 3366.540, 3366.640**

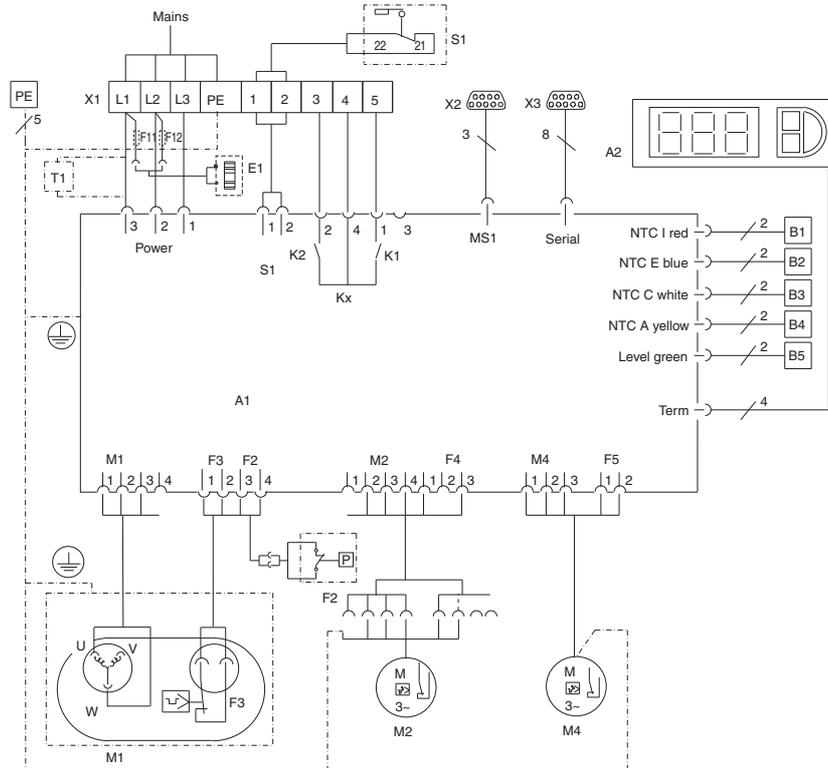


Fig. 116: Electrical wiring plan no. 6

3366.500/510/600/610

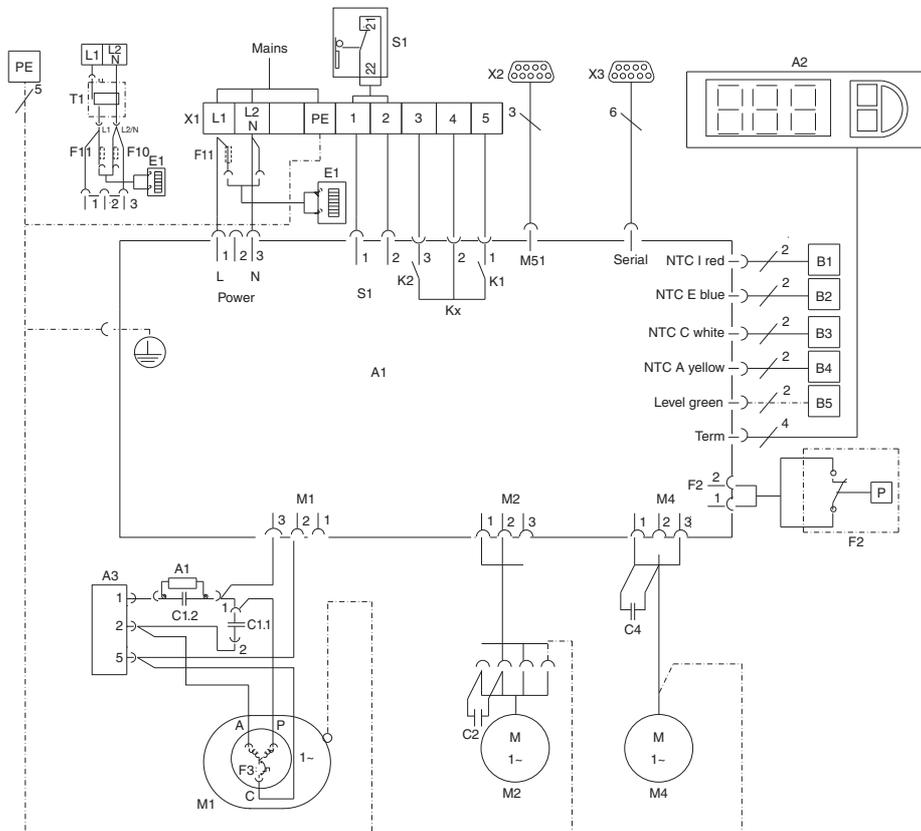


Fig. 117: Electrical wiring plan no. 7

3332.540/.640

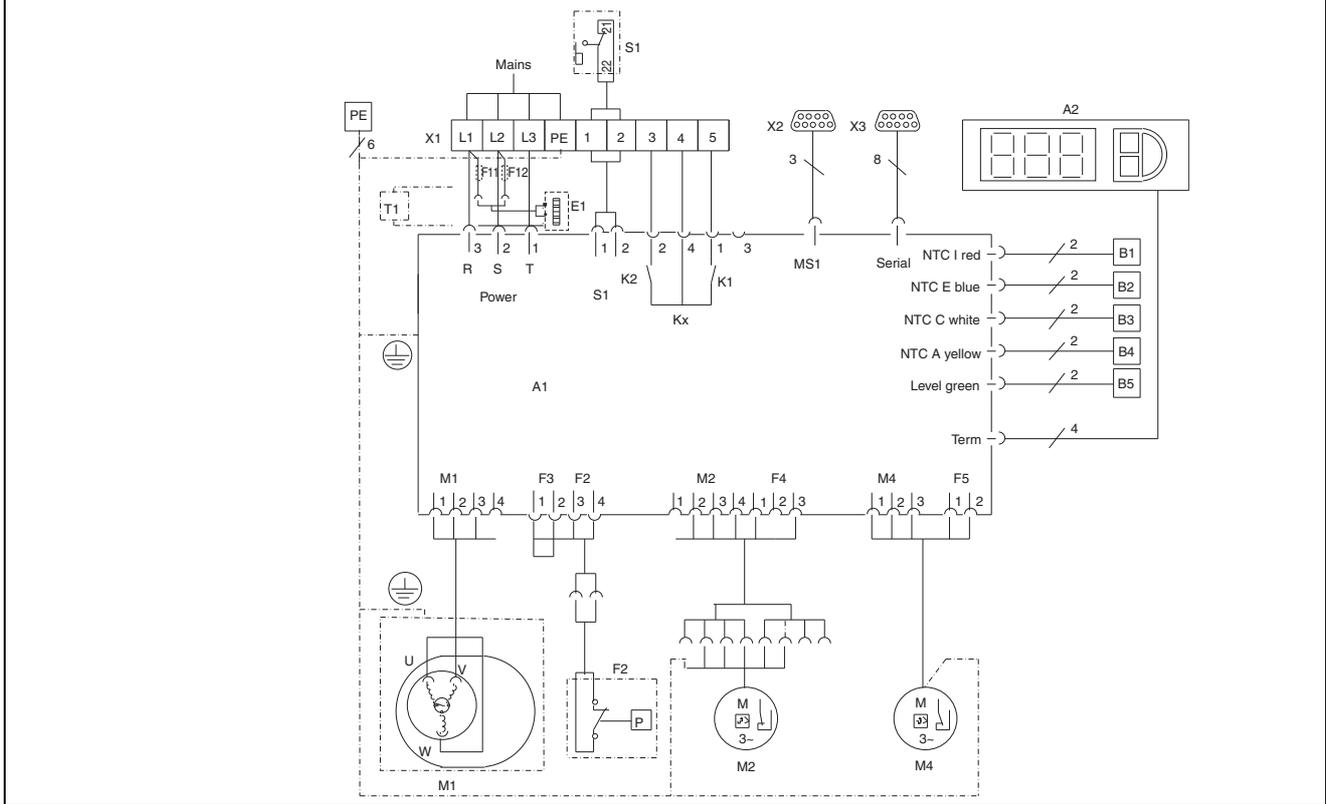


Fig. 118: Electrical wiring plan no. 8

Key

- A1 Power PCB
- A2 Display terminal
- A3 Starter relay and RC element
- B1 Temperature sensor, internal temperature
- B2 Icing hazard temperature sensor
- B3 Condenser temperature sensor
- B4 Ambient temperature sensor
- B5 Condensate warning sensor (optional)
- C1.2 Start-up capacitor
- C1.1, C2, C4 Operating capacitors
- E1 Condensate evaporator
- F2 PSA^H pressure switch (3302.1x0 has bridge instead of pressostat)
- F3 Compressor thermal contact
- F11/F12 Miniature fuses, condensate evaporator
- K1 Relay collective fault 1
- K2 Relay collective fault 2
- L1 LED operational green
- L2 LED alarm red
- M1 Compressor
- M2 Condenser fan
- M4 Evaporator fan
- R1 Potentiometer for setting the temperature
- S1 Door limit switch (without door limit switch: terminal 1, 2 open)
- T1 Transformer (optional)
- X1 Main terminal strip
- X2 Master/slave connection
- X3 Optional interface

Rittal – The System.

Faster – better – everywhere.

- Enclosures
- Power Distribution
- Climate Control
- IT Infrastructure
- Software & Services

3rd edition 08.2017 / ID no. 328 124 / Document no. D-0000-00001248-02.PDF

You can find the contact details of all Rittal companies throughout the world here.



www.rittal.com/contact

RITTAL GmbH & Co. KG
Postfach 1662 · D-35726 Herborn
Phone +49(0)2772 505-0 · Fax +49(0)2772 505-2319
E-mail: info@rittal.de · www.rittal.com



ENCLOSURES

POWER DISTRIBUTION

CLIMATE CONTROL

IT INFRASTRUCTURE

SOFTWARE & SERVICES

FRIEDHELM LOH GROUP