


Rittal – The System.

Faster – better – everywhere.

Montagehalterung für
AE Montageplatten
Mounting attachment for
AE mounting plates
Support de montage pour
plaques de montage AE

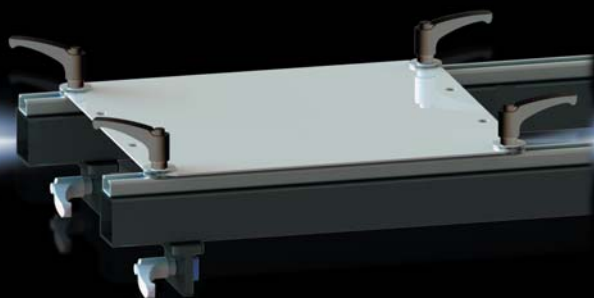

4050.221

Montageanleitung
Assembly instructions
Notice de montage

ENCLOSURES

POWER DISTRIBUTION

CLIMATE CONTROL

IT INFRASTRUCTURE

SOFTWARE & SERVICES

FRIEDHELM LOH GROUP





Inhaltsverzeichnis/Contents/Sommaire

D





 
EN

F

Lieferumfang	Seite 2	Scope of supply	Page 2	Composition de la livraison	Page 3
Aufbau	3 – 4	Assembly	3 – 4	Montage	3 – 4
Sicherheitshinweise	5	Safety instructions	5	Consignes de sécurité	5






Lieferumfang/Scope of supply/Composition de la livraison

	Menge (Stück) Qty (pieces) Quantité (pièces)	Bezeichnung Description Désignation
	4	Abdeckkappe Protective caps Bouchons de protection
	12	Griff Handle Poignée
	2	Halterung Support Support
	16	U-Scheibe Washer Rondelle
	12	Nutenstein Sliding block Coulisseau
MT-AE SET		




Aufbau/Assembly/Montage

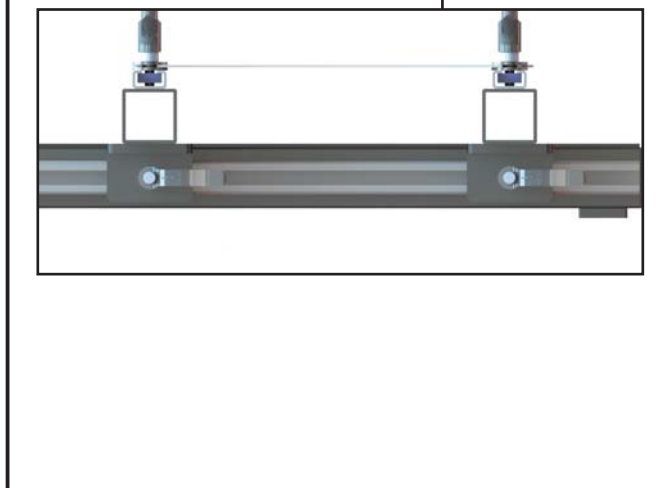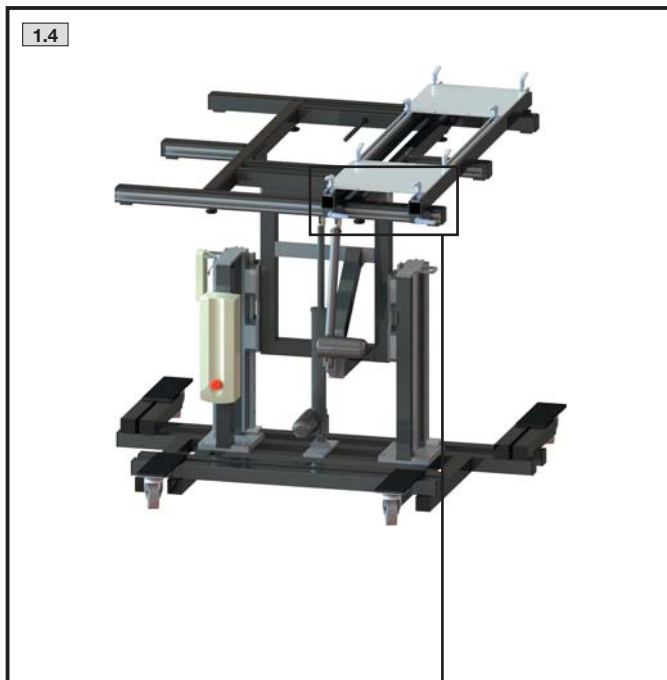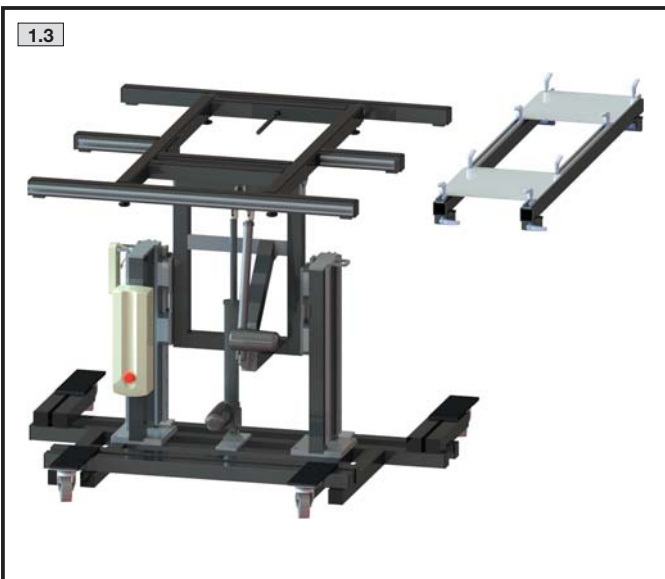



Aufbau/Assembly/Montage

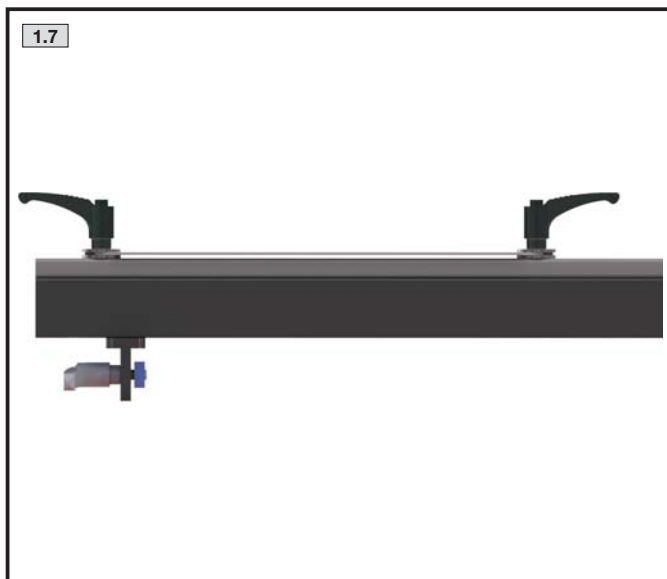



Sicherheitshinweise
Safety instructions
Consignes de sécurité
Veiligheidsvoorschriften
Säkerhetsinstruktioner
Avvertenze di sicurezza
Advertencias de seguridad
Turvallisuusohjeet
Sikkerhedsanvisninger


Faisnéis sábháilteachta
Wskazówki dotyczące
bezpieczeństwa
Bezpečnostní pokyny
Инструкции за безопасност
Меры безопасности
Υποδείξεις ασφαλείας
Instrucțiuni de siguranță
Sigurnosne upute

Biztonsági tudnivalók
Saugos nurodymai
Ohutusteatis
Drošības prasības
Varnostni napotki
Bezpečnostné pokyny
Instrucções de segurança
Struzzjonijiet ta' prekawzjoni



DE	Die Anleitung ist zu lesen
EN	The instructions must be read
FR	La notice doit être lue
NL	Lees de gebruiksaanwijzing
SE	Bruksanvisningen måste läsas
IT	Leggere le istruzioni
ES	Leer el manual de instrucciones
FI	Lue käyttöohjeet
DK	Vejledningene skal læses
IE	Ní mór an treoirleabhar a léamh
PL	Przeczytać instrukcję
CZ	Odkaz na instrukce návodu k použití/brožury
BG	Прочетете ръководството
RU	Прочитать руководство
GR	Απαιτείται το διάβασμα των οδηγιών
RO	A se citi manualul
HR	Pročitajte upute
HU	Az utasítást el kell olvasni
LT	Skaityti instrukciją
EE	Lugeda kasutusjuhendit
LV	Izlasiet instrukciju
SI	Preberite navodila
SK	Prečítajte si návod
PT	Ler as instruções
MT	Il-manwal għandu jinqara

Notizen/Notes

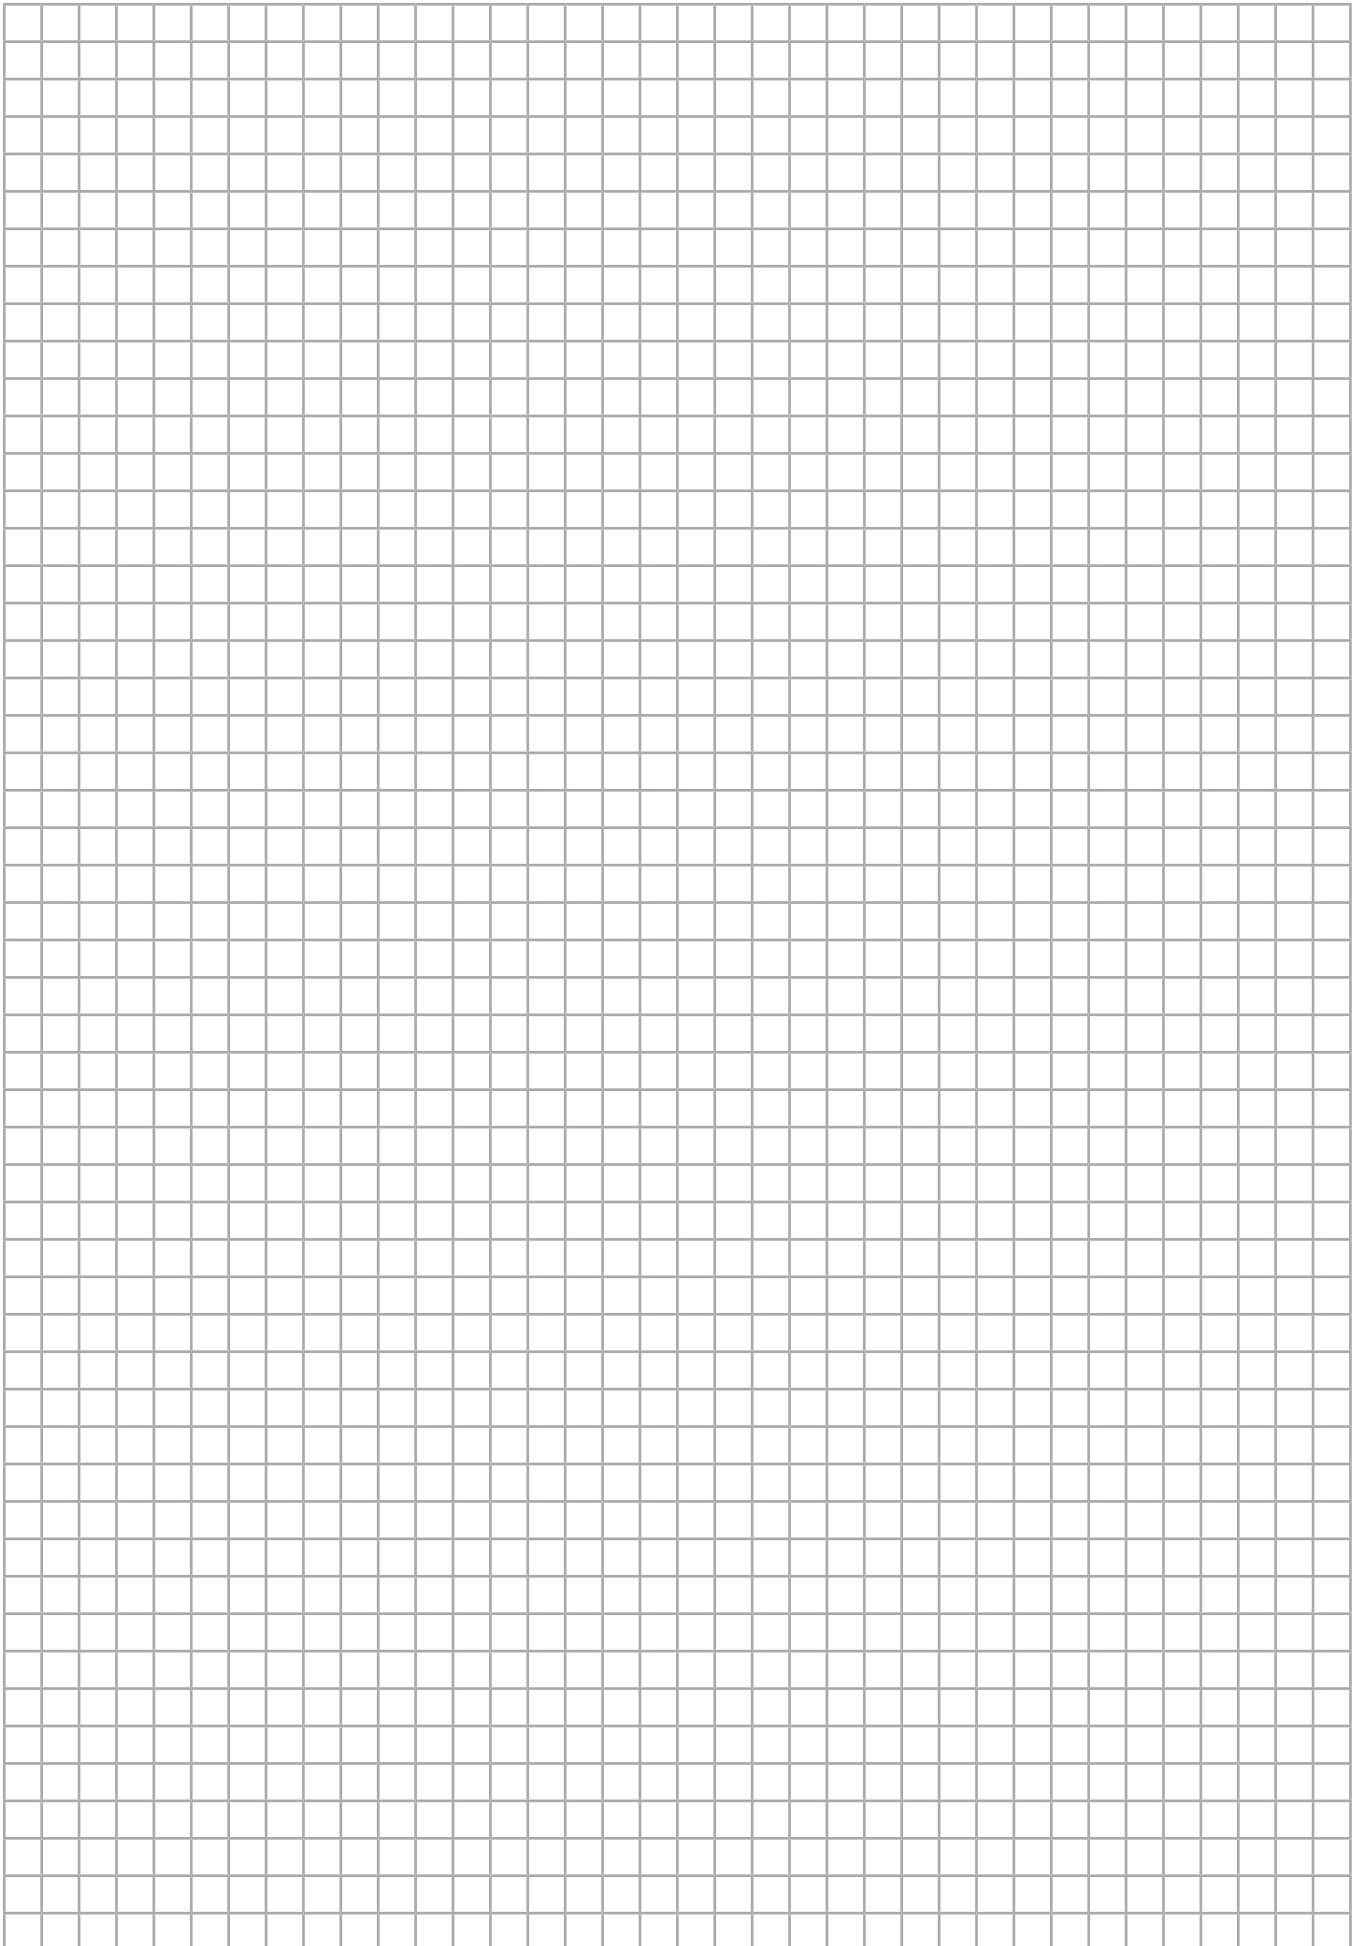

Rittal – The System.

Faster – better – everywhere.

- Enclosures
- Power Distribution
- Climate Control
- IT Infrastructure
- Software & Services

1st edition/07.2016

You can find the contact details of all Rittal companies throughout the world here.



www.rittal.com/contact

ENCLOSURES

POWER DISTRIBUTION

CLIMATE CONTROL

IT INFRASTRUCTURE

SOFTWARE & SERVICES

FRIEDHELM LOH GROUP

